



By Sorelle - A Division of C & T International, Inc.

 
46 Whelan Road, East Rutherford, N.J.07073 U.S.A.

Tel, 201-531-1919 Fax, 201- 531-1920

Website: www.sorellefurniture.com

TOPPER


Assembly Instruction

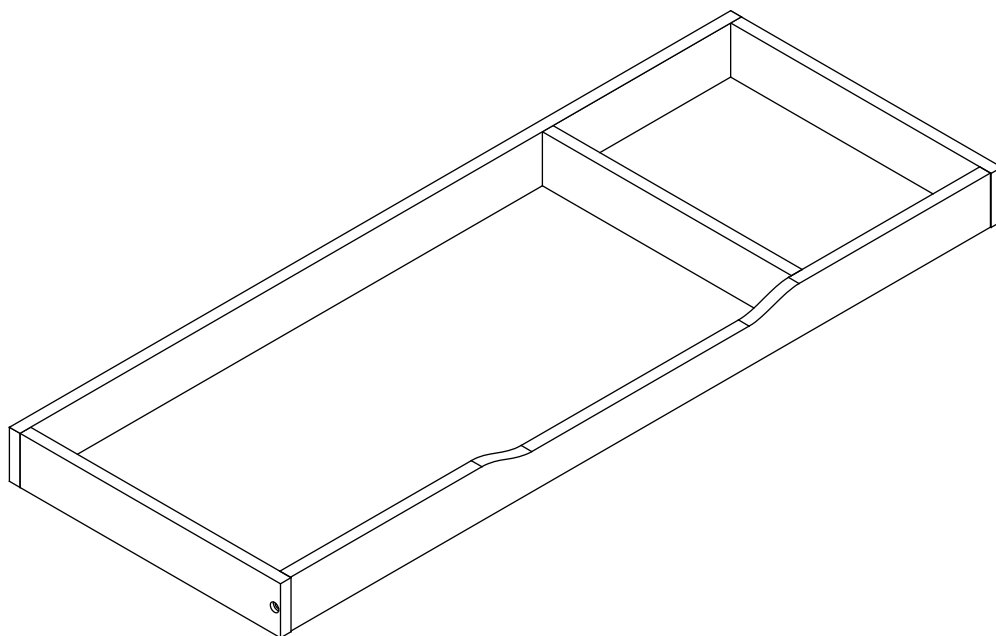


Important Information:

Before assembly, **read** these instructions. Make sure all preassembled parts are tight. Store this instruction manual in envelope for future reference.

 
Assembly parts and hardware

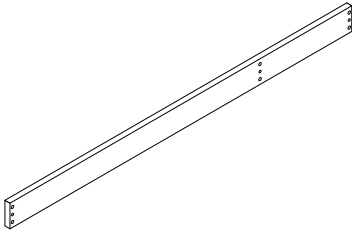

 
(A) Back Cross Bar (1pc)

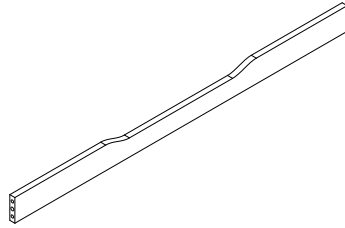

 
(B) Front Cross Bar (1pc)

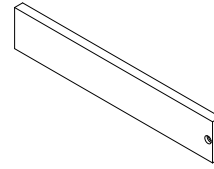

 (C) Lift Side Cross Bar (1pc)

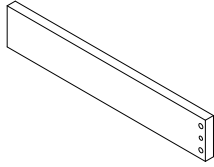


 (D) Right Side Cross Bar (1pc)

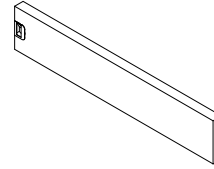


(E) Center Rail (1pc)

 Assembly Hardware Set



 
(a) 1/4" x 32 mm Bolts (5 pcs)




(b) Washer (5 pcs)



 
(c) LockWasher (5 pcs)



 (g) metal bracket (2 pcs)



 (d) Wooden dowel (12 pcs)



(e) Allen Key (1 pc)



(f) Screw 15mm (4 pcs)

Assembly Changing Top

1 Step 1

Use 2 pcs Bolt (a) and 2 pcs Washer (b) & 2 pcs lock washer (c) with 4 pcs wooden dowel to attach the Front Cross Bar(B) to the Lift Side Cross Bar(C) and Right Side Cross Bar (D). As shown in Figure 1.


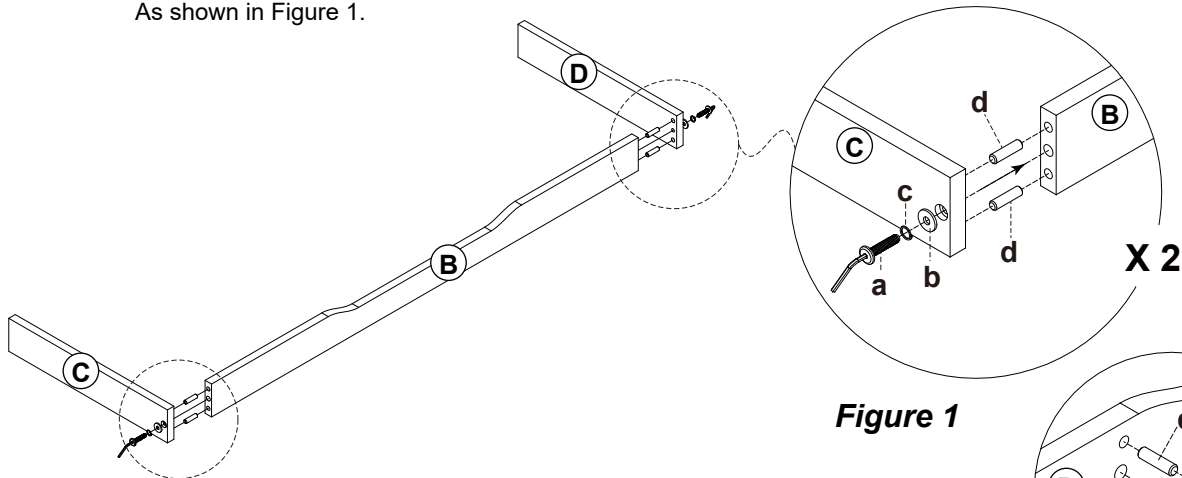 


Figure 1

Step 2

 Use 3 pcs Bolt (a) and 3 pcs Washer (b) & 3 pcs lock washer (c) with 6 pcs wooden dowel to attach the Back Cross Bar(B) to the Lift Side Cross Bar(C) and Right Side Cross Bar (D). As shown in Figure 2.

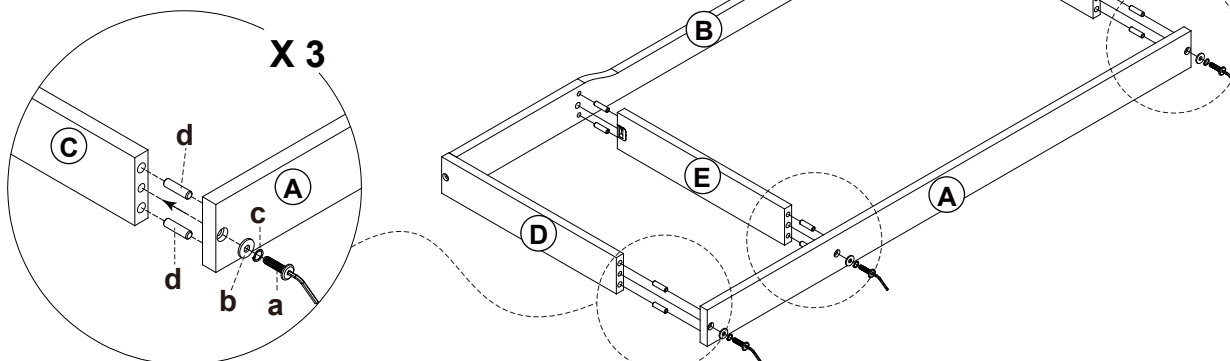

Assembly Changing Top

Step 3


 
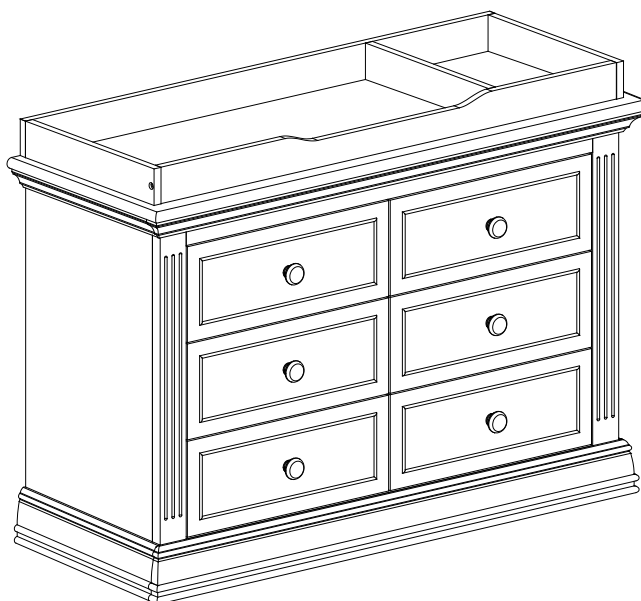 


Figure 3

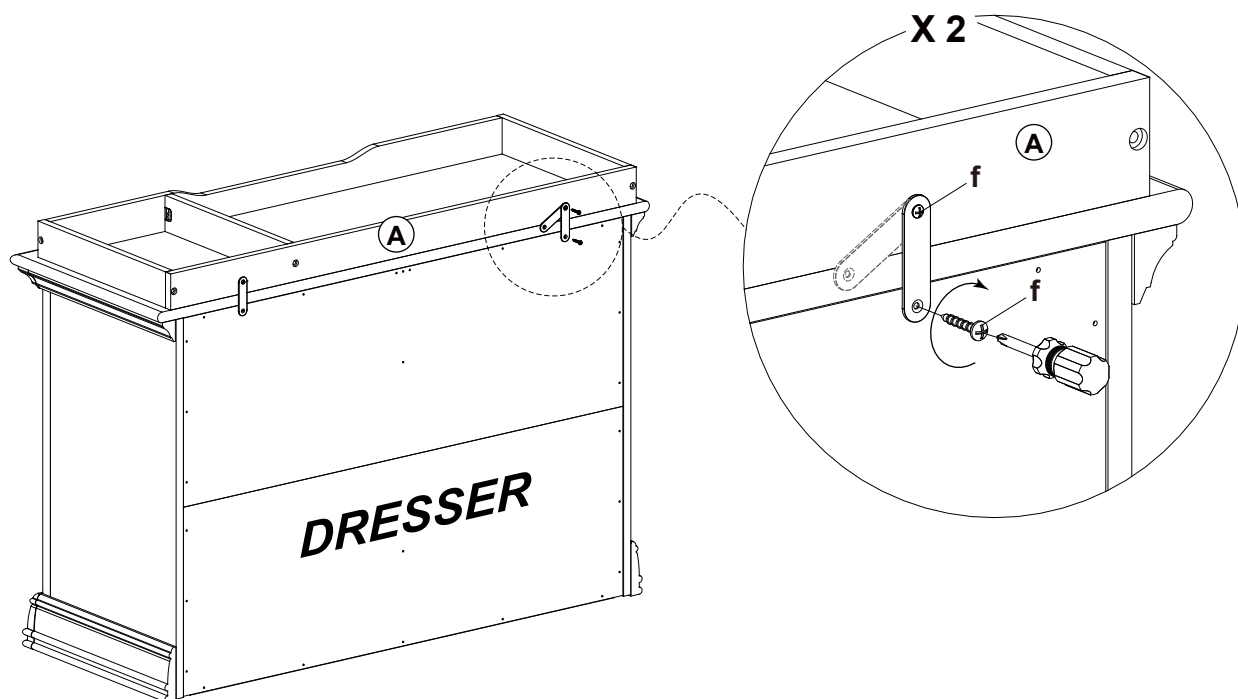 

⊕ Tool required

Thank you for selecting a C&T product. To ensure the best performance from your Double Dresser, please read these instructions carefully. Carefully remove and lay out all parts. Familiarize yourself with all diagrams. Hardware enclosed in the sack should correspond with hardware list. Be sure all are included and quantities are correct.