



IMPORTED BY C&T International, Inc. / IMPORTE PAR de C&T International, Inc.  
105 Stonehurst Ct Northvale, NJ 07647 U.S.A. Tel, 201- 531-1919 Fax, 201- 531-1920

**CANADA ADDRESS:**

3453, DU PRESIDENT KENNEDY LAC MEGANTIC, QUEBEC, CANADA G6B 2Y4

Website: [www.sorellefurniture.com](http://www.sorellefurniture.com) / Site Internet : [www.sorellefurniture.com](http://www.sorellefurniture.com)

# Princeton Elite Double Dresser


## Assembly Instruction




### Important Information:

Read all instructions **BEFORE** assembling crib.  
KEEP INSTRUCTIONS FOR FUTURE USE.


## Assembly Parts

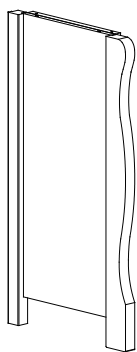


(A) Left Side Panel (x1)

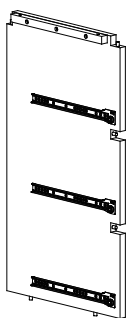


(B) Middle Panel (x1)

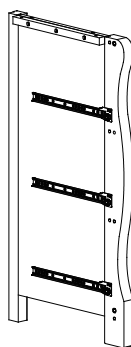


(C) Right End (x1)




(D) Front - Top Rail(x1)

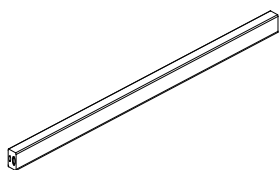

(E1) Front- Middle Upper Rail (x1)

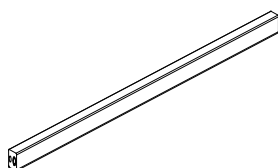


(E2) Front- Middle lower Rail (x1)

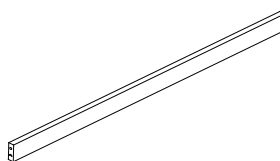


(F) Front- Bottom Rail (x1)




( G ) Rear - Top Rail (x1)

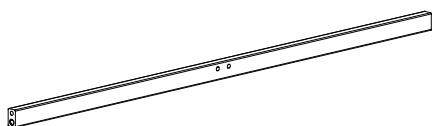


( H ) Rear - Bottom Rail (x1)

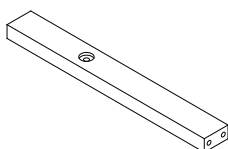


( I ) Support rail ( x 1 )




( J ) Top Panel (x1)

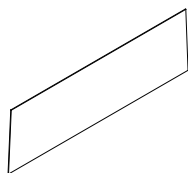


( K ) Back Panel(x2)

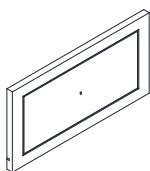

( R ) Drawer Front (x6)




( L ) support legs (x1)

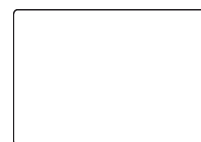


(R4) Drawer Bottom (x6)




(R1) Drawer Left (x6)

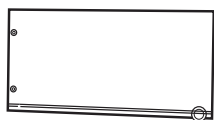

(R2) Drawer Right (x6)

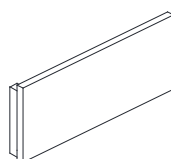


(R3) Drawer Back (x6)




(R5) Drawer support (x6)

**Assembly Parts**


**Hardware list**




(a) M6 x 45mm Allen bolt (10 pcs)



(c). **Metal Connector B** ( 6 pcs)



(b) M6 x 35mm Allen bolt (5 pcs)




(d) M6 x 28mm Allen bolt (7 pcs)



( e ) M4 x 19mm Allen bolt (6pcs)



(f ) 8 x 30 mm Wood Dowels (29 pcs)



(g) 25mm Wood Screw (48 pcs)



( n ) 6 x 30 mm Wood Dowels (24 pcs)



( h ) Knob (x6)




( o) 15mm Phillips Screw (26 pcs)



( j ) **Metal Connector A** (6 pcs)



( p ) 12mm Phillips Screw (18 pcs)

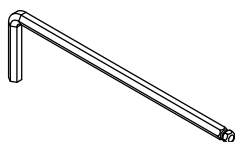

(k) Allen Key (1 pc)



( i ) Wall Strap Kit (1 pc)

## Double Dresser Assembly

- ① Assembly the support rail (I) and support legs (L).  
 Assembly the support rail (I) and front-bottom rail (F) and rear-bottom rail (H), by using 4 wood dowels (f) and 1 Bolt (d) & 1 Bolt (b). as Figure 1.

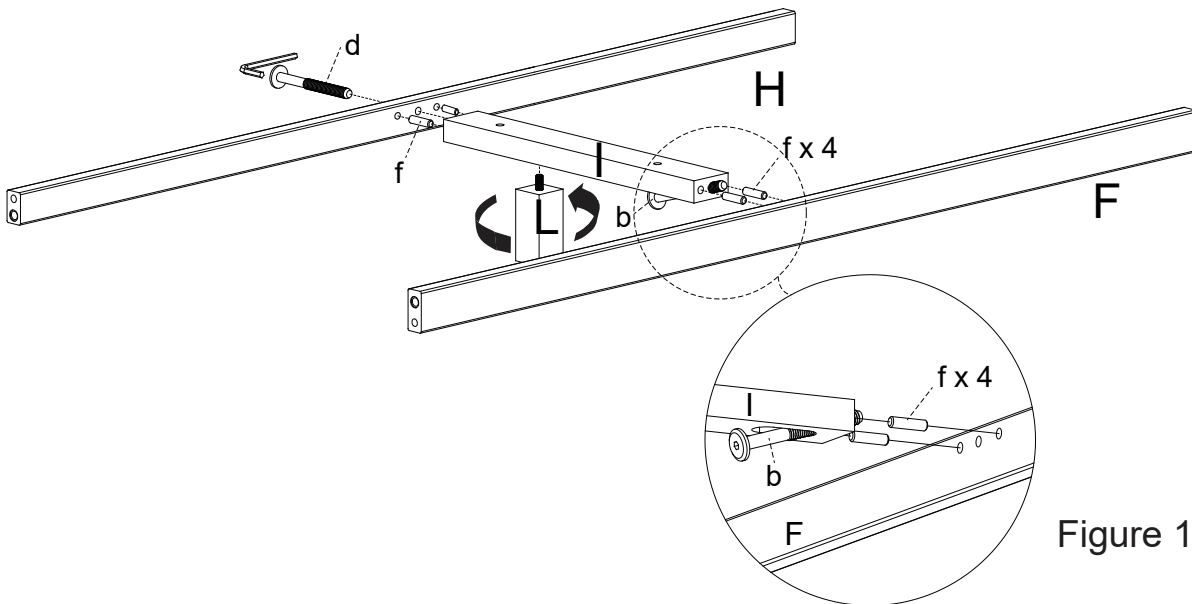


Figure 1

- ② Attach middle panel (B) to support rail (I), by using 2 wood dowels (f) as Figure 2.

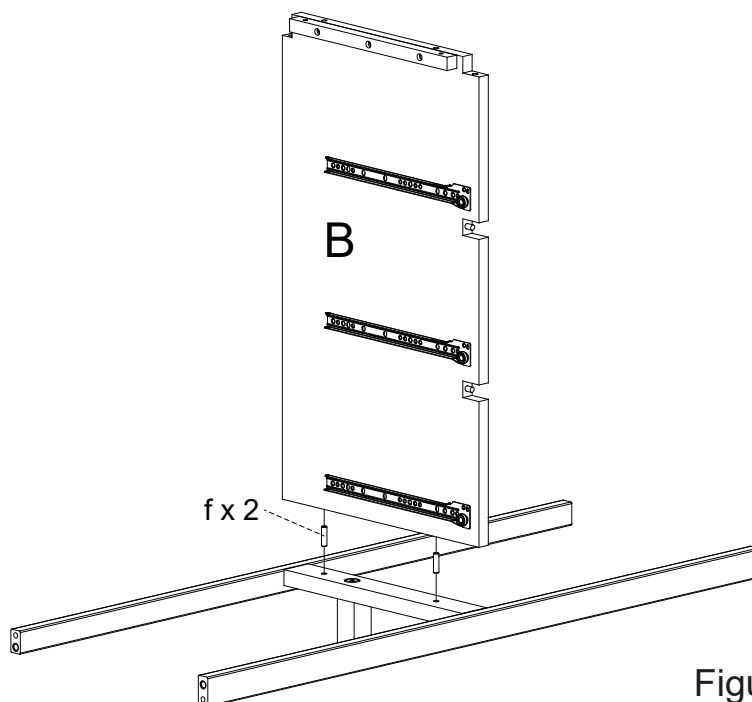


Figure 2

# Double Dresser Assembly

- 3** Attach Front Top rail (D) & Front Middle Upper rail (E1) & Front Middle lower rail (E2) & Rear Top rail (G) to Middle Panel (B) , By using 4 wood dowels (f) as Figure 3.

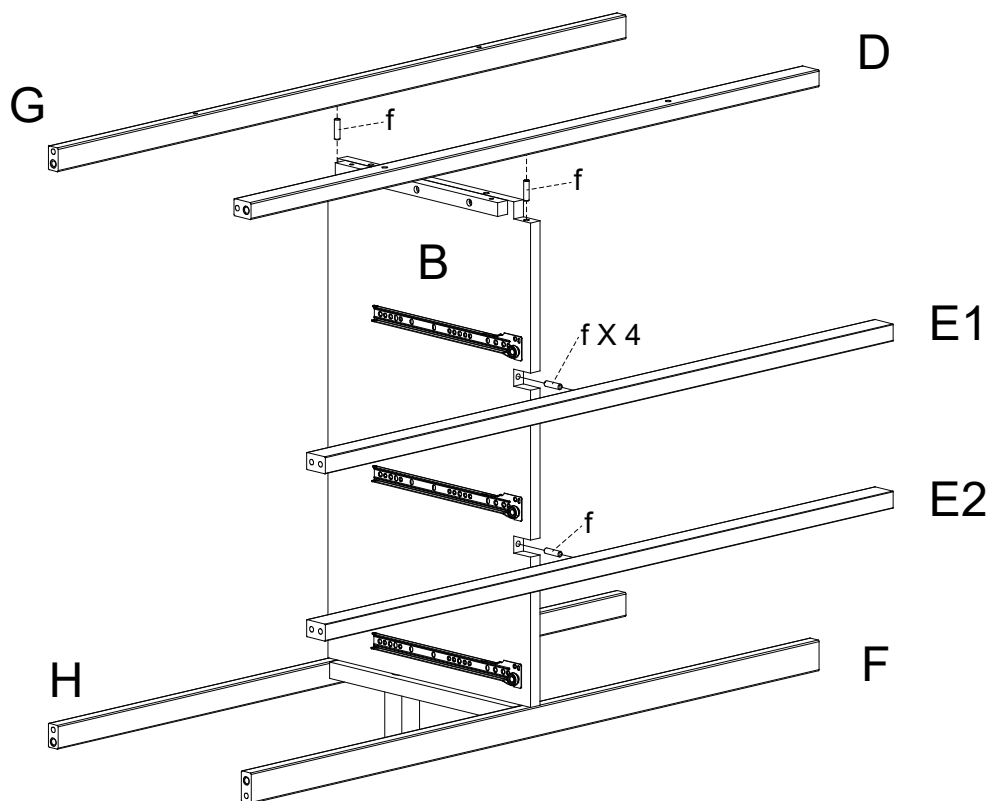


Figure 3

- 4** Attach left side panel (A) and right side panel (C) to Front Top rail (D) & Front Middle rail (E) & Front bottom rail (F) & Rear Top rail (G) and Rear bottom Rail (H) by using 10 Bolts ( a ) & 14 wood dowels(f) . as Figure 4.

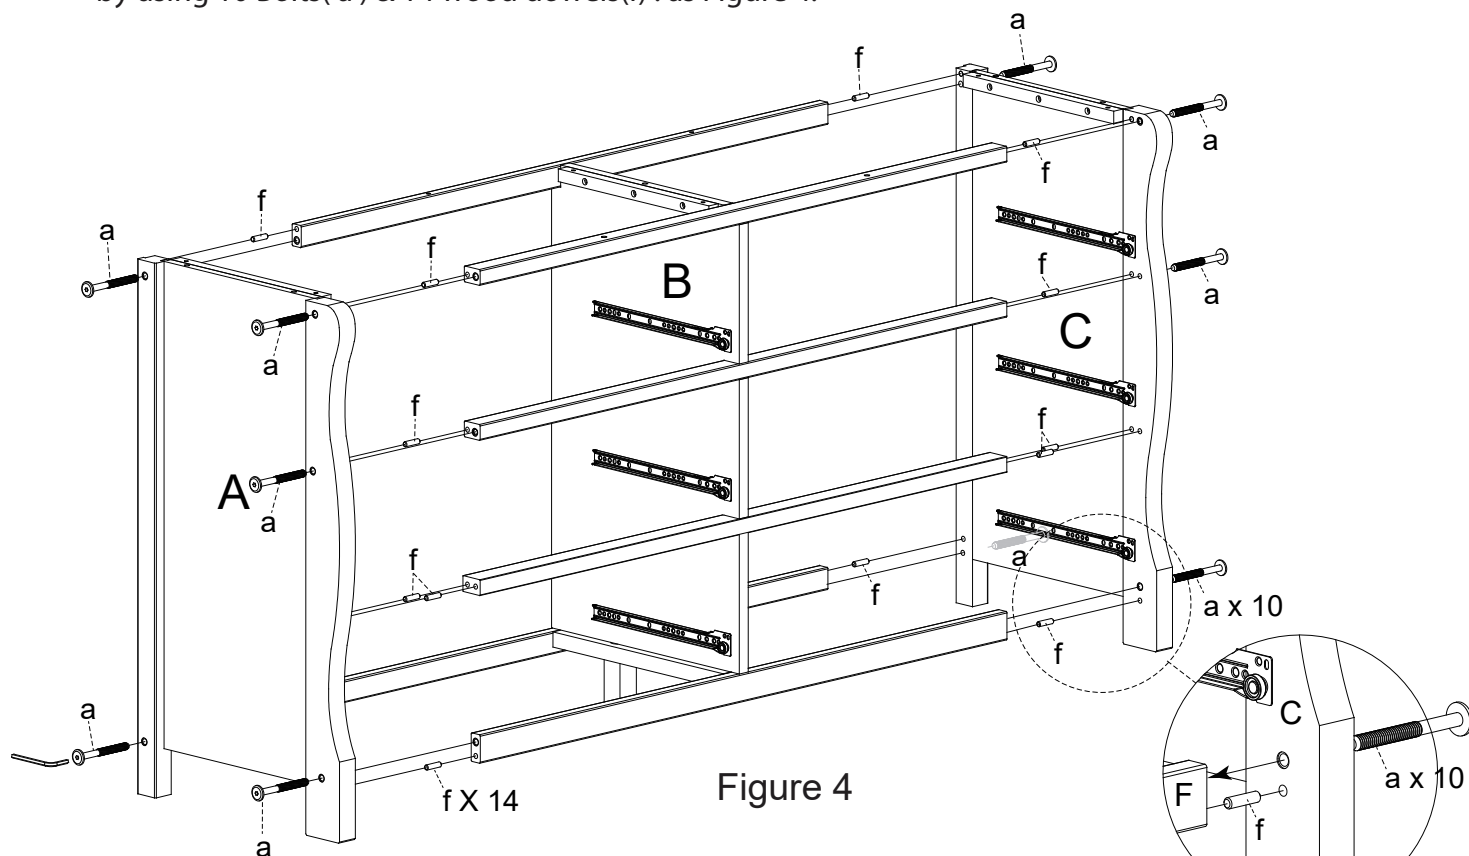


Figure 4

## Double Dresser Assembly

- 5 Attach Top Panel (J) to Side panel by using 5 wood dowels (f) and 4 Bolts (b) and 6 Bolts (d) as Figure 3.


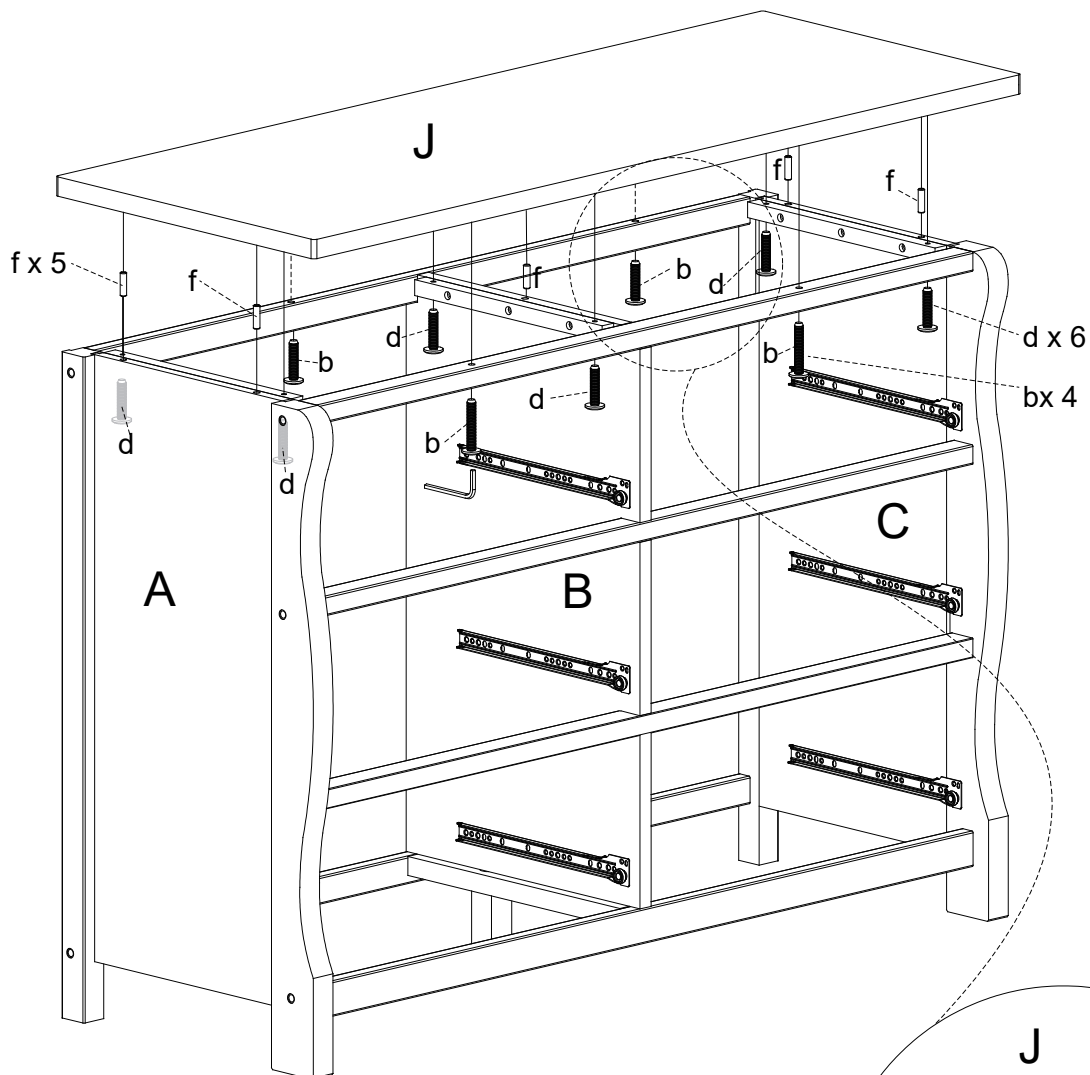



Figure 5

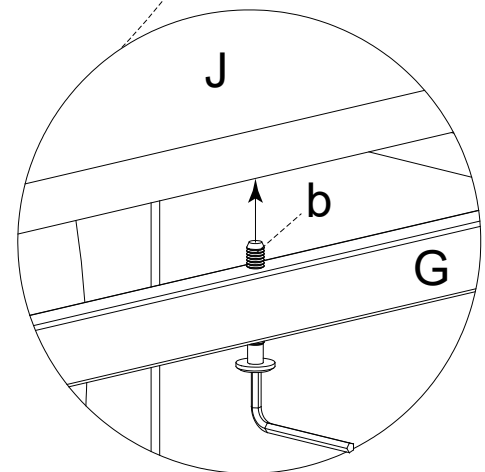

## Drawer Assembly


1. Working on a padded flat surface, attach Drawer Sides (R1&R2) to Drawer Back (R3) with Philips Head Screw. *Figure 1*

①

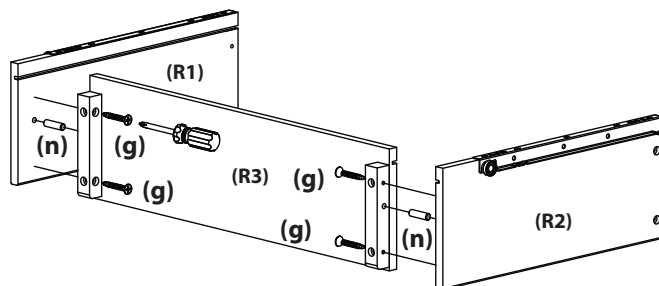


2. Slide Drawer Bottom (R4) into drawer assembly. *Figure 2.*

②

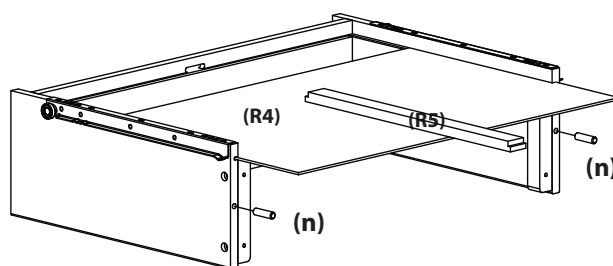

3. Secure both sides of Drawer Front (R) to drawer assembly with four (4) Screws (g). *Figure 3.*


③

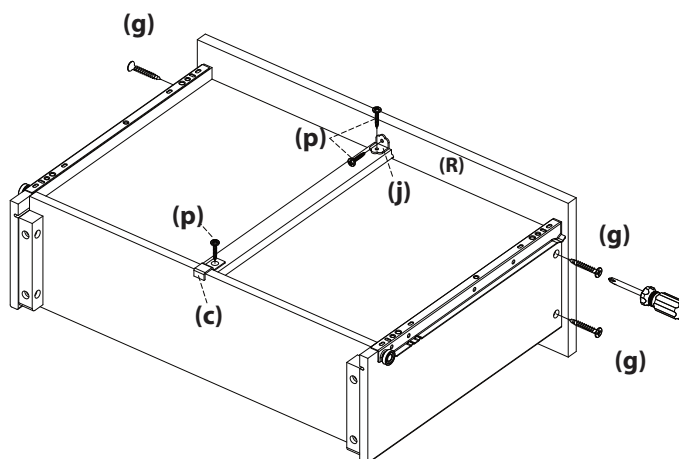

Check all screws for tightness.

4. Using Drawer Knob Screw ( f ), install one (1) Knob ( j ) on Drawer. *Figure 4.*

④

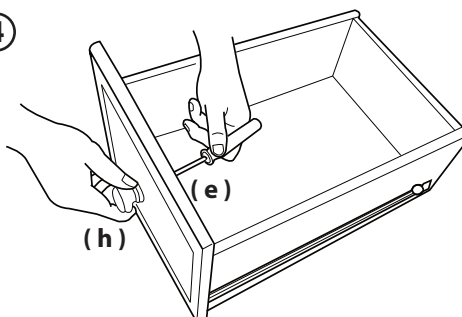

**Repeat for all drawers.  
Set drawers aside for later use.**

# Double Dresser Assembly

- ⑦ Assembly the drawers as Figure 6.

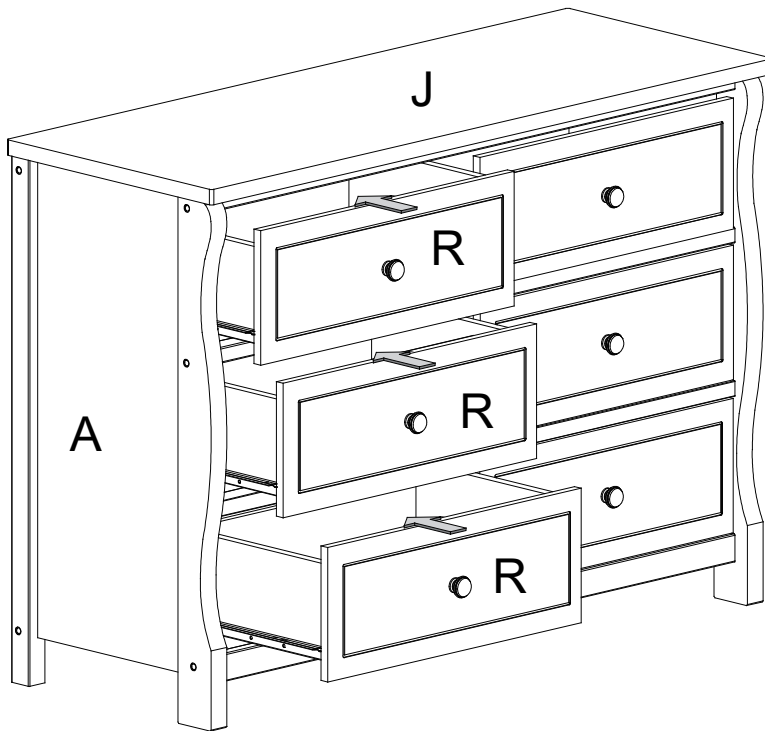


Figure 6

- ⑧ Use 26 pcs Wood Screws (o) to attach the Back Panel (K) to the dresser As Figure 7..

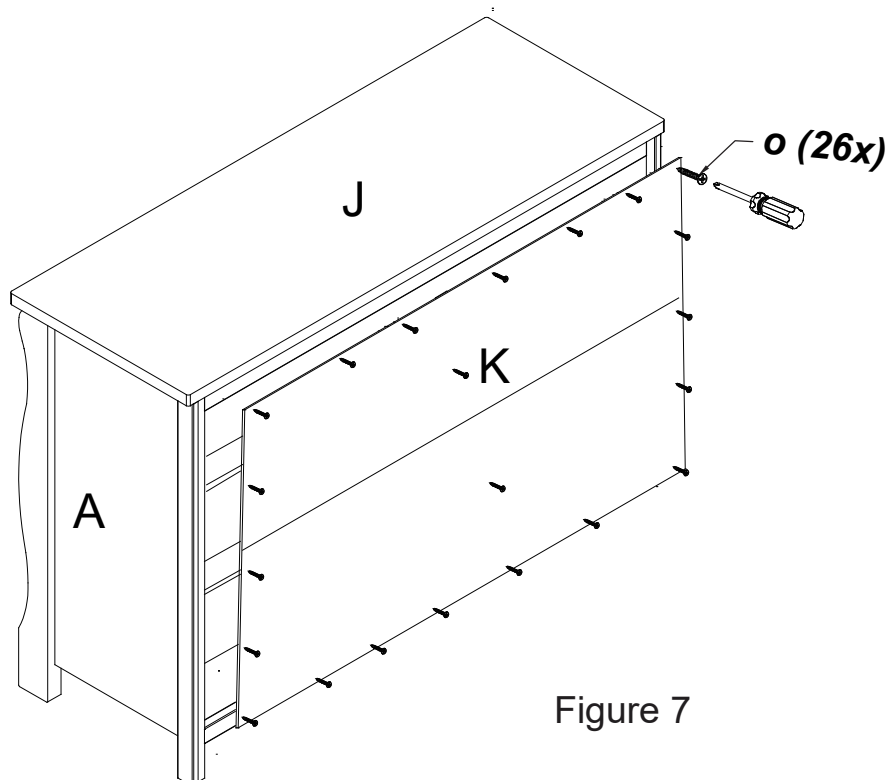


Figure 7