




IMPORTED BY C&T International, Inc. / IMPORTE` PAR de C&T International, Inc.
105 Stonehurst Ct Northvale, NJ 07647 U.S.A. Tel, 201- 531-1919 Fax, 201- 531-1920

CANADA ADDRESS:

3453, DU PRESIDENT KENNEDY LAC MEGANTIC, QUEBEC, CANADA G6B 2Y4

Website: www.sorellefurniture.com / Site Internet : www.sorellefurniture.com


21000 TWIN BED Assembly Instruction

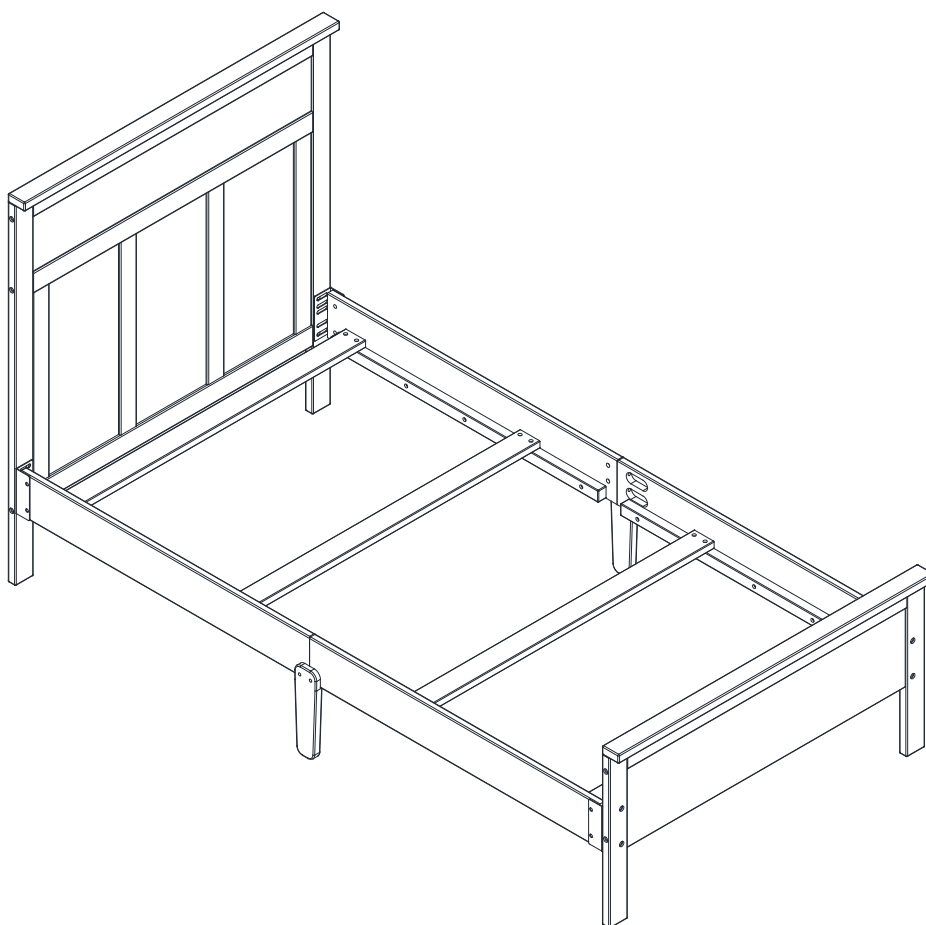

Important Information:

Read all instructions **BEFORE** assembling.
KEEP INSTRUCTIONS FOR FUTURE USE.

Parts List

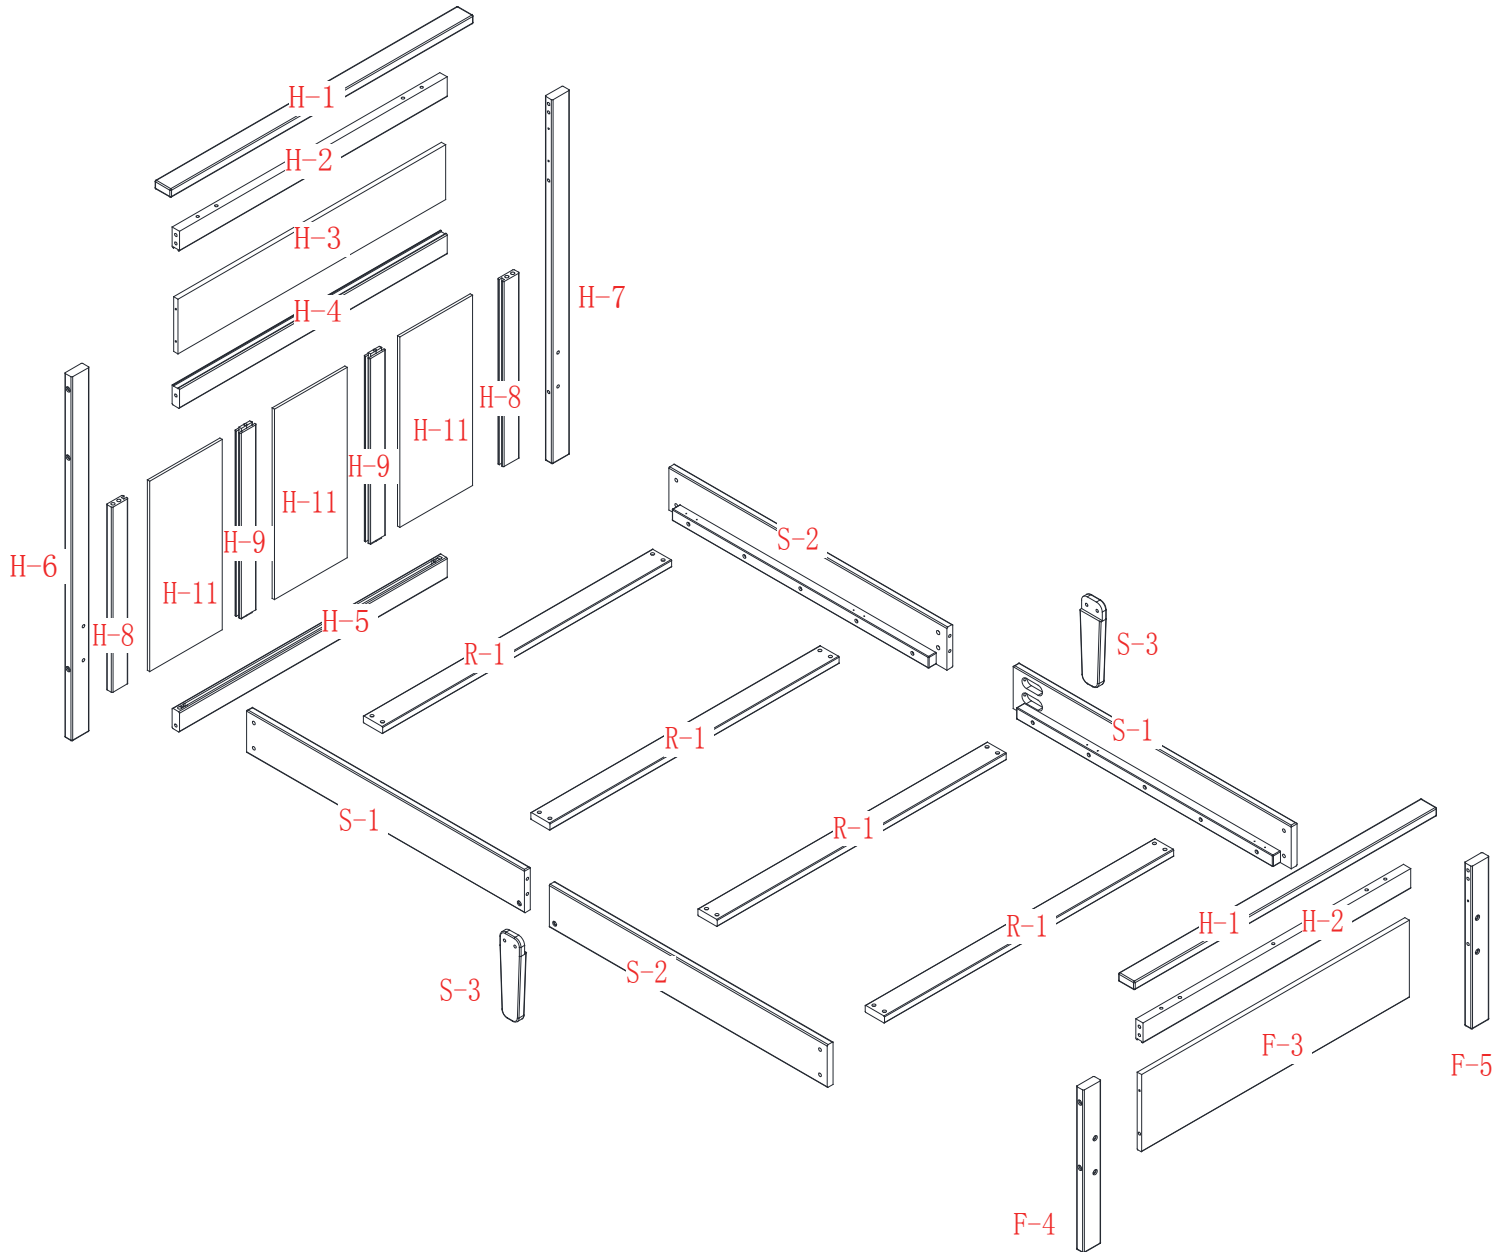


Hardware List




(a) M6*17mm Bolt (x16)




(b) M6*25mm Bolt (x4)



(c) M6*65mm Bolt (x6)



(d) M6*75mm Bolt (x4)



(e) M6*90mm Bolt (x10)



(f) Barrel Nut M6*17 (x12)



(g) Barrel Nut M6*10 (x2)



(h) Joint Connector Nut (x16)



(i) Screw (x16)



(j) Half moon washer (x4)



(k) 8*30 Wooden Dowel (x8)



(l) 10*50 Wooden Dowel (x8)



(m) 4*30 Metal Pin (x6)




(n) 3 in 1 Bolt (x4)




(o) 3 in 1 Nut (x4)



(r) Allen Key (x2)



(s) Flat Washer x 8




(p) Metal Plate B (x2)




(q) Metal Plate A (x2)


Step 1

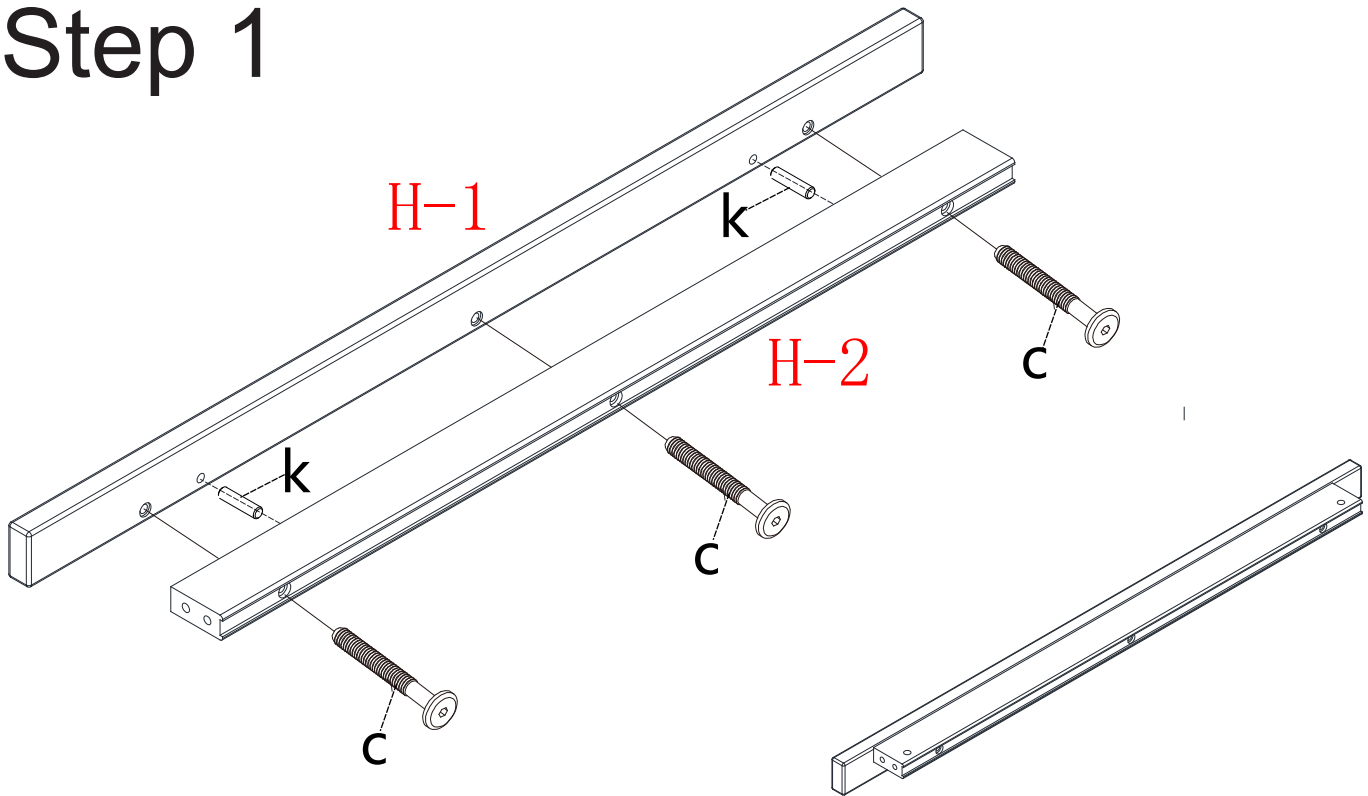


Step 2

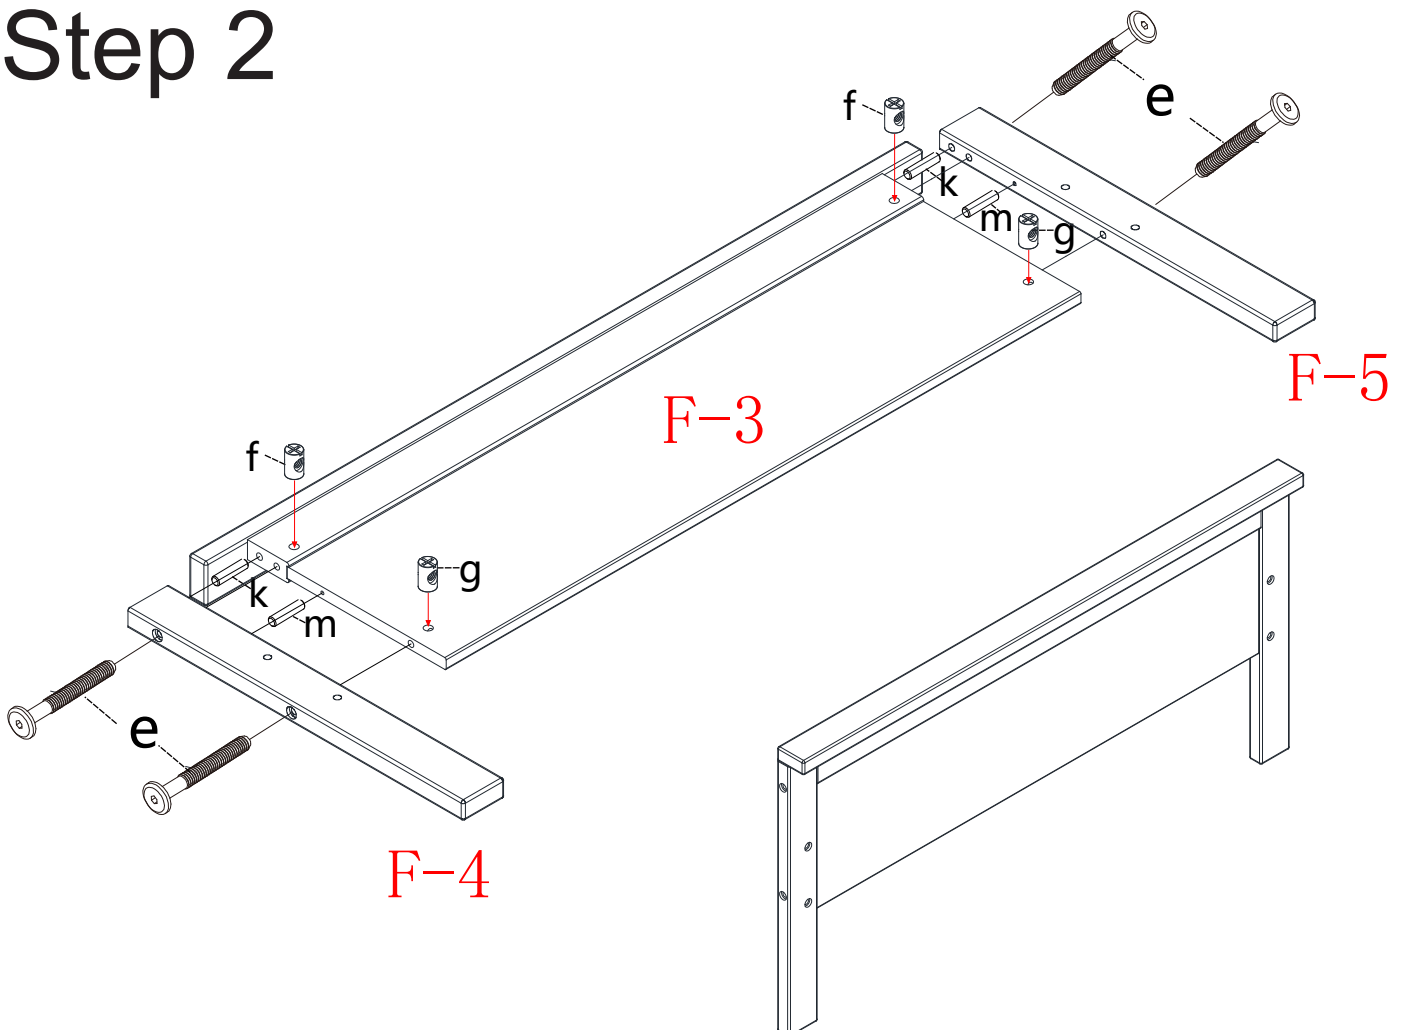



Step 3

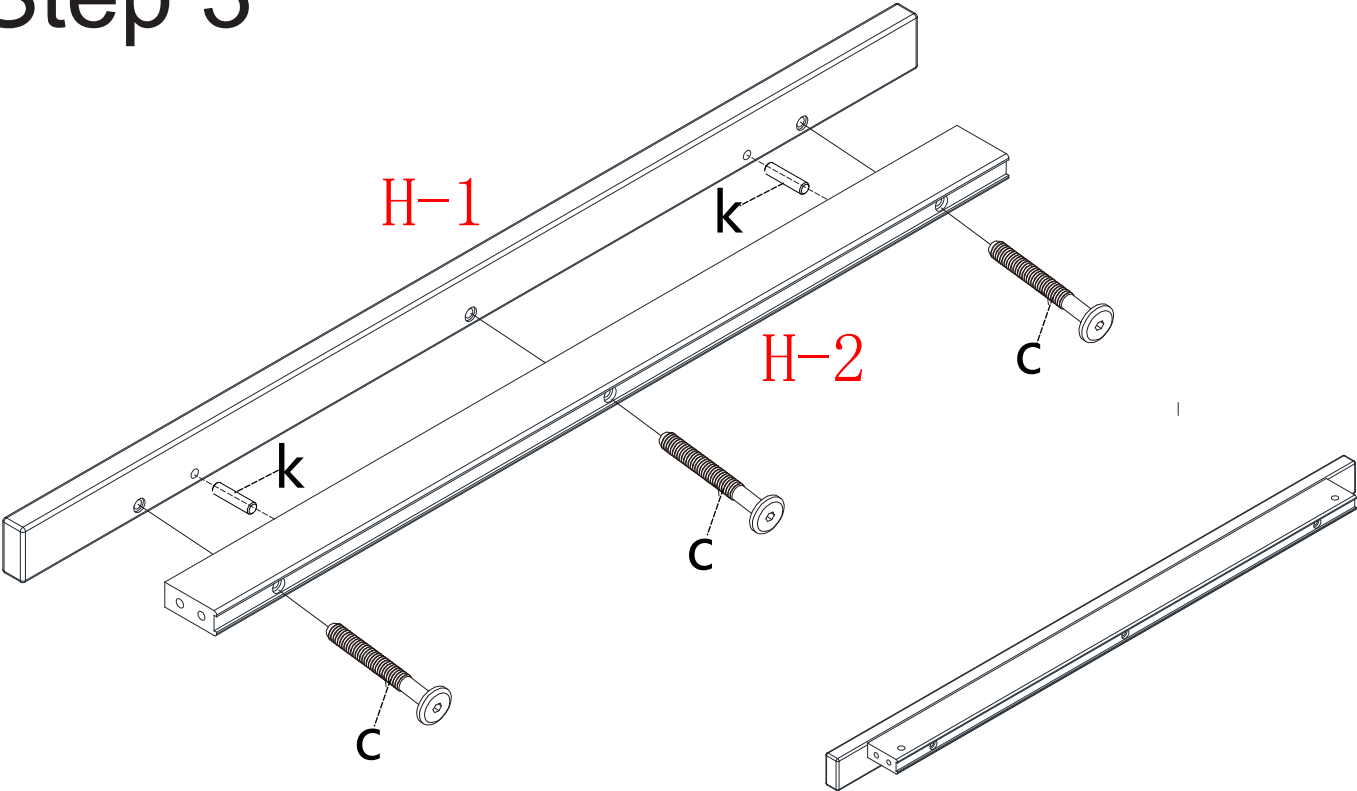

Step 4

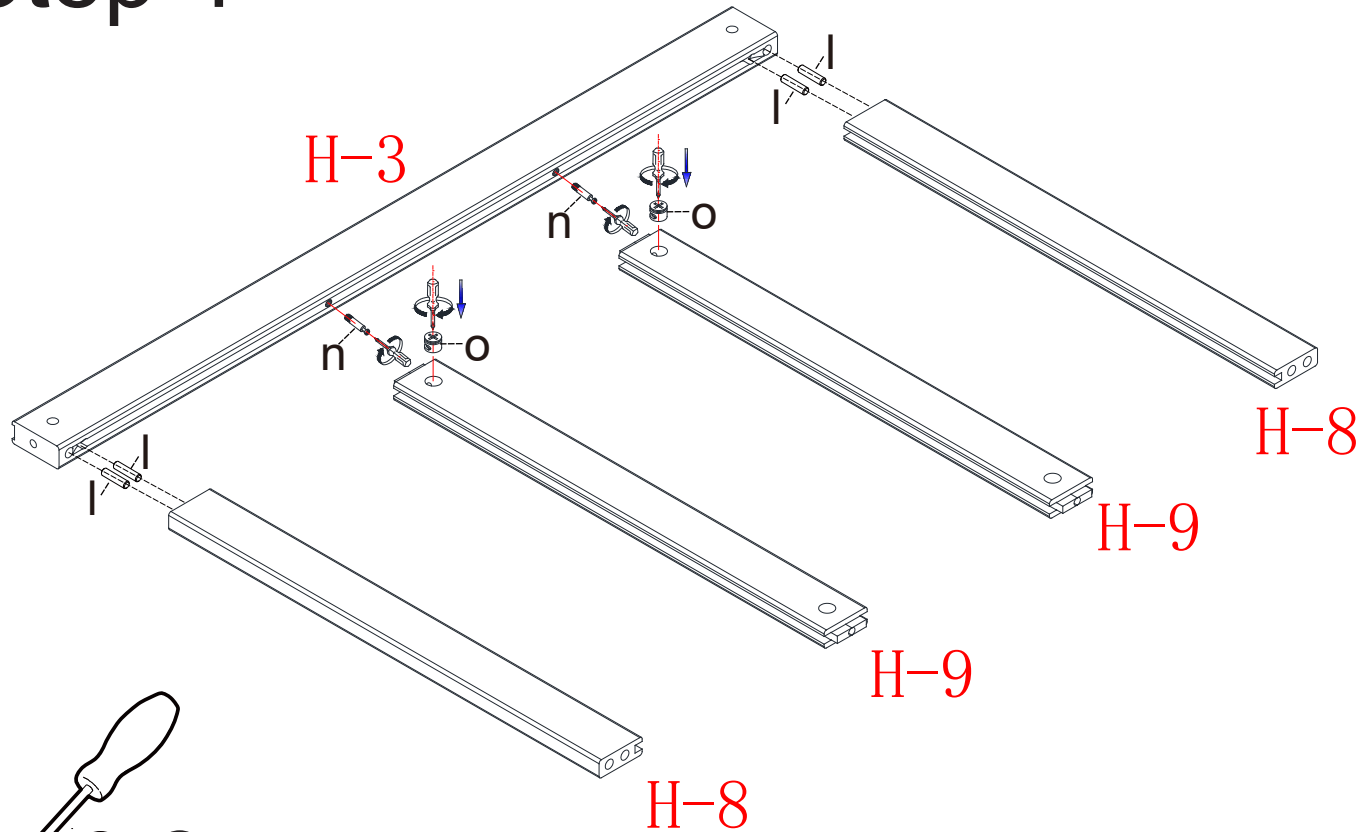


Step 5

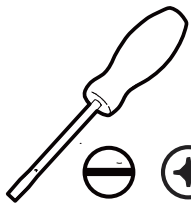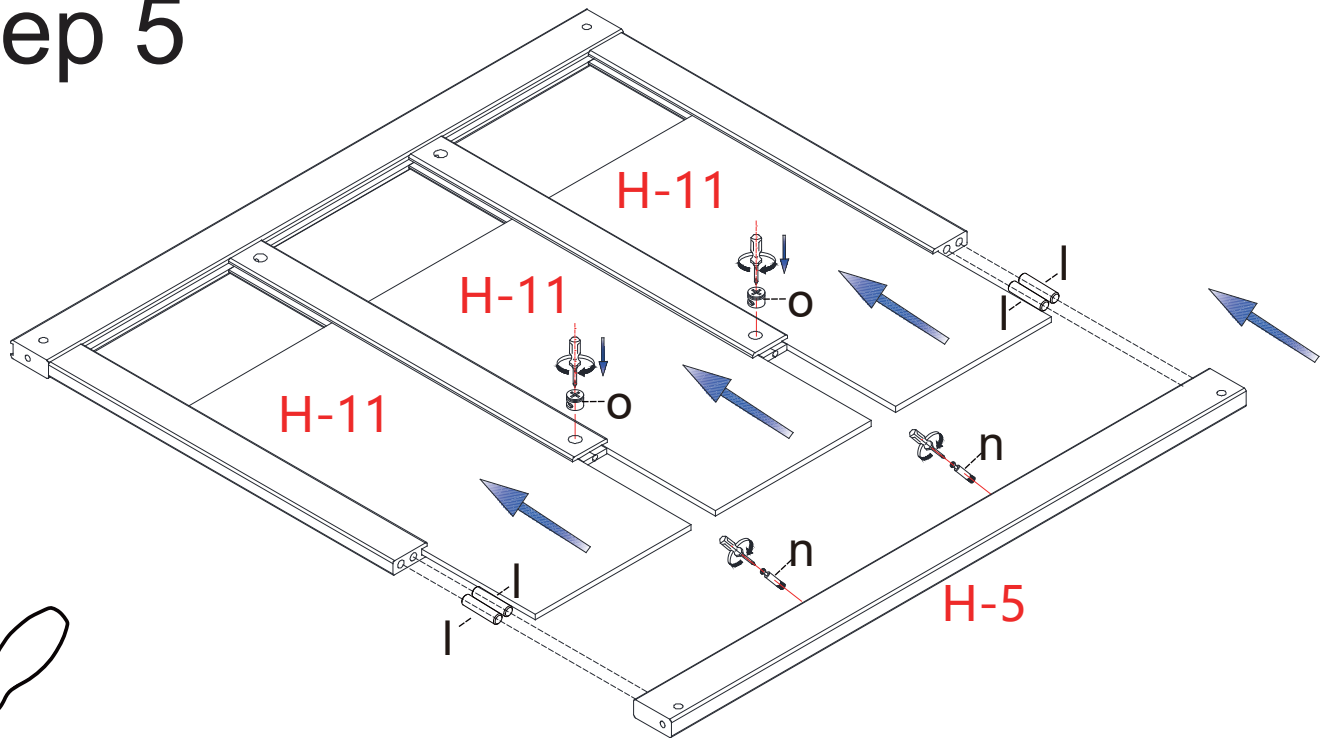


Tool required


Step 6

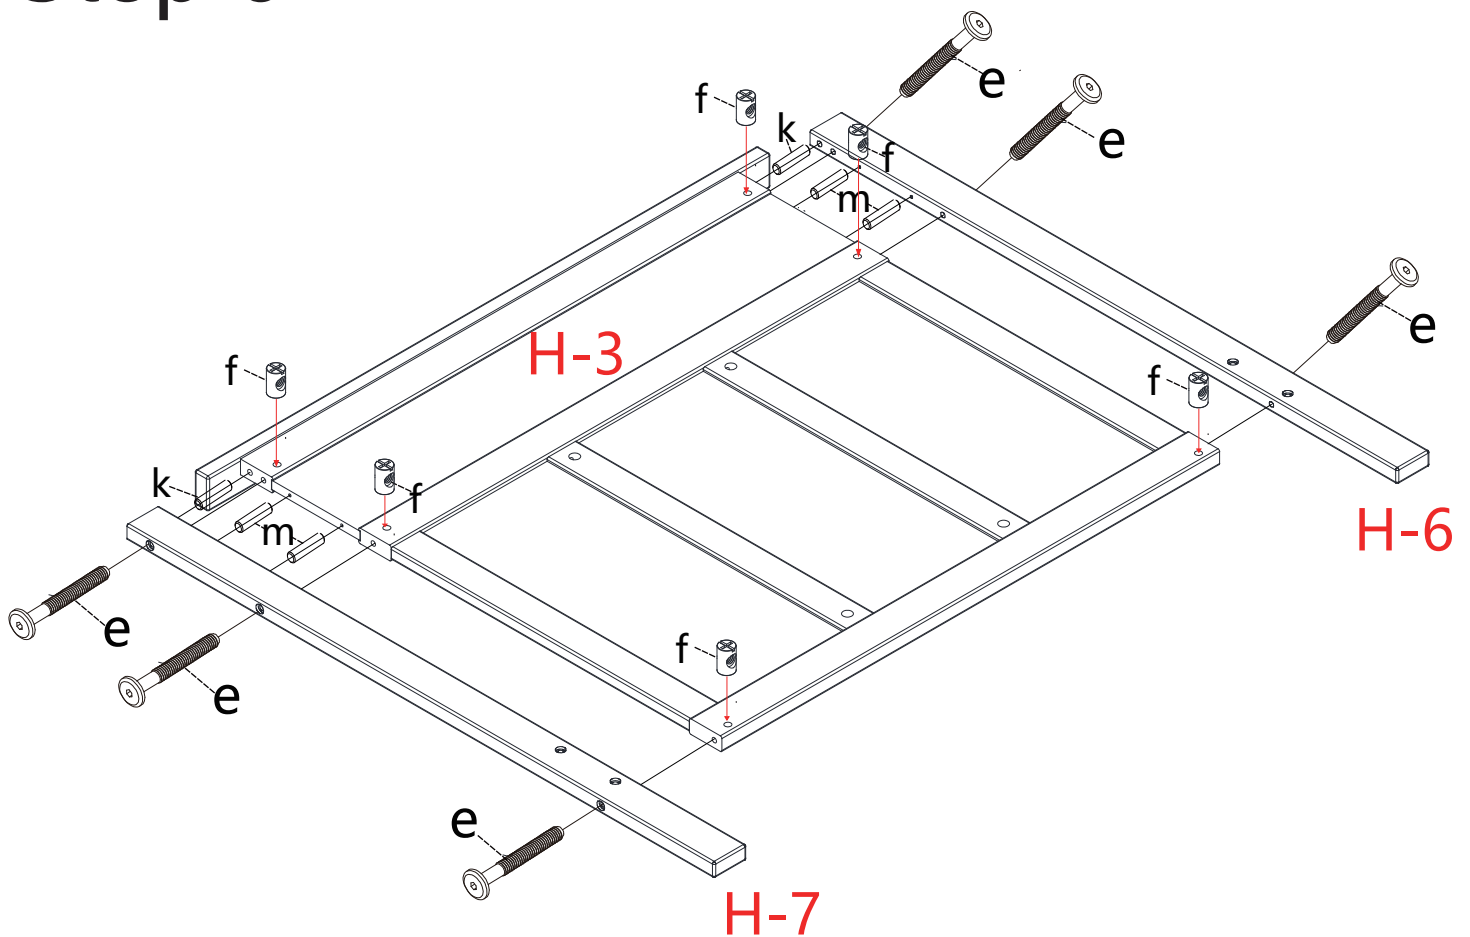


Step 7

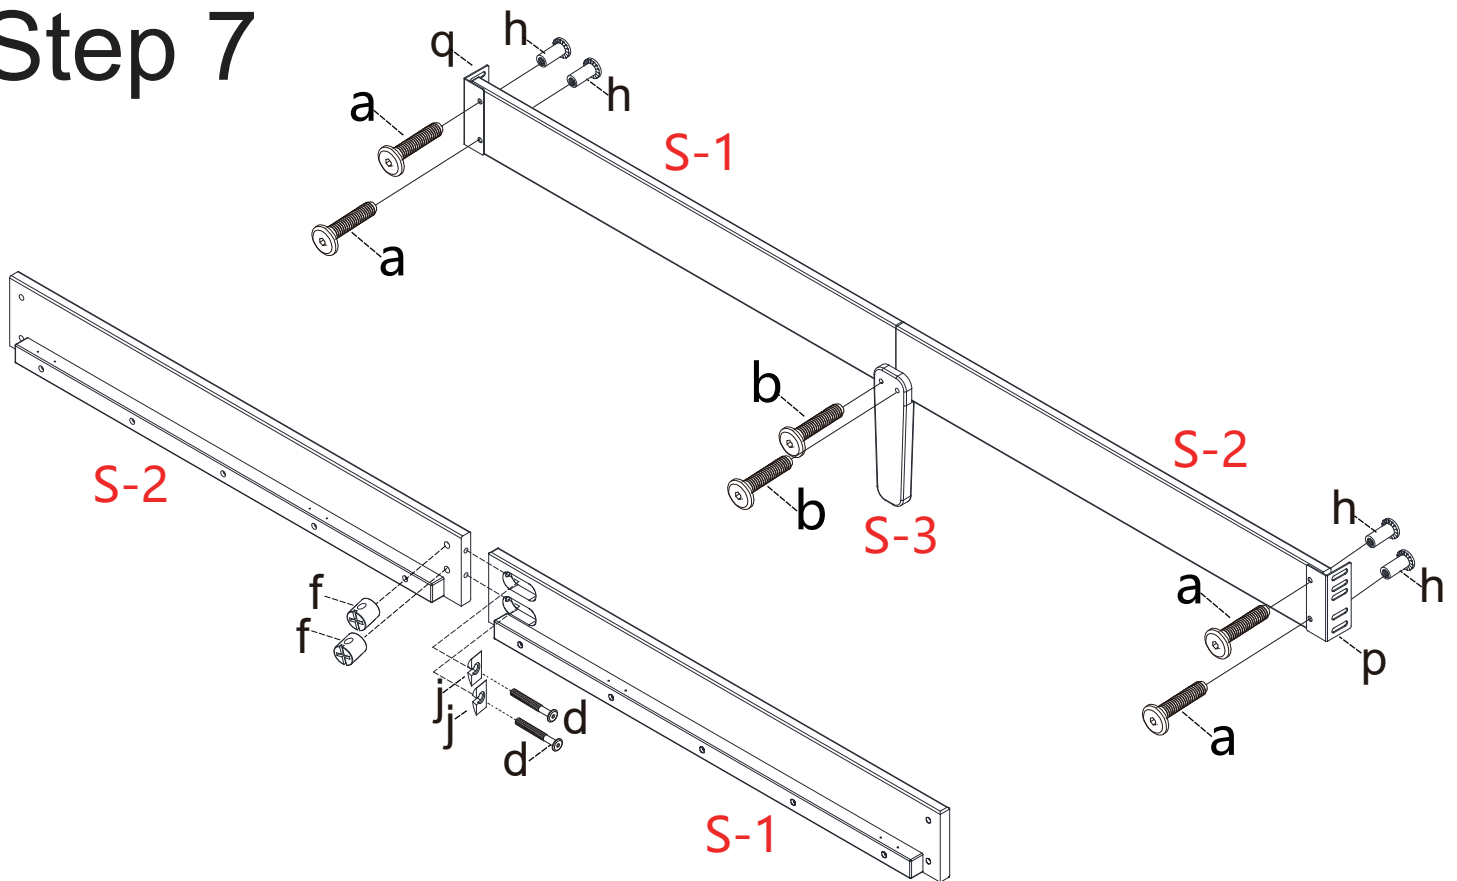

Step 8

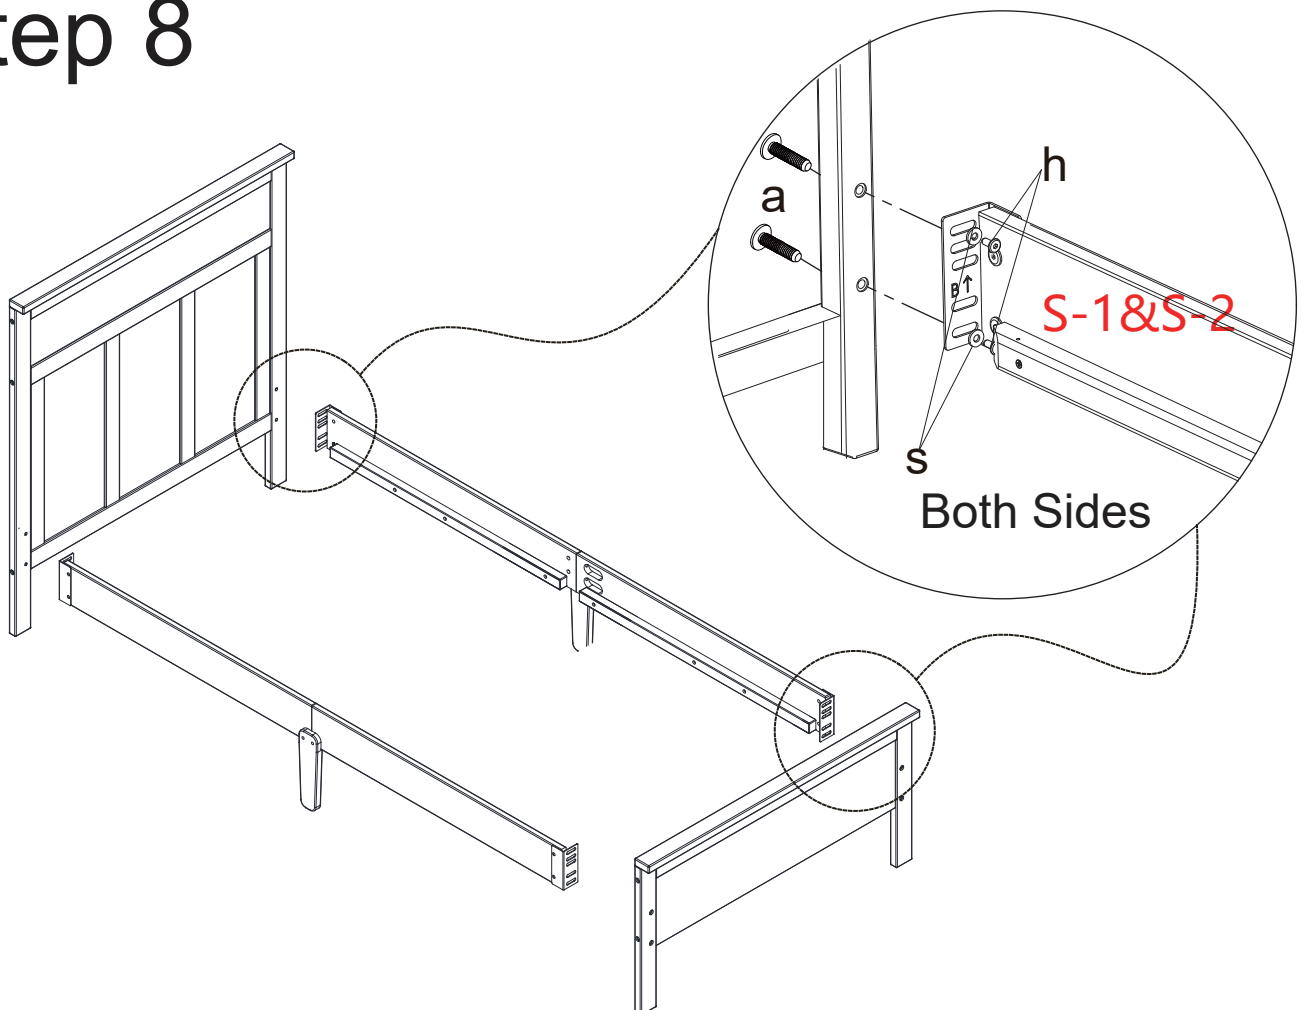

Step 9

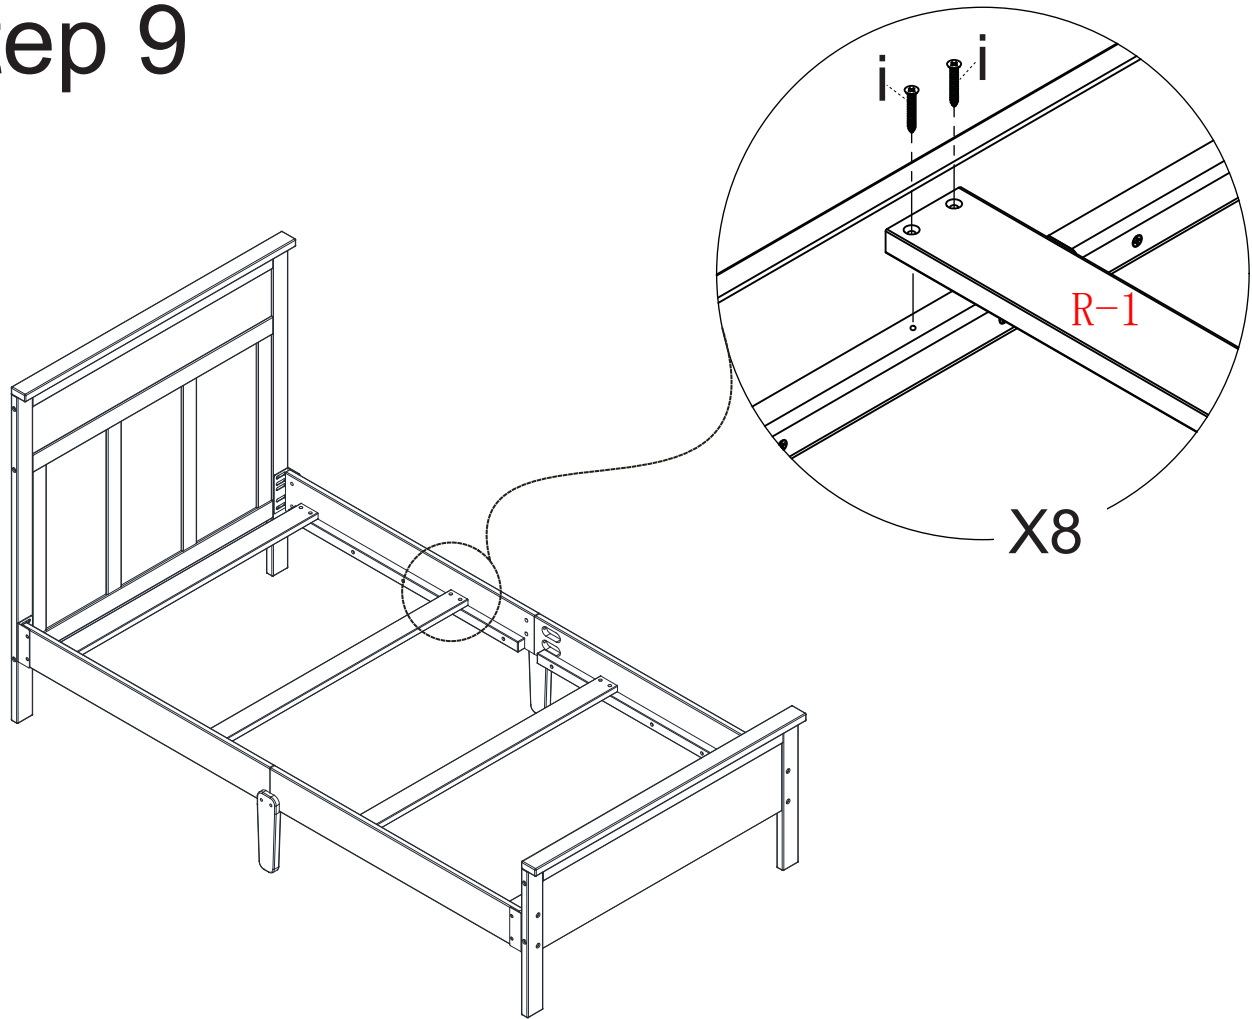

Step 10

