



Changer Table Alone Assembly Steps

1 Unassemble your crib and get the components, then follow up below step.


2 Attach the Additional Left-Front Leg (Z) and Additional Left Rear Leg(Y) to Changer Table as below.




(Z) Additional Left -Front Leg
For Changer table alone (x1)




(Y) Additional Left - Rear Leg
For Changer table alone (x1)




(b) M6 x 60mm Allen bolt -
from Crib (x 8)



(c) M6 x 50mm Allen bolt -
from Crib (x 6)



(e) M6 x 35mm Allen bolt -
from Crib (x 1)

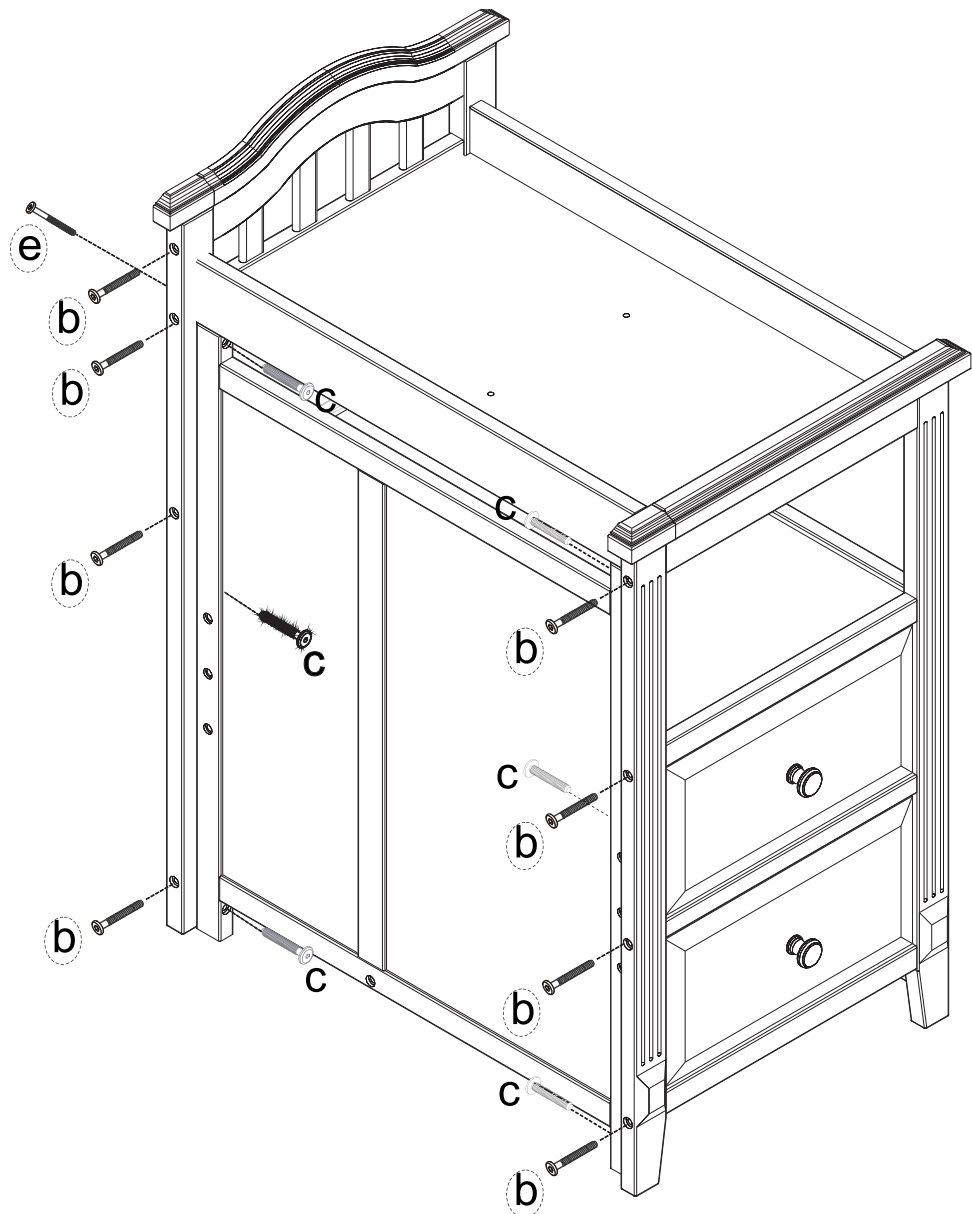


Sorelle - A Division of C&T International, Inc.
46 Whelan Road, East Rutherford, N. J. 07073 U. S. A.
Tel, +1(201)531 1919 Fax, +1(201)531 1920
Website: www.sorellefurniture.com

Full - size Conversion Kit for Berkley Crib and Changer Assembly Instruction

Important Information:


Read all instructions **BEFORE** assembling Bed.
KEEP INSTRUCTIONS FOR FUTURE USE.

Adult Bed Assembly Parts

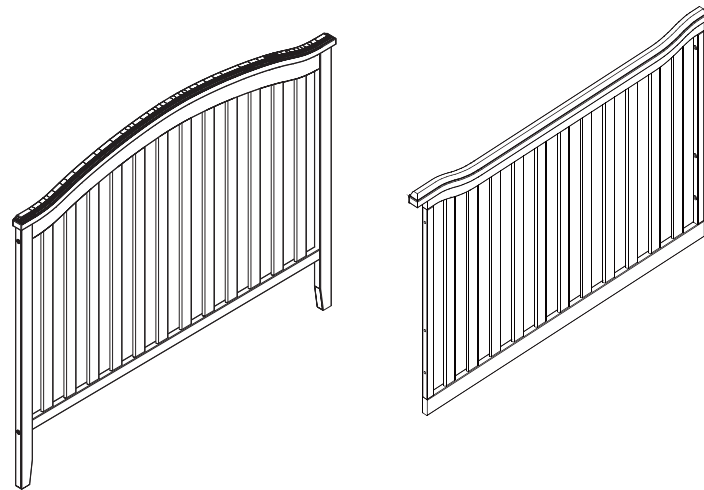

Headboard with Posts -
from Crib


Footboard -
from Crib

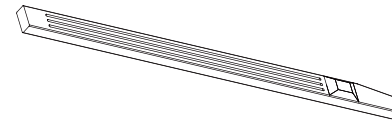


(D) Left Front Post - from Crib



(W) Additional Right - Front Post
For Adult bed (x1)

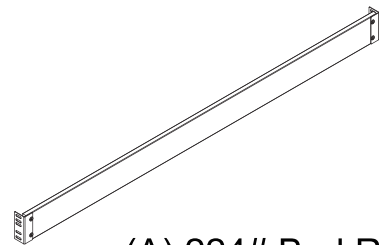


(A) 224# Bed Rail (x2)

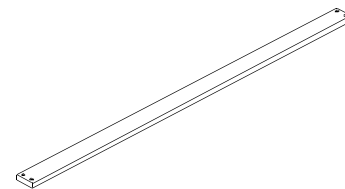


(B) 224# Cross Slat (x4)


PARTS: Hardware and Tools

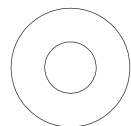


a. Flat Washer x 8




d. Screw x16

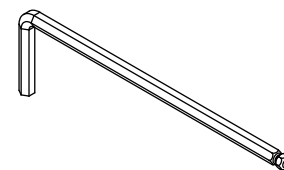


M4 Hex Wrench Included with Crib




e. M6 x 17mm Bolts x4



f. M6 x 20mm Bolts x4




g. Nuts x4

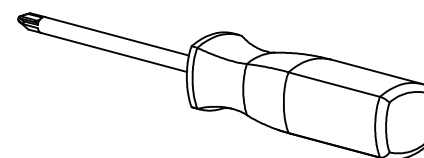

Phillips Screwdriver Not Supplied


Step 5

⚠ A mattress foundation **must** be
used with these bed rails.

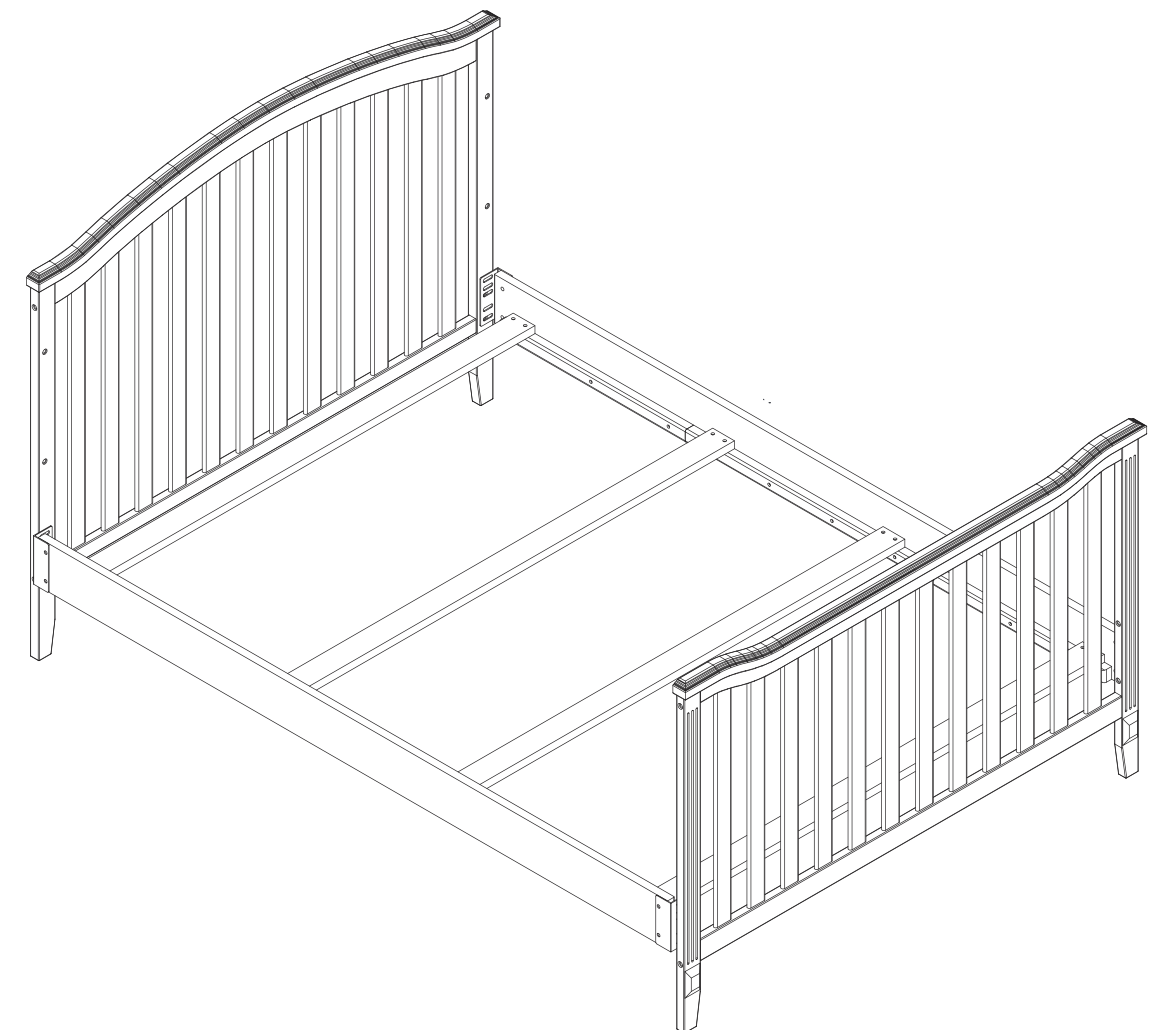



After ALL screws are tight, ensure the bed
rails are adjusted correctly side to side and
then tighten ALL BOLTS using the M4 Hex
Wrench (from Crib).

Required Hardware



d. Screw x16

Step 4

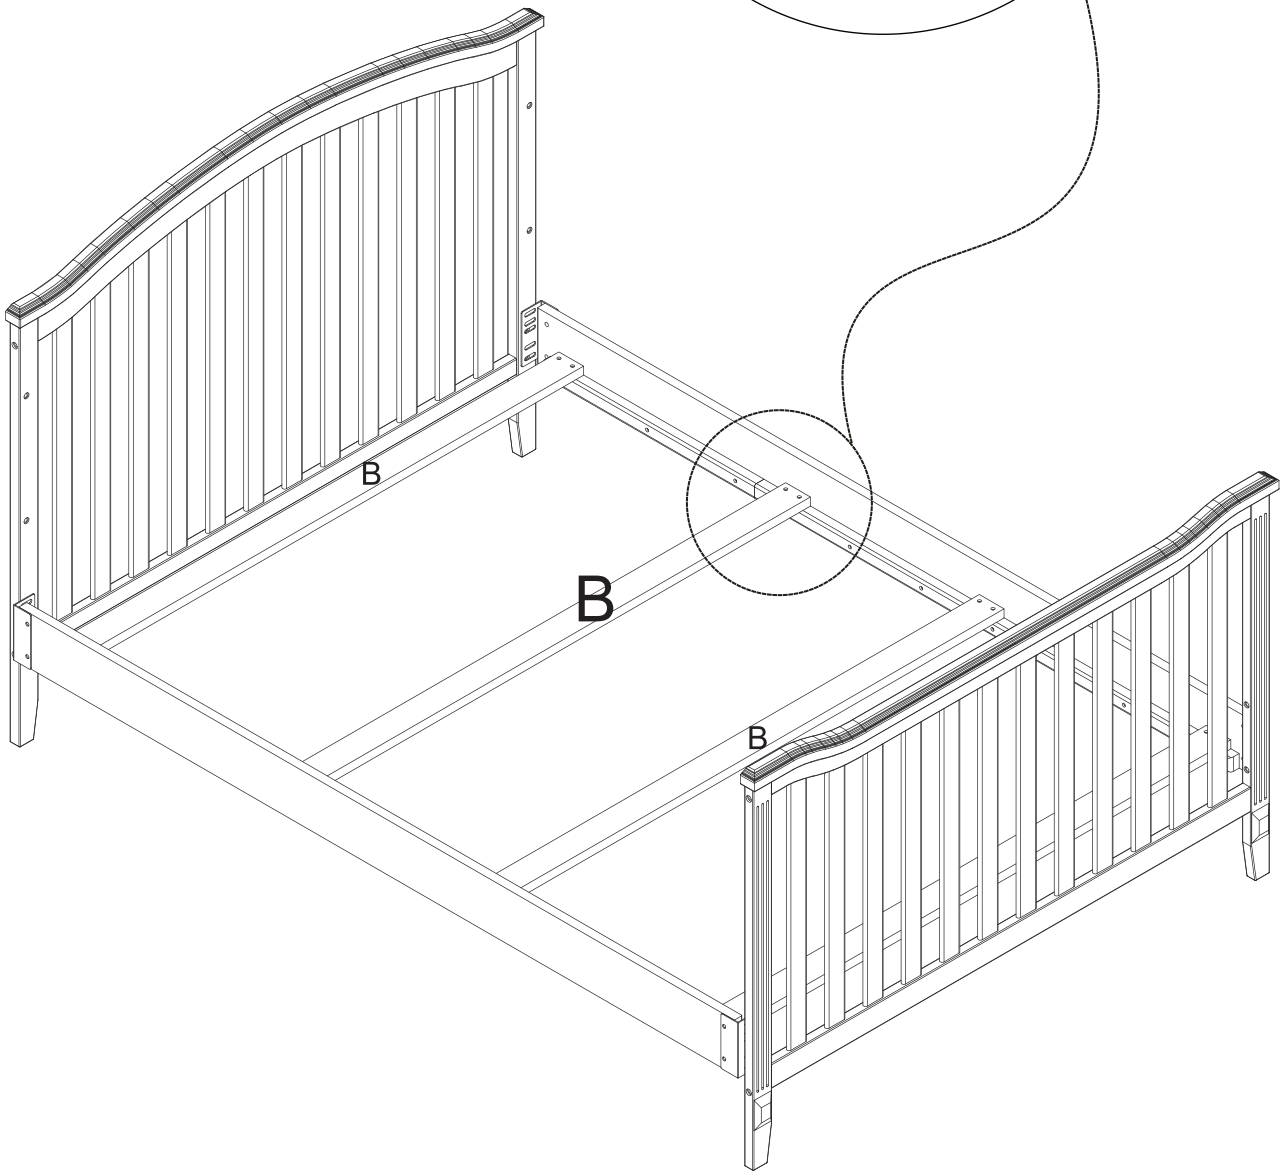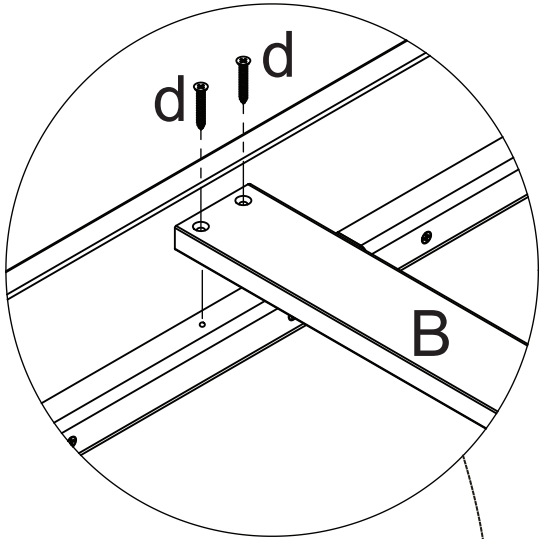



Attach Each Cross Slat (Part B) to the Bed Rails (Part A) with (2) Screw at each end, install the screw into the pre-drilled hold in the rails using Phillips Screwdriver.

Adult Bed Assembly Steps

1 Unassemble your crib and get the components, Headboard with Post and Footboard (C) and Left front post(D), then follow up below steps.


Step 1

Attach Left front post (Part D-from crib) and Additional right-front post(Part W) to the Footboard using (6) Bolts (supplied with the crib).
DO NOT completely tighten the bolts at this time.

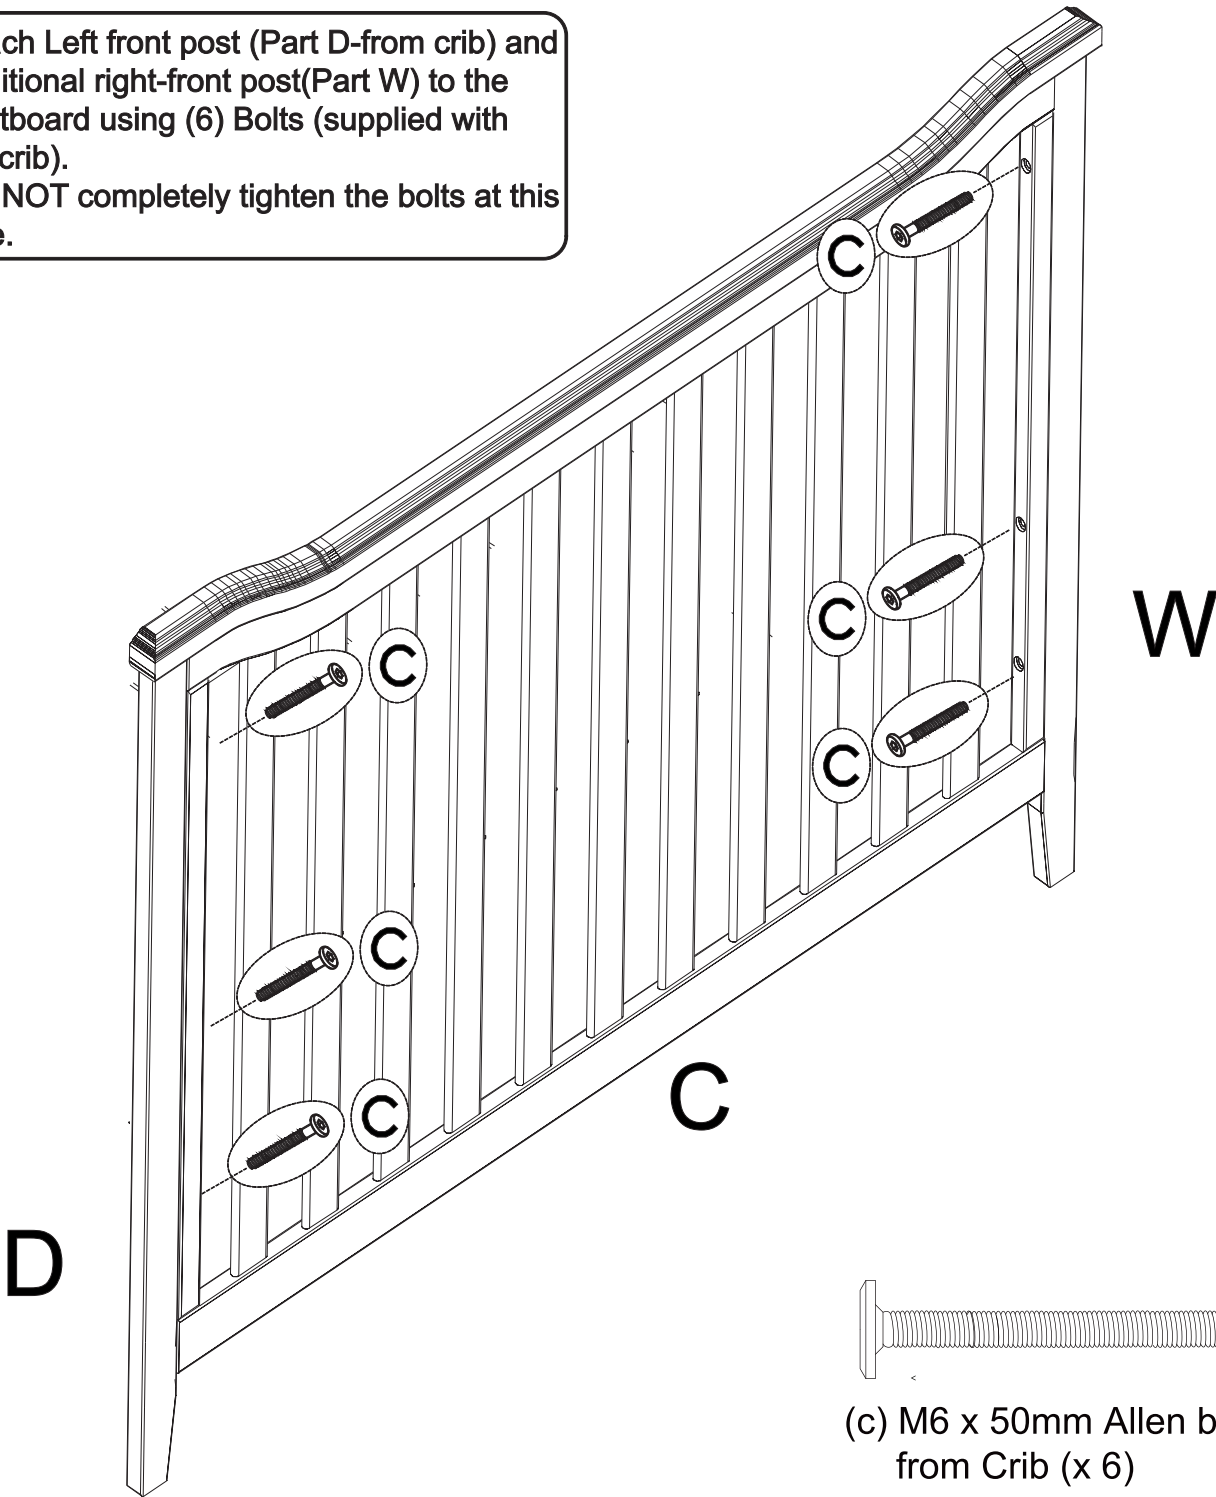


(c) M6 x 50mm Allen bolt - from Crib (x 6)

Required Hardware

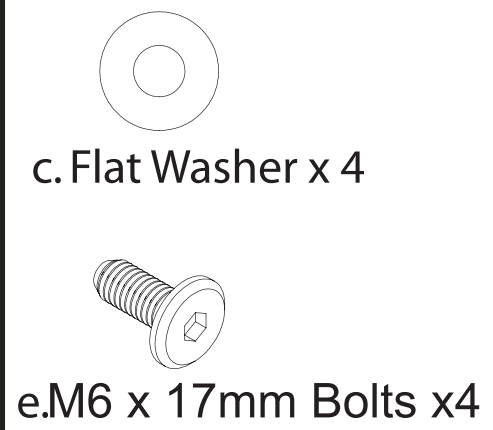


Step 2

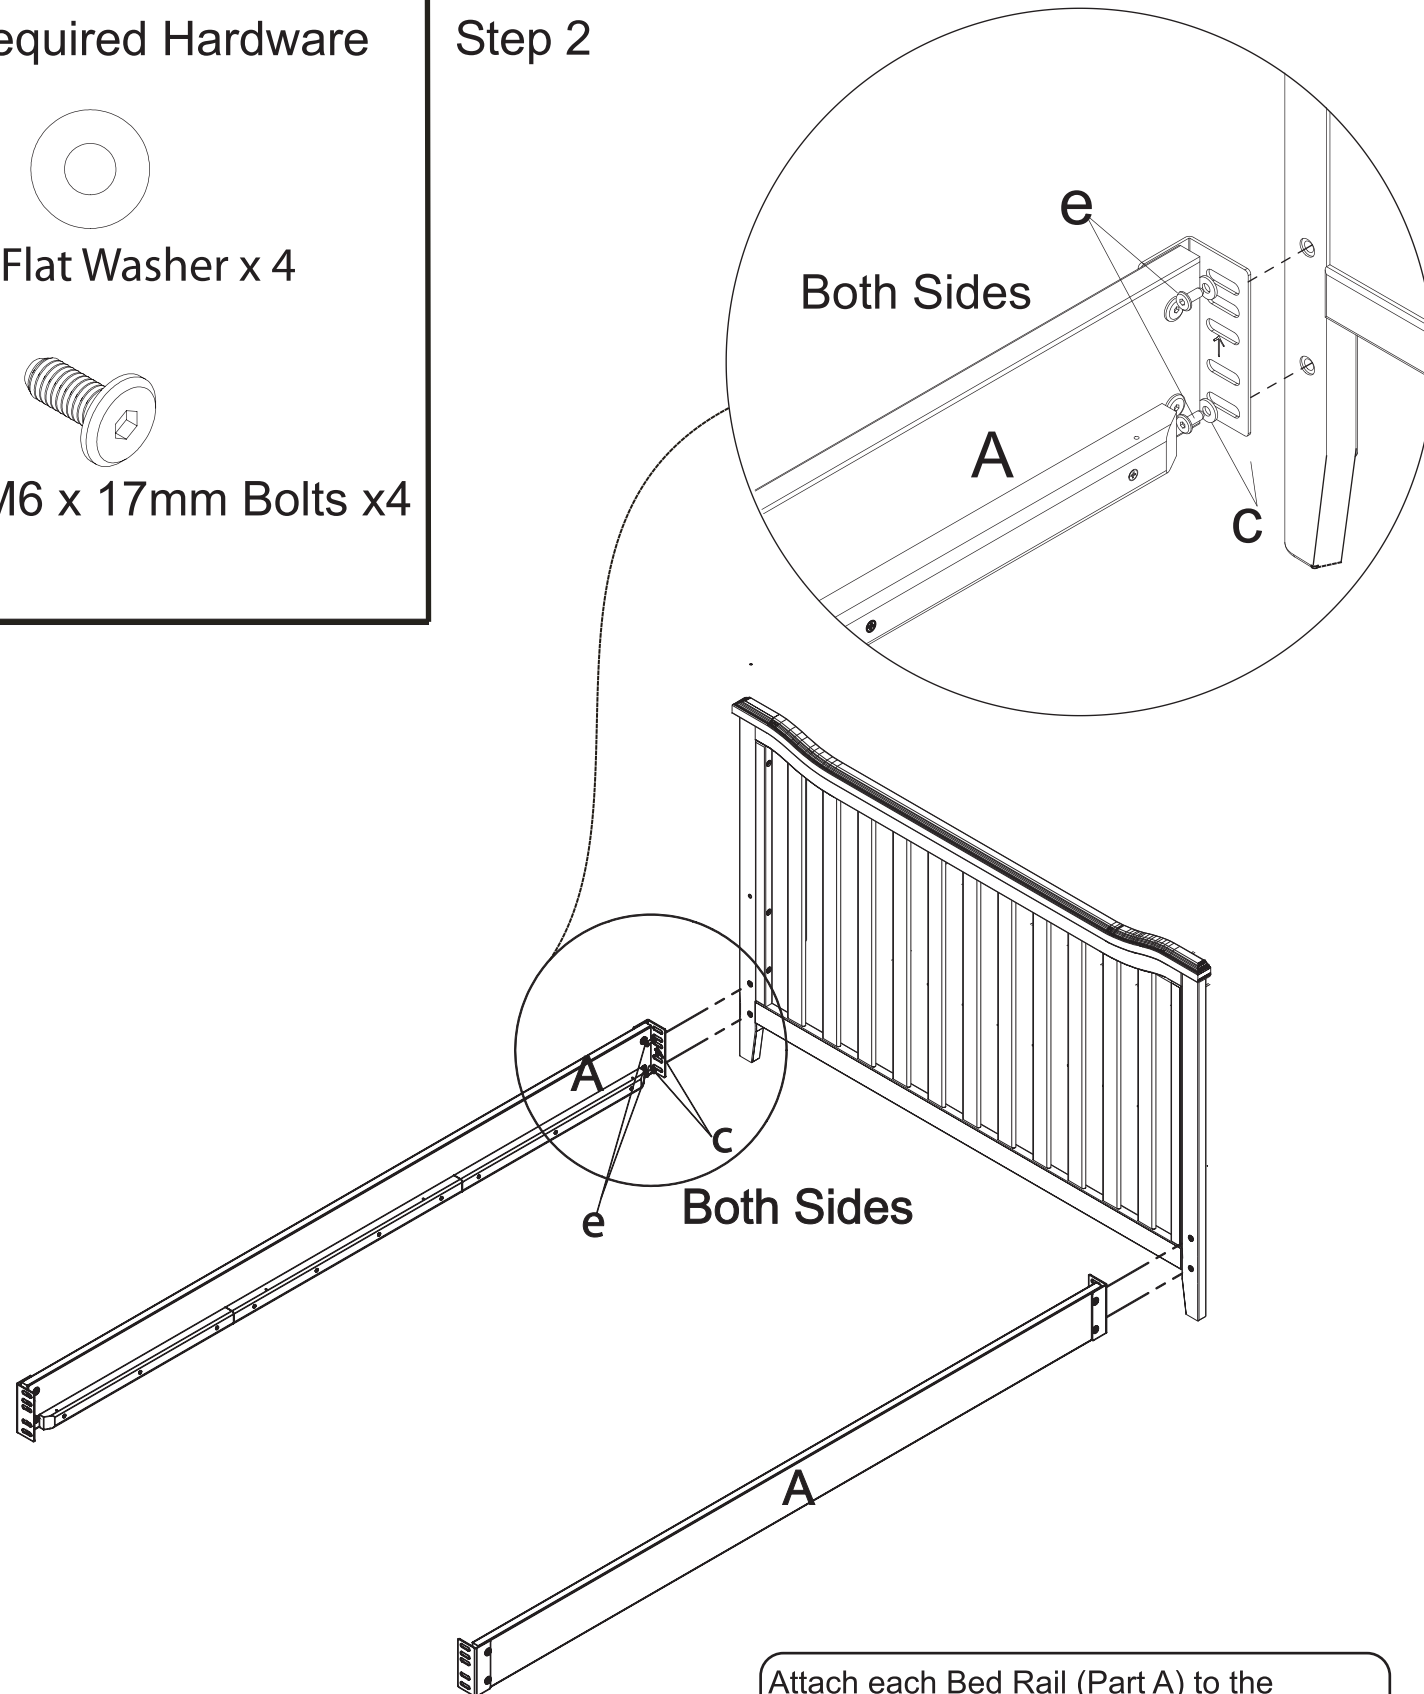


Attach each Bed Rail (Part A) to the Footboard with Posts using (2) Bolts (supplied with the crib) and (2) Flat Washers (Part c). DO NOT completely tighten the bolts at this time.

Required Hardware

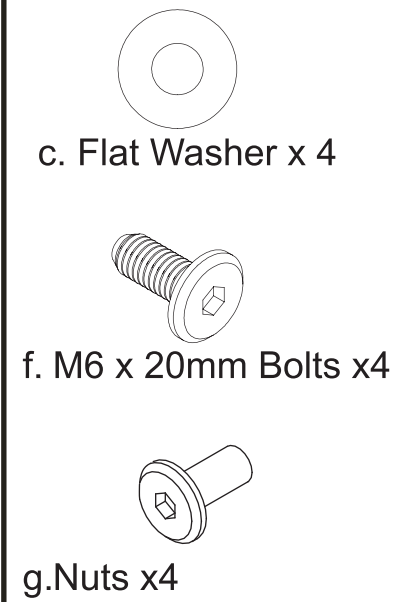

Step 3

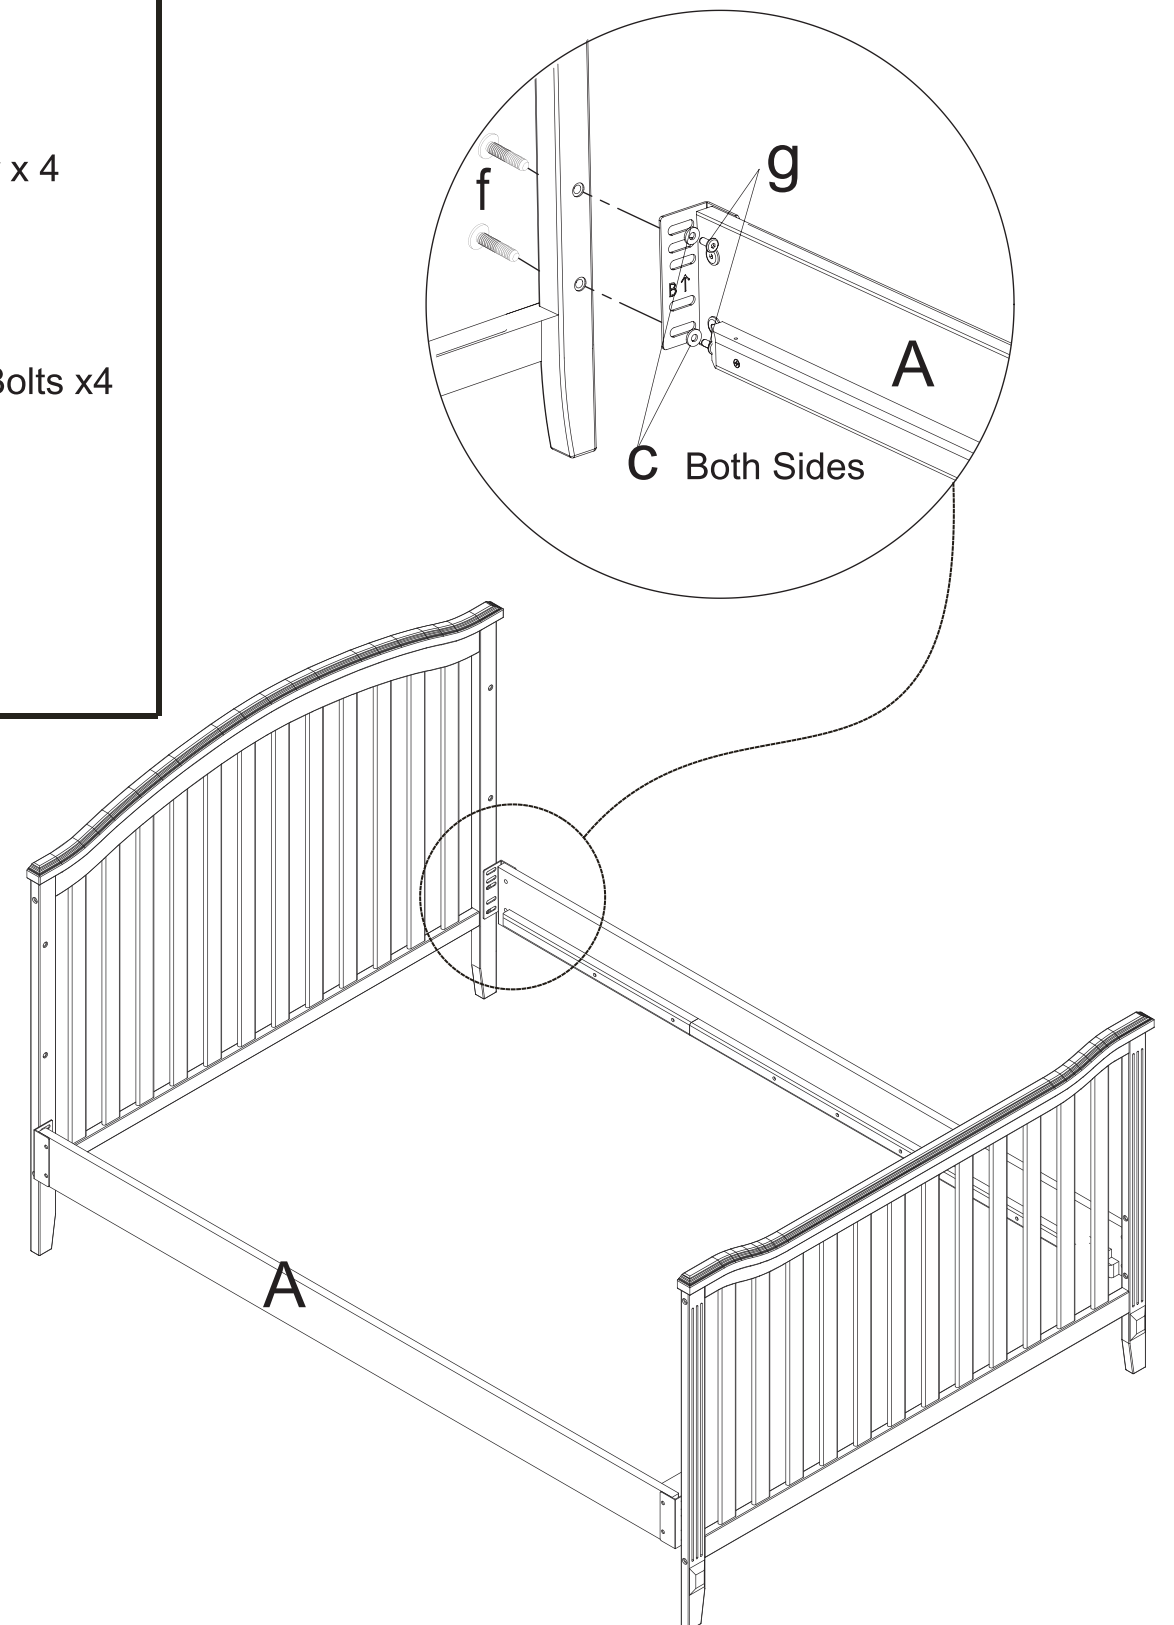

Attach Each Bed Rail (Part A) to the Headboard with Posts (see Crib Assembly Instructions) using (2) Bolts and Nuts(2) and (2) Flat Washers (Part c). DO NOT completely tighten the bolts at this time.