




**By Sorelle - A Division of C&T International, Inc.**  
46 Whelan Road, East Rutherford, N. J. 07073 U. S. A.  
Tel, +1(201)531 1919 Fax, +1(201)531 1920  
Website: [www.sorellefurniture.com](http://www.sorellefurniture.com)

# **Berkley Double Dresser**


## **Assembly Instruction**

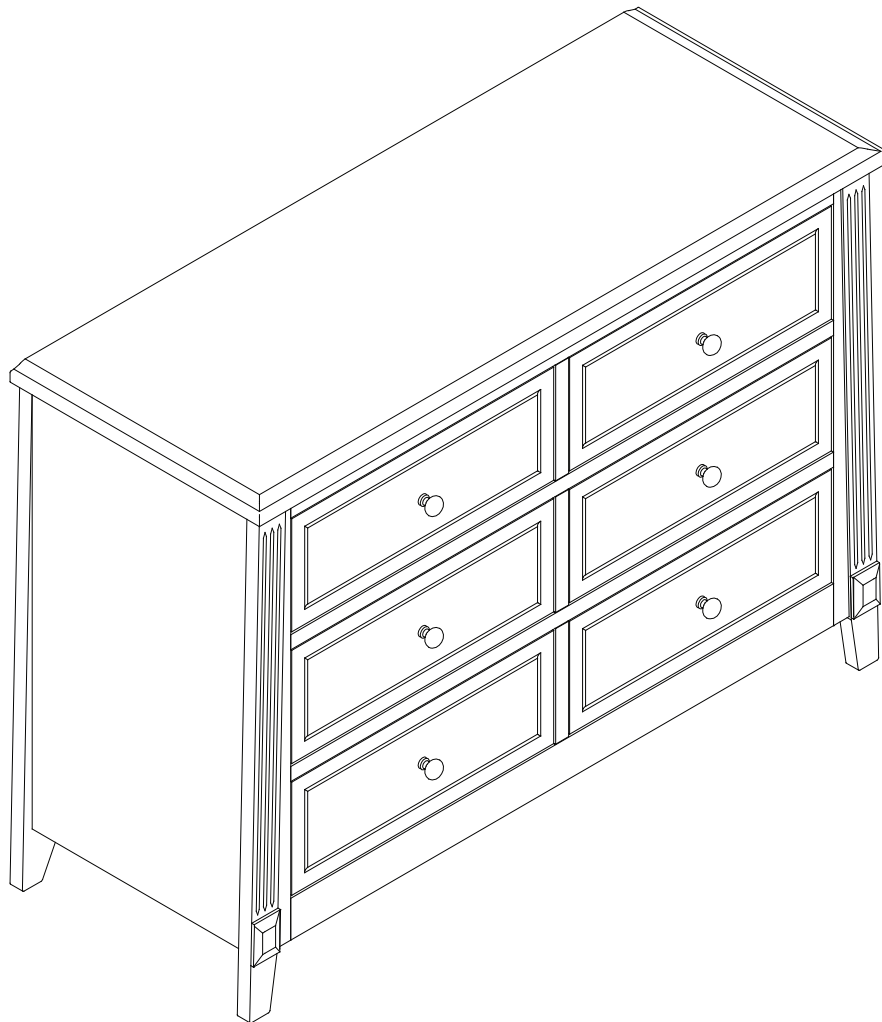


### **Important Information:**

Read all instructions **BEFORE** assembling crib.  
KEEP INSTRUCTIONS FOR FUTURE USE.


## Assembly Parts

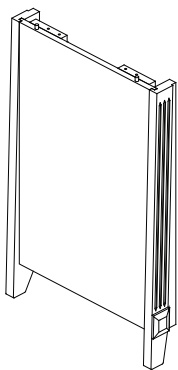


(A) Left Side Panel (x1)

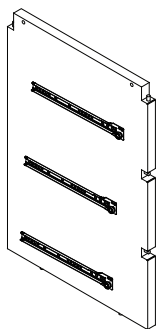


(B) Middle Panel (x1)

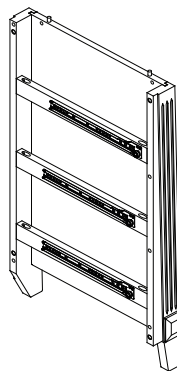


(C) Right Side Panel (x1)

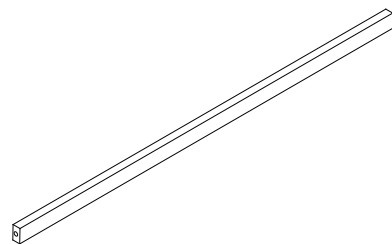


(D) Front - Top Rail(x1)

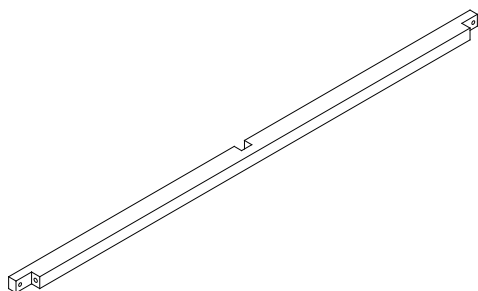


(E) Front- Middle Rail (x2)

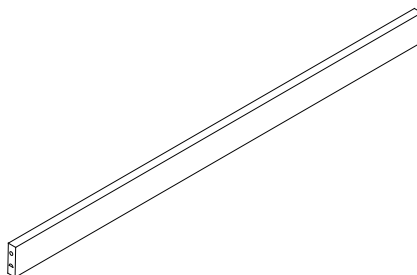


(F) Front- Bottom Rail (x1)

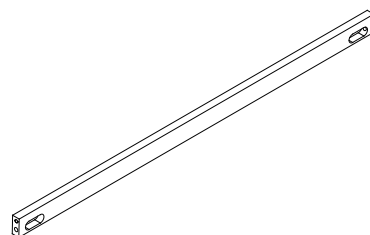


( G ) Rear - Top Rail (x1)

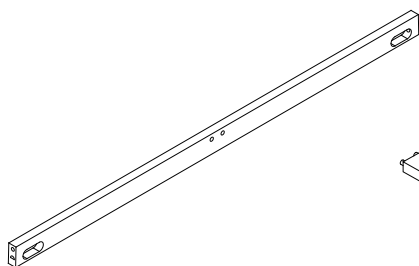


(H) Rear - Bottom Rail (x1)

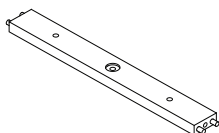

( I ) Support Rail (x1)

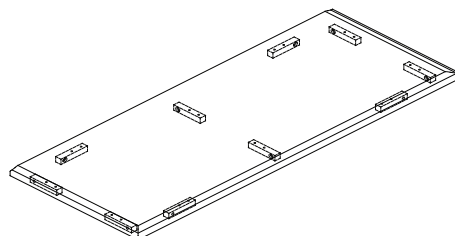


( J ) Top Panel (x1)

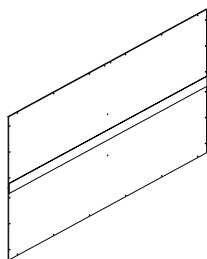


( K ) Back Panel(x1)




(L) feet (x1)

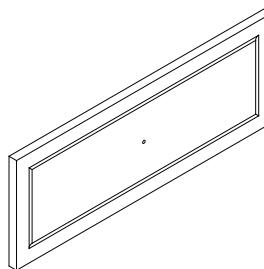


( R ) Drawer Front (x6)

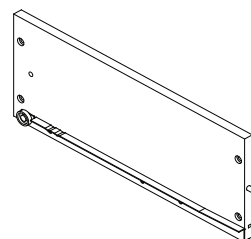


(R1) Drawer Left (x6)

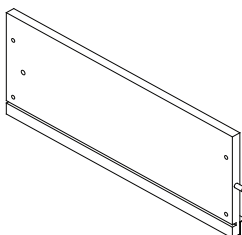


(R2) Drawer Right (x6)

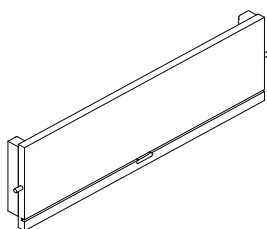

(R3) Drawer Back (x6)

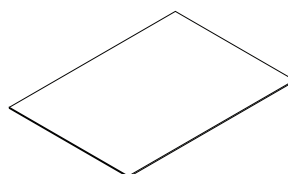


(R4) Drawer Bottom (x6)

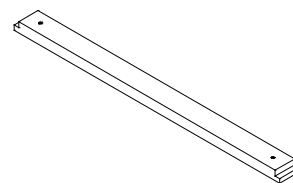


(R5) Drawer Support (x6)

**Assembly Parts**
**Hardware list**



( n ) Drawer Screw (18 pcs)




( l ) Metal Connector A (6pcs)



( m ) Metal Connector B (6 pcs)



(b) 1/4 x 1-1/8"mm Allen bolt (4 pcs)




(a) 1/4" x 1-3/8"mm Allen bolt (10 pcs)



(o) Flat Washer (14 pc)




(c). Spring Washer ( 14 pcs)



( h ) Knob (x6)




( e ) 5/32 x 1"mm Allen bolt (6pcs)




( j ) Plastic Connector (10 pcs)



( d ) Ø3.5 X 15mm Phillips Screw (26 pcs)




(g) Drawer Screw (48 pcs)

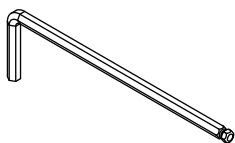

(k) Allen Key (1 pc)




( i ) Wall Strap Kit (1 pc)

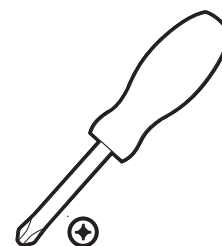

( f ) Screwdriver (1 pc)


**Berkley Double Dresser Assembly**

- ① Attach Front Top rail (D) & Front Middle rail (E) & Front bottom rail (F) & Rear Top rail (G) and Rear bottom Rail (H) to Middle Panel (B) as Figure 1.

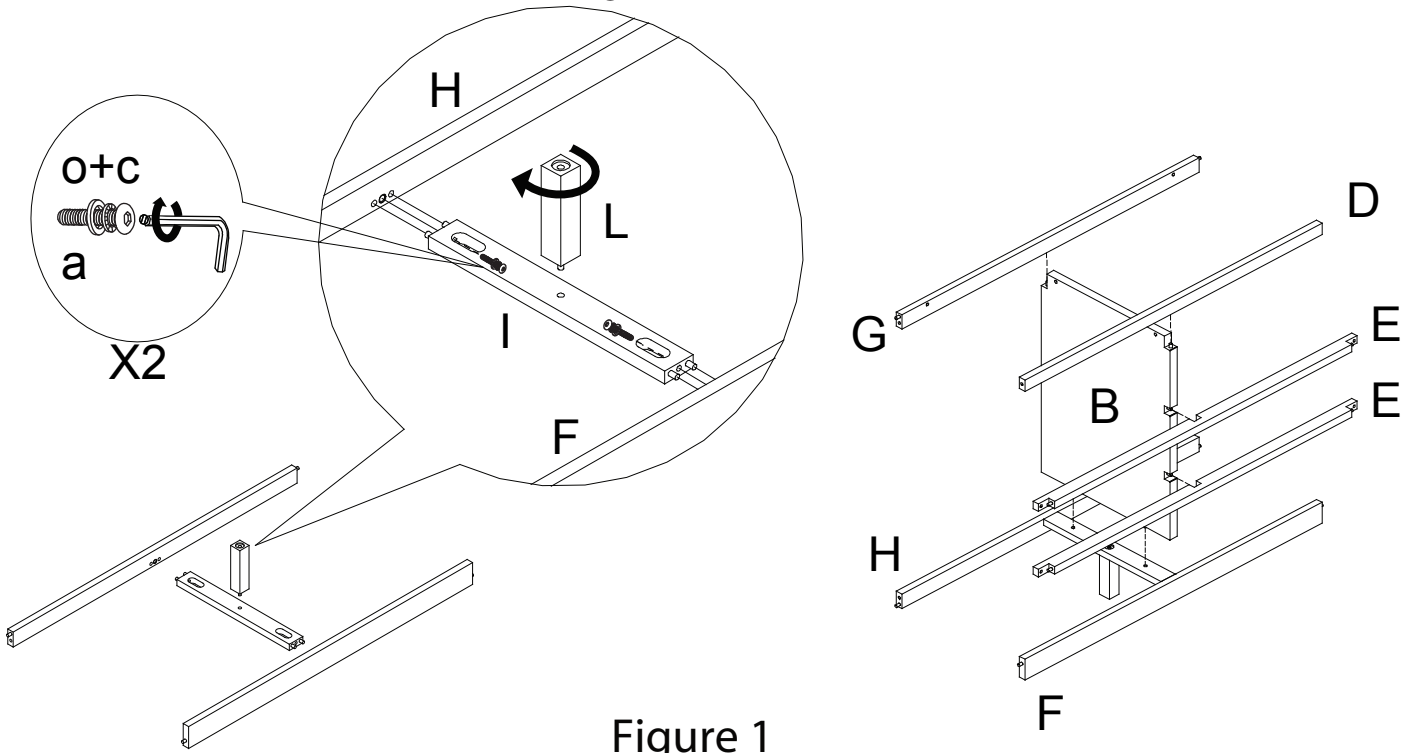

**Figure 1**

- ② Attach left side panel (A) and right side panel (C) to Front Top rail (D) & Front Middle rail (E) & Front bottom rail (F) & Rear Top rail (G) and Rear bottom Rail (H) by using 8 Bolts (a) & 8 Spring washer (c) and 4 Bolts (b) & 4 Spring washer (c) as Figure 2.

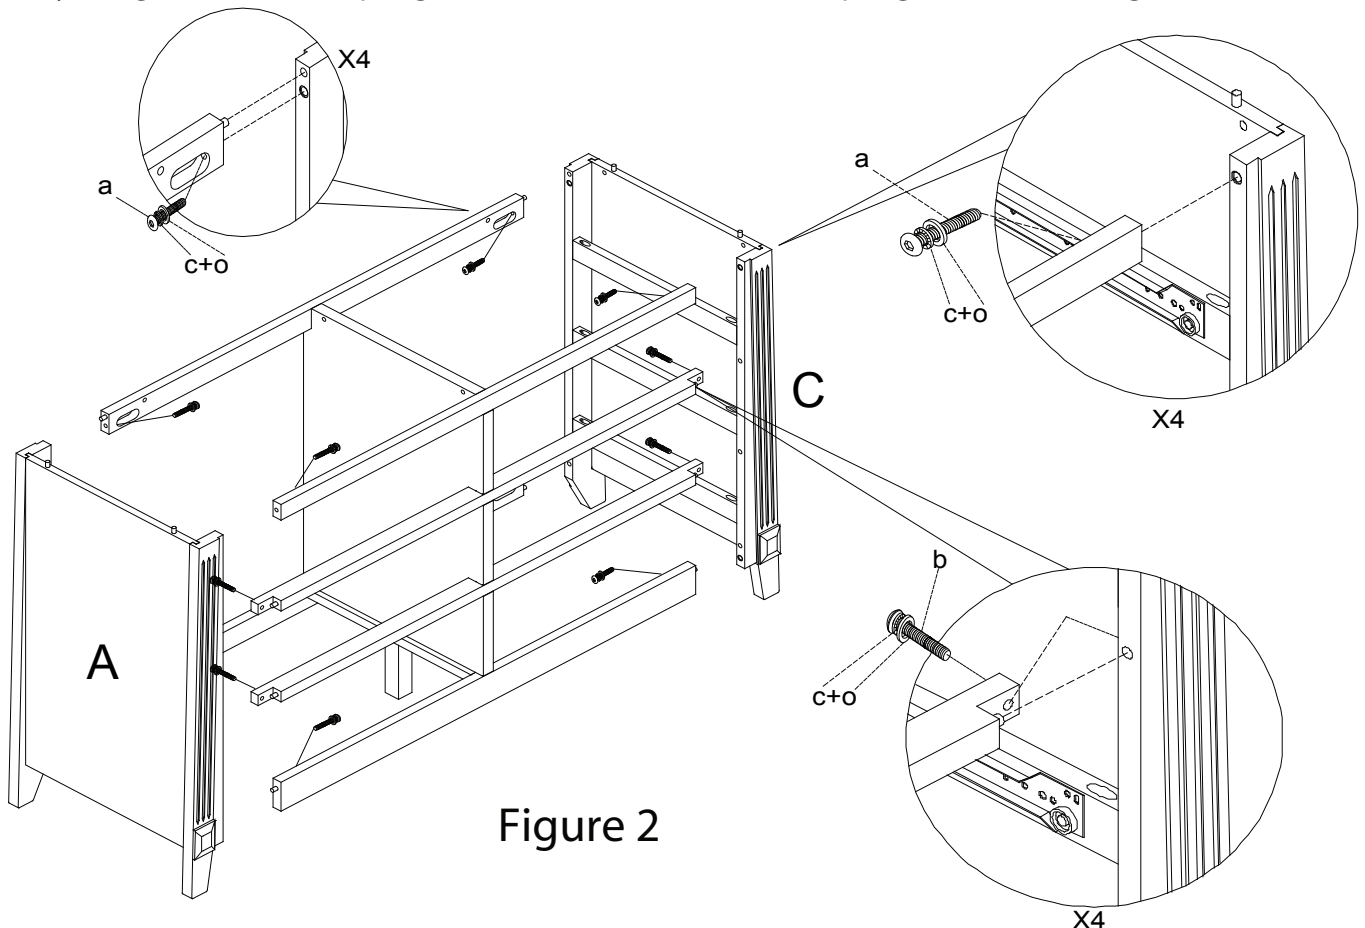

**Figure 2**

# Berkley Double Dresser Assembly

- ③ Attach Top Panel (J) to Side panel as Figure 3.

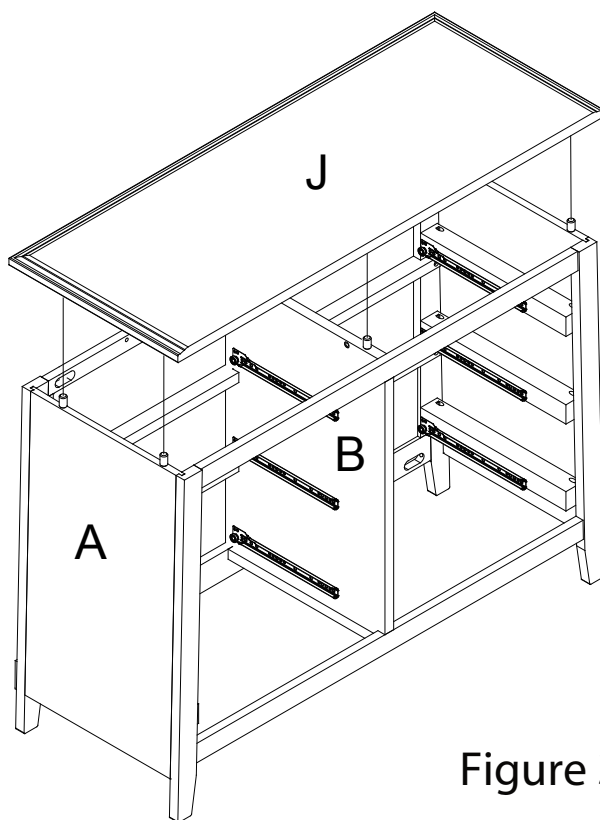


Figure 3

- ④ Attach Top Panel (J) to Side panel by using 10 Plastic Connector (j) as Figure 4.


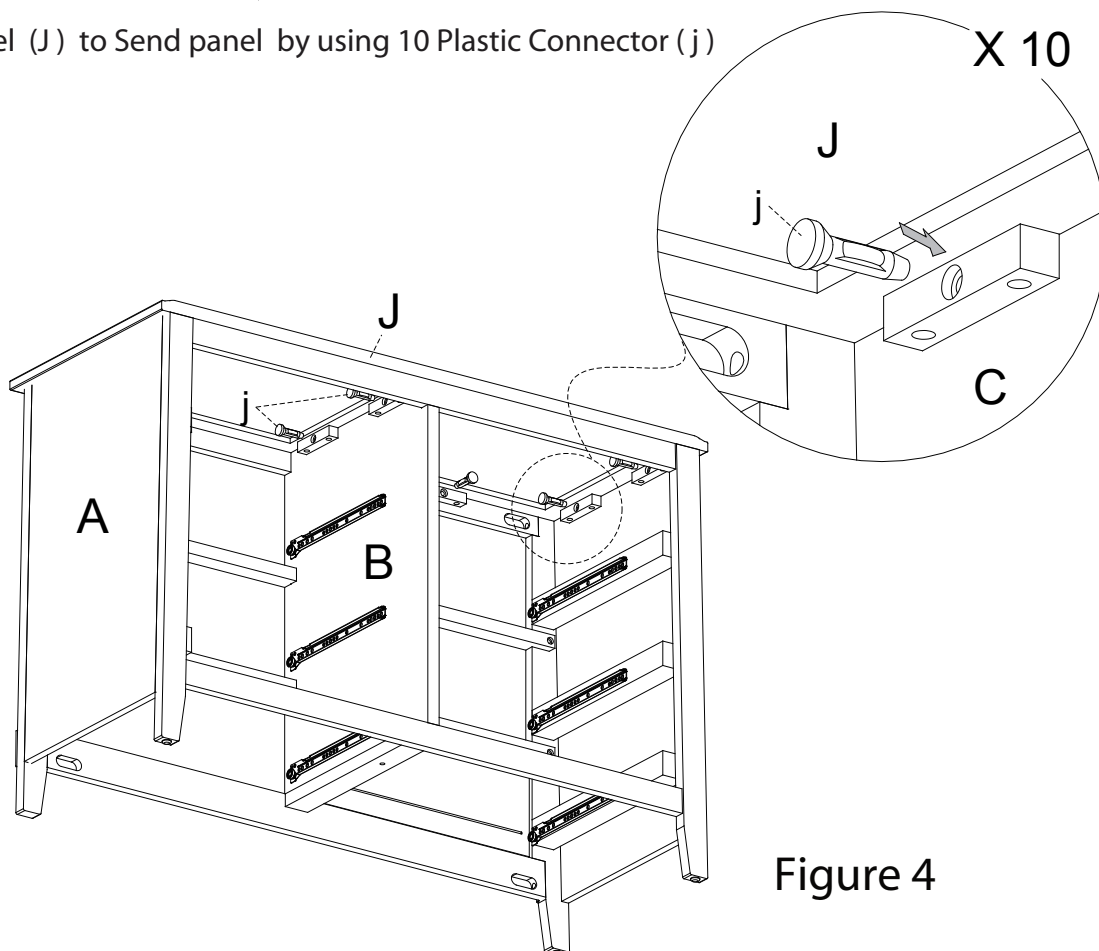



Figure 4

## Drawer Assembly



1. Working on a padded flat surface, attach Drawer Sides (R1&R2) to Drawer Back (R3) with Philips Head Screw(g). *Figure 1*

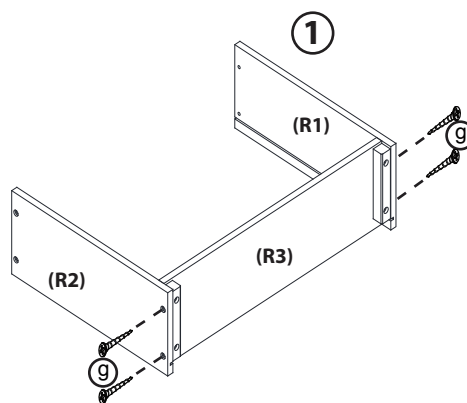

2. Slide Drawer Bottom (R4) and into drawer Bottom Support (R5) assembly. *Figure 2*

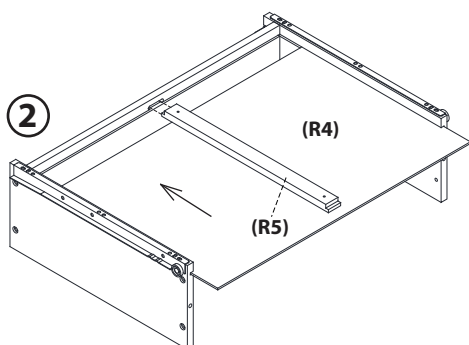


3. Secure both sides of Drawer Front (R) to drawer assembly with four (4) Screws (g). *Figure 3.*

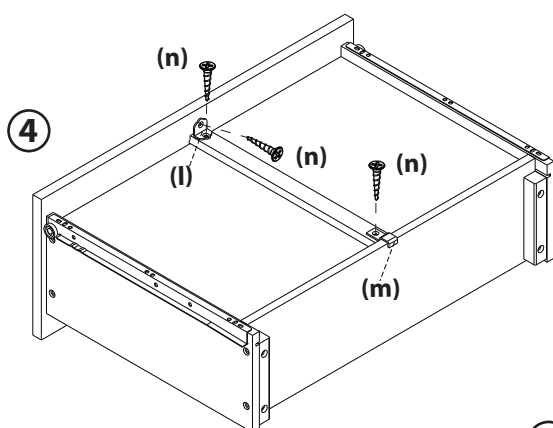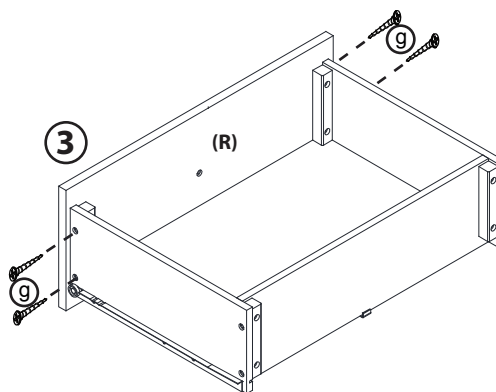

4. Attach Matel Connector A (l) and Matel Connector B (m). *Figure 4*

5. Using Drawer Knob Screw ( e ), install one (1) Knob ( h ) on Drawer. *Figure 5.*

**Repeat for all drawers.  
Set drawers aside for later use.**

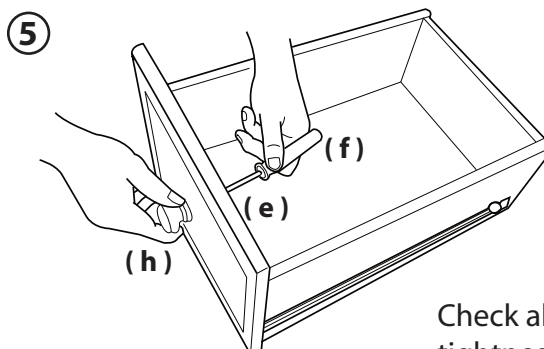

Check all screws for tightness.

## Berkley Double Dresser Assembly

- ⑥ Assembly the drawer as Figure 6.

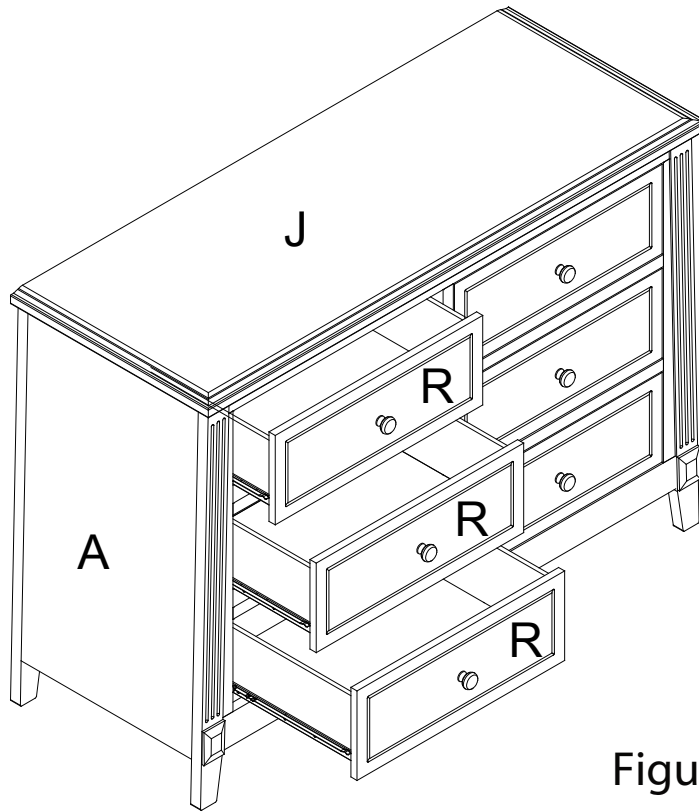


Figure 6

- ⑦ Use 26 pcs Wood Screws (d) to attach the Back Panel (K) to the dresser  
As shown in Figure 7..

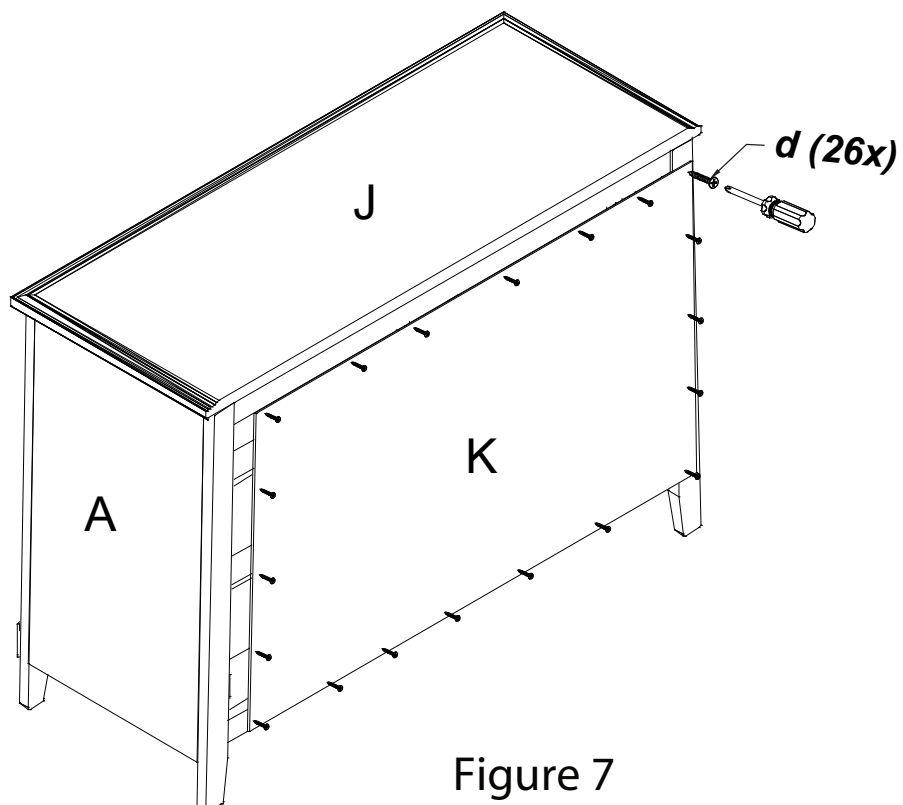


Figure 7