

By Sorelle - A Division of C&T International, Inc.

46 Whelan Road, East Rutherford, N. J. 07073 U. S. A. Tel, +1(201)531 1919 Fax, +1(201)531 1920

Website: www.sorellefurniture.com


Finley Double Dresser Assembly Instruction




Important Information:

Read all instructions **BEFORE** assembling. KEEP INSTRUTIONS FOR FUTURE USE.

Assembly Parts



(A) Left Side Panel (x1)



(B) Middle Panel (x1)




(C) Right Side Panel (x1)




(D) Feet (x4)




(E) Adjustable Post (x1)



(F) Front - Middle Rail (x2)




(G) Front - Upper Rail (x1)

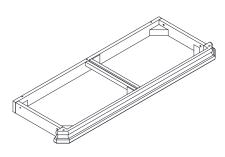

(H) Bottom Frame (x1)




(I) Top Frame (x1)

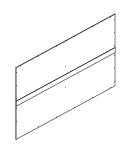


(J) BackPanel (x1)



(R) TOP Drawer Front (x2)

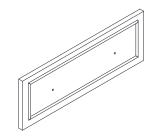

(R) Under Drawer Front (x4)




(R5) Drawer Bottom Support (x6)




(R1) Drawer Left (x6)



(R2) Drawer Right (x6)

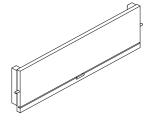

(R3) Drawer Back (x6)




(R4) Drawer Bottom (x6)

Assembly Parts

Hardware list








(a) Drawer Screw 12mm (6 pcs)

(b) Drawer Screw 25 mm (6 pcs)

(c) Metal Connector (6 pcs)








(d) 1/4 x 25mm Allen bolt (16 pcs)

(e) Falt Washer (16pc)

(f) Spring Washer (16pcs)







(h) 5/32 Allen bolt 12pcs



(i) Ø3.5 X 15mm Phillips Screw (26 pcs)



(j) Drawer Screw 25mm (48 pcs)



(k) Wall Strap Kit (1 pc)




(I) Allen Key (1 pc)




(m) Screwdriver (1 pc)


1 Attach Feet rail (D) & Adjustable Post (E) to Bottom Frame (H) as Figure 1.

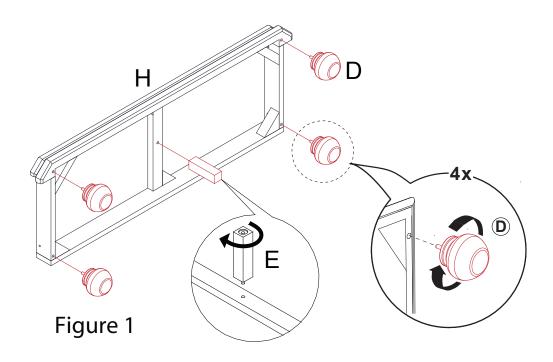


Attach left side panel (A) and right side panel (C) to Bottom Frame (H). by using 4 Bolts(d) & 4 Flat washer (e) & 4 Spring washer (f) as Figure 2.

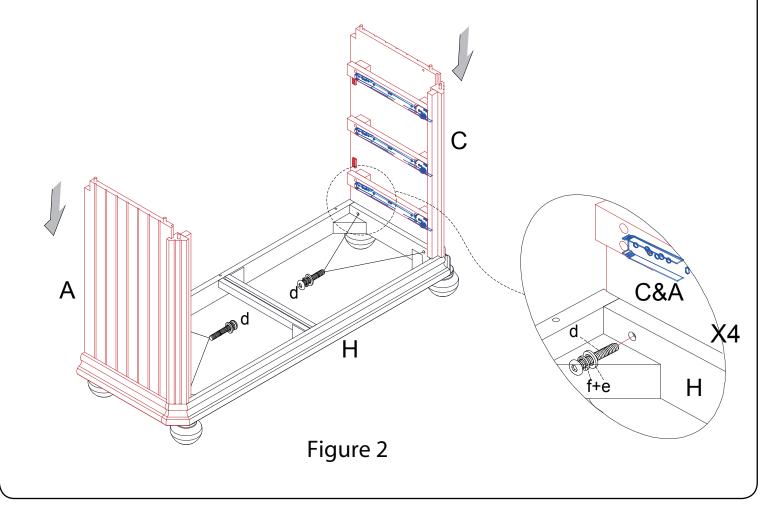


(3) Attach 1 Front - Upper Rail (G) & 2 Front - Middle Rail (F) to Middle Panel(B) as Figure 3.

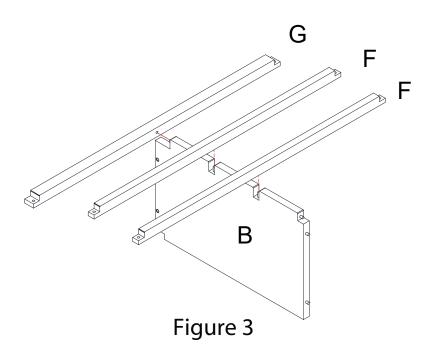


Attach the Middle Panel with Rails to Bottom Frame and Side Panel by using 6 Bolts (d) with Washers (e & f) as Figure 4 & Figure 4a.

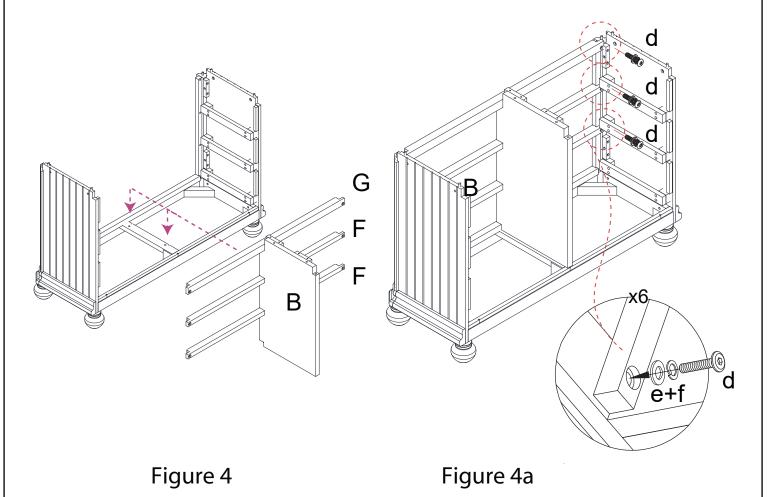

5 Attach Top Frame (1) to Dresser. As Figure 5.

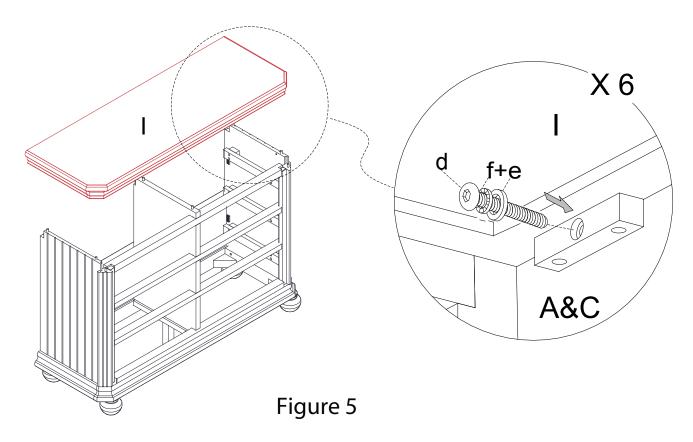



6 Attach Back- Upper Panel (J) to Dresser using 26 Phillips Screws (i) as Figure 6.

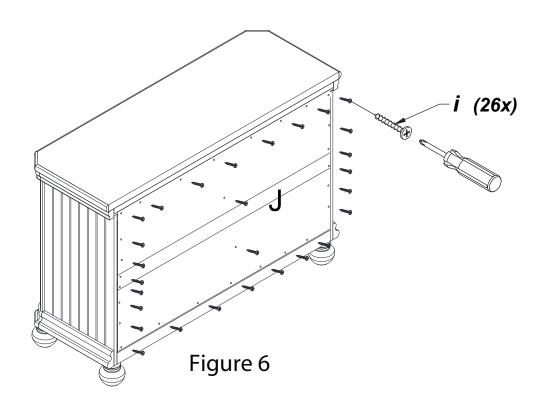

Drawer Assembly


1. Working on a padded flat suface, attach Drawer Sides (R1&R2) to Drawer Back (R3) with Drawer Screw(j). Figure 1

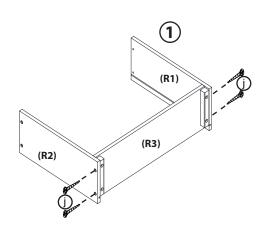


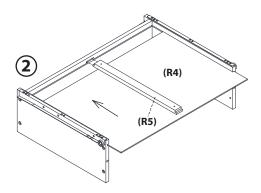

2. Slide Drawer Bottom (R4) and into drawer Bottom Support (R5) assembly. *Figure 2*


3. Secure both sides of Drawer Front (R) to drawer assembly with four (4) Screws (j). Figure 3

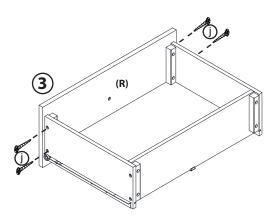

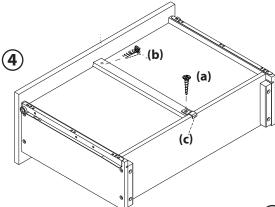

4. Attach Matel Connector A (I) and Matel Connector B (m). *Figure 4*

5. Using Drawer Knob Screw (h), install one (1) Knob (g) on Drawer. Figure 5.

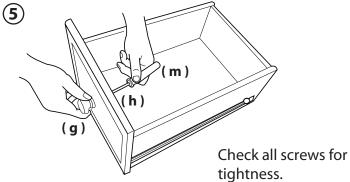

Repeat for all drawers. Set drawers aside for later use.

8 Assembly the drawer as Figure 8.

