



IMPORTED BY C&T International, Inc. / IMPORTE PAR de C&T International, Inc.

105 Stonehurst Ct Northvale, NJ 07647 U.S.A. Tel, 201- 531-1919 Fax, 201- 531-1920


**CANADA ADDRESS:**

3453, DU PRESIDENT KENNEDY LAC MEGANTIC, QUEBEC, CANADA G6B 2Y4

Website: [www.sorellefurniture.com](http://www.sorellefurniture.com) / Site Internet : [www.sorellefurniture.com](http://www.sorellefurniture.com)

# **PRIMO DOUBLE DRESSER RTA**


## **Assembly Instruction**

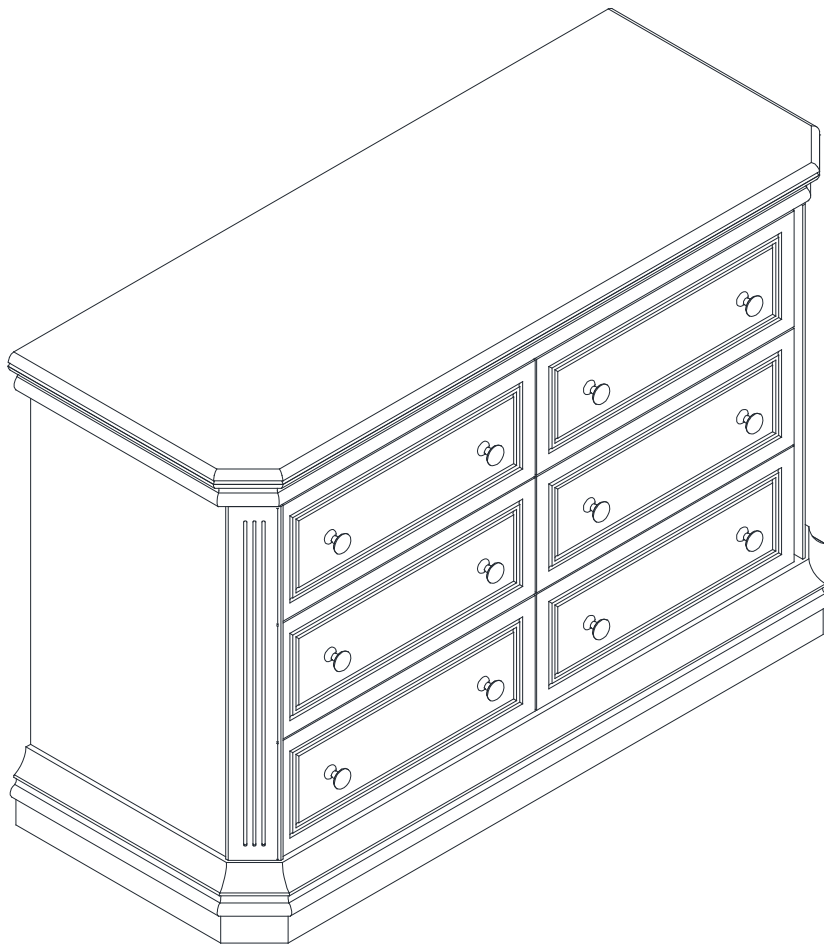


### **Important Information:**

Read all instructions **BEFORE** assembling crib.  
KEEP INSTRUCTIONS FOR FUTURE USE.


## Assembly Parts

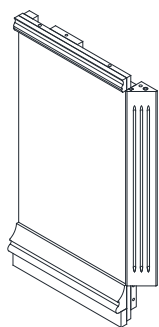


(A) Left Side Panel (x1)

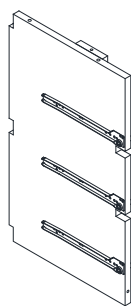

(B) Middle Panel (x1)

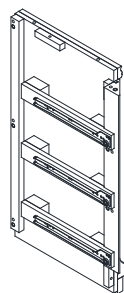


(C) Right End (x1)

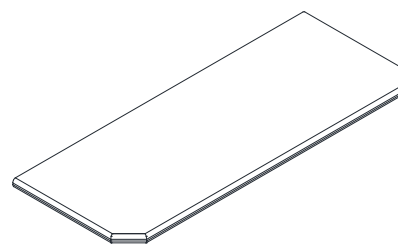


(D) Top Panel (x1)




(E) Top Panel (x1)

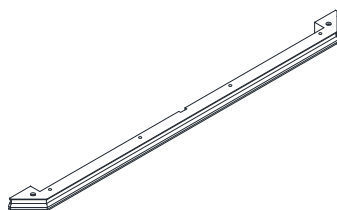


(F) Front Up Rail (x1)

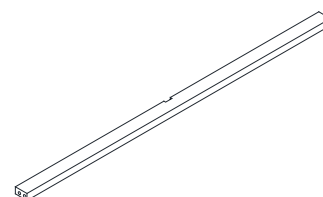


(G) Front Middle Rail (x2)

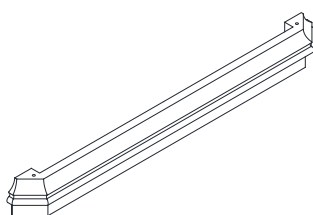


(H) Front Down Rail (x1)

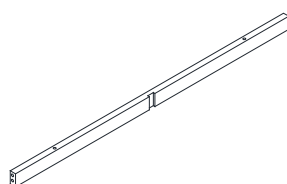


(I) Back Up Rail (x1)

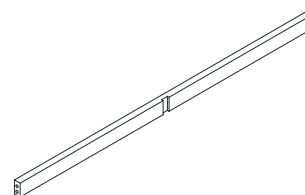


(J) Back Middle Rail (x2)

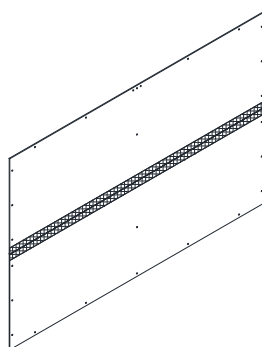


(K) Back Down Rail (x1)

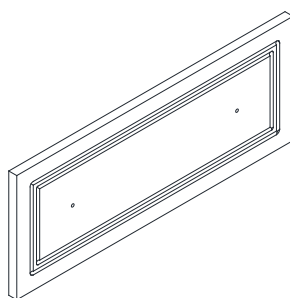


(R) Drawer Front (x6)

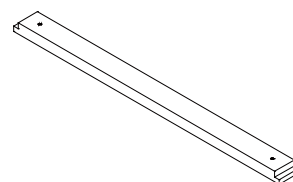


(R5) Drawer Bottom Support (x6)

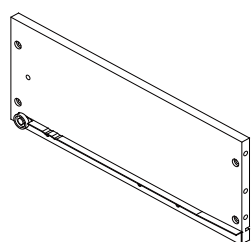


(R1) Drawer Left (x6)

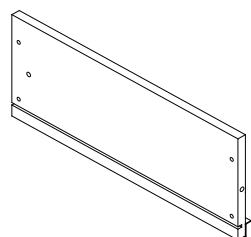

(R2) Drawer Right (x6)

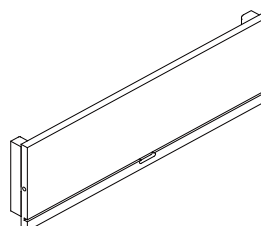


(R3) Drawer Back (x6)

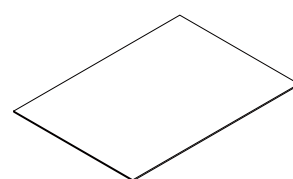


(R4) Drawer Bottom (x6)

**Assembly Parts**


**Hardware list**




a (X2)  
1/4"\*15




b (X8)  
1/4"\*32



c (X18)  
1/4"\*45

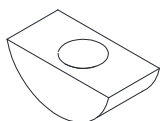


d (X10)  
20\*10\*8




e (X18)  
Φ 12\*6\*1.2




f (X28)  
Φ 11\*6\*1.5



g (X12)  
Φ 5/32m\*22




i (X24)  
Φ 8\*15




j (X48)  
Φ 8\*25




k (X18)  
Φ 7\*12

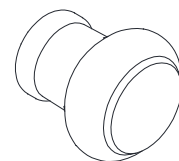


l (X12)

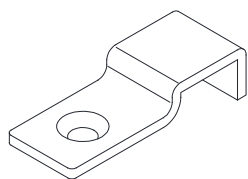

m (X6)  
40\*15\*2

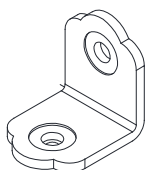

n (X6)  
20\*18\*16



o (X21)  
Φ 8\*30




p (X24)  
Φ 6\*30




r (X1)

q (X1)  
M4x115





s (X1)  
32x21x18x2

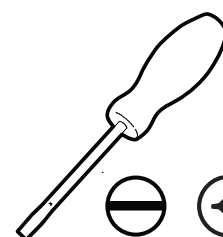

**Tool required**



## Drawer Assembly

1. Working on a padded flat surface, attach Drawer Sides (R1&R2) to Drawer Back (R3) with Philips Head Screw(j). *Figure 1*

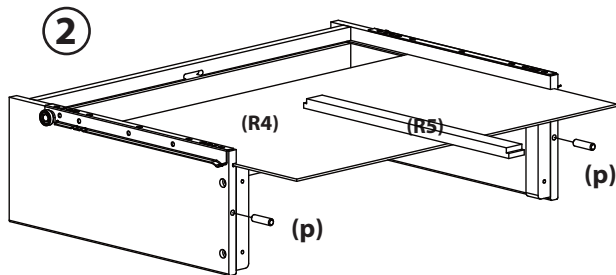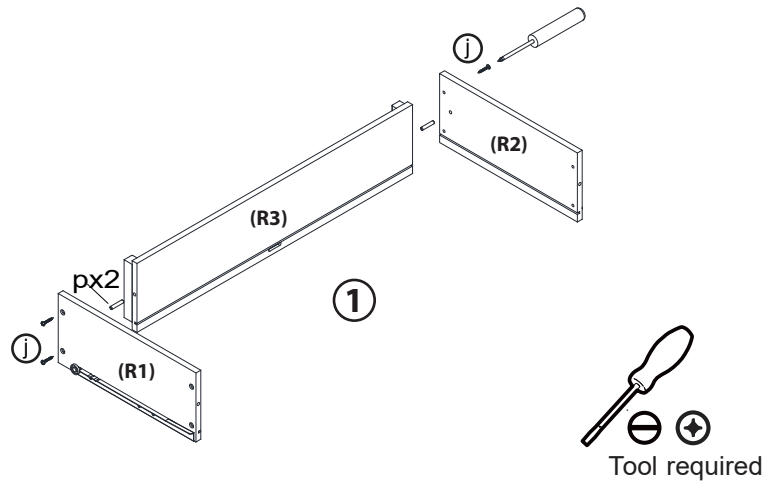

2. Slide Drawer Bottom (R4) and into drawer Bottom Support (R5) assembly. *Figure 2*


3. Secure both sides of Drawer Front (R) to drawer assembly with four (4) Screws (j) . *Figure 3*

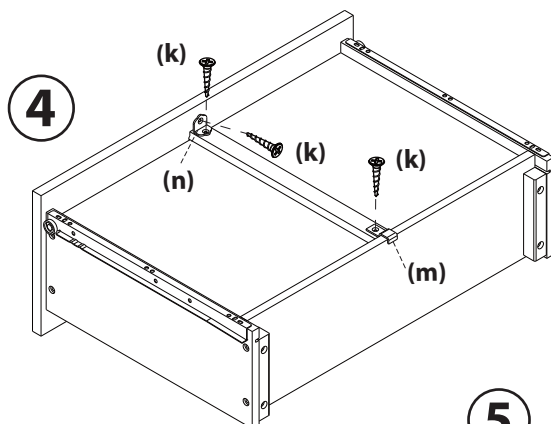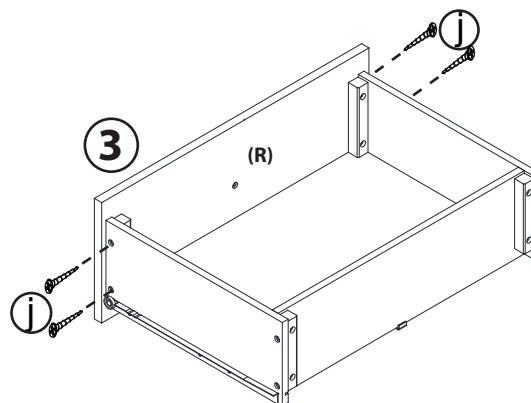

4. Attach Metal Connector A (n) and Metal Connector B (m). *Figure 4*

5. Using Drawer Knob Screw (g), install two (2) Knob (l) on Drawer. *Figure 5.*


**Repeat for all drawers.  
Set drawers aside for later use.**

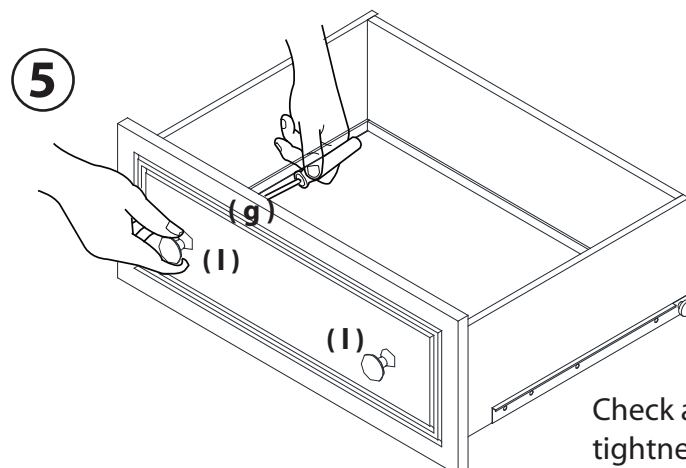


Check all screws for tightness.

## Assembly Steps

- ② Attach Rails to Right Panel (C) as Figure.

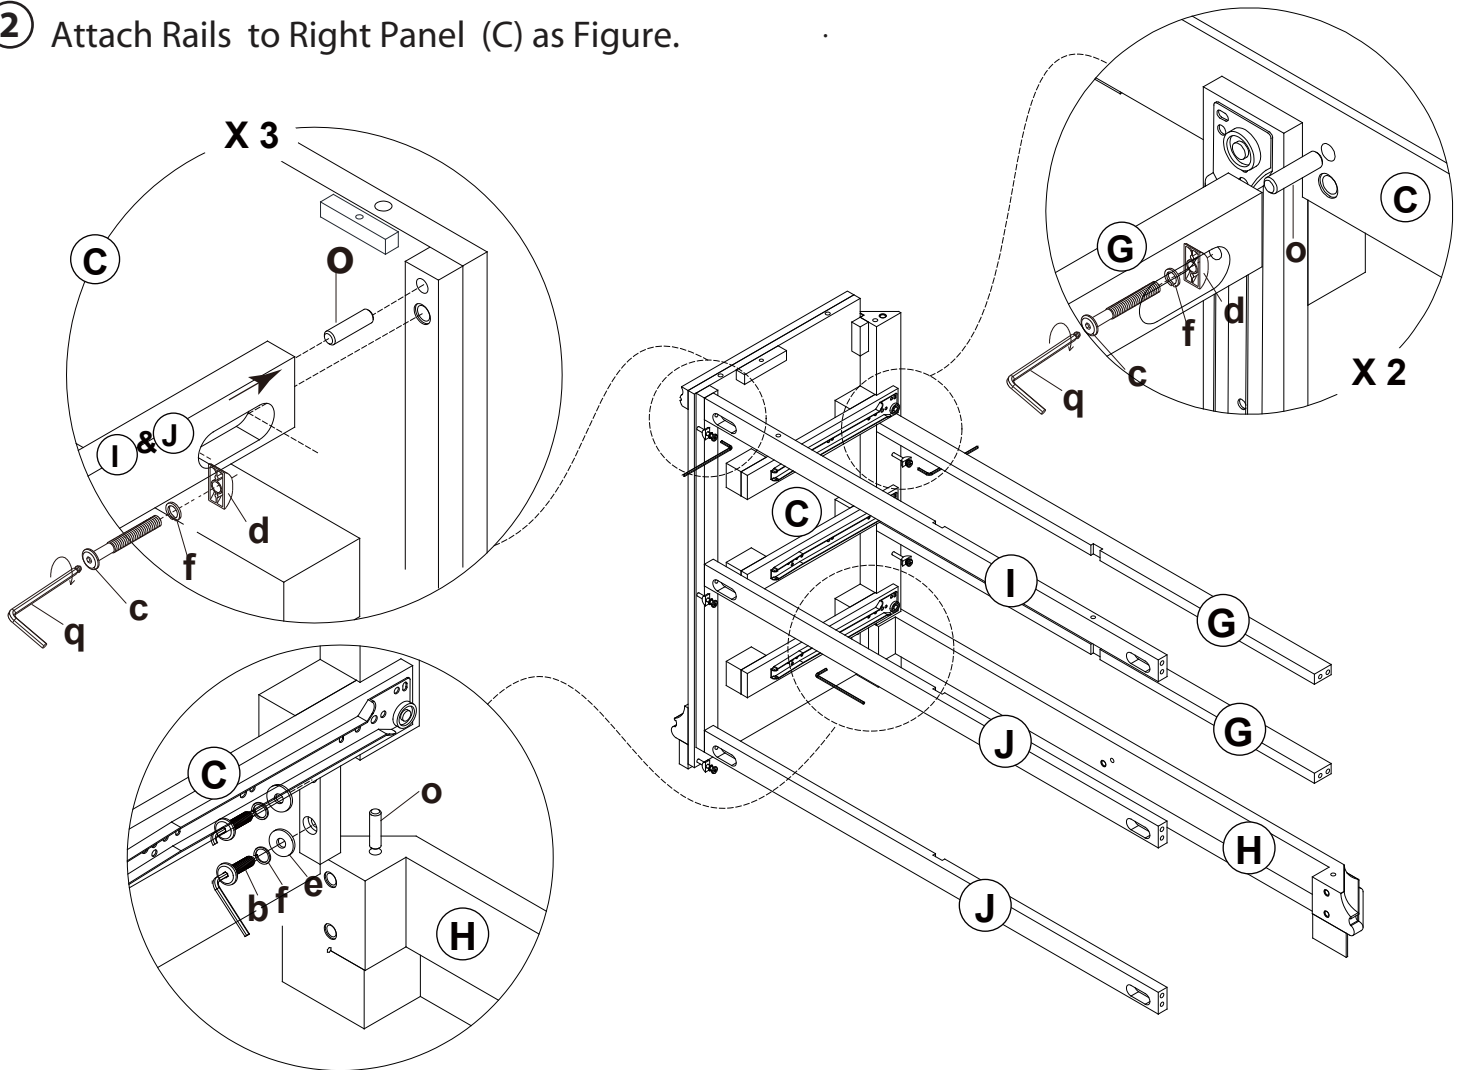


- ③ Attach center leg (E) to Middle panel (B) as Figure.

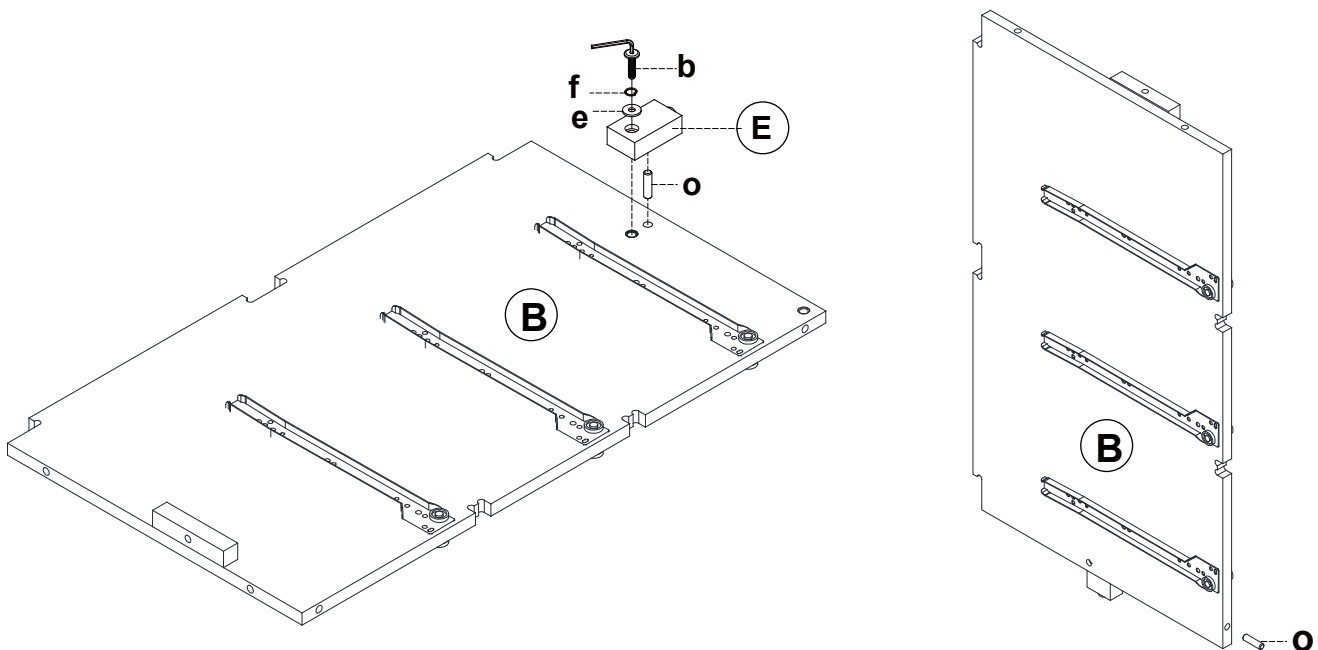


# Primo Double Dresser Assembly

- 4** Assembly the Middle Panel as Figure .

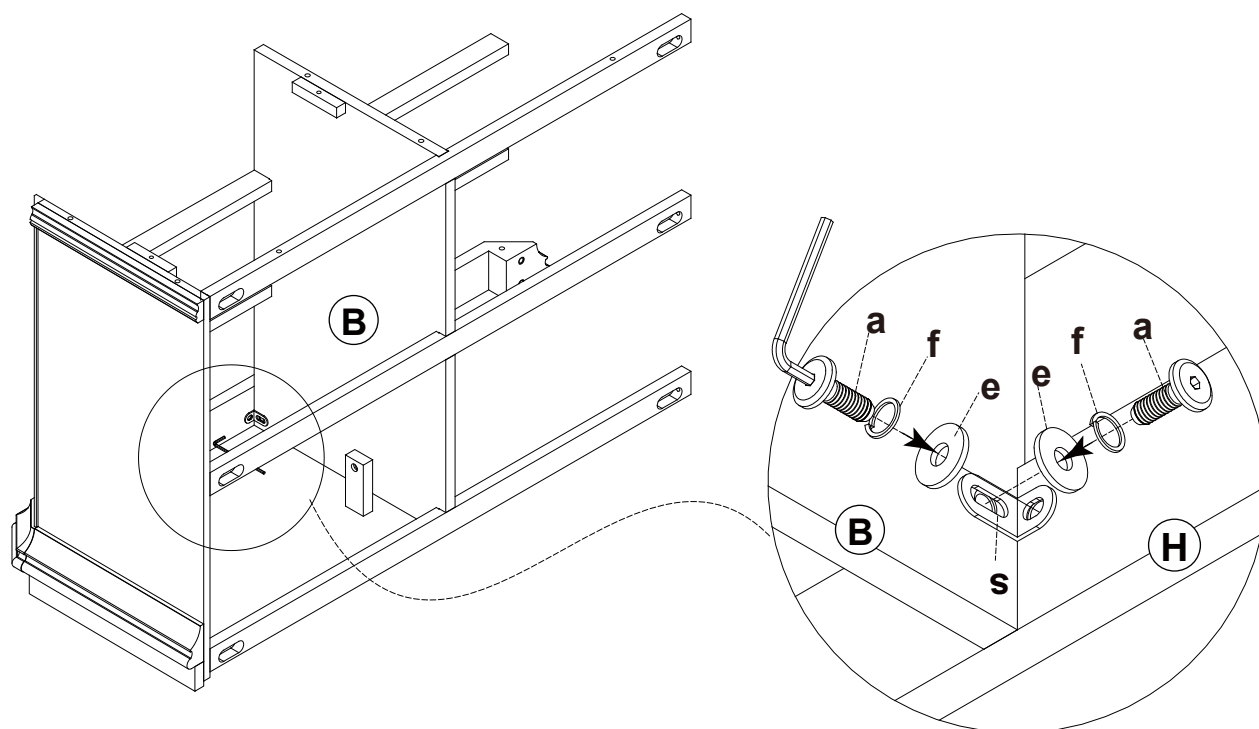


- 5** Assembly Left Panel as Figure .

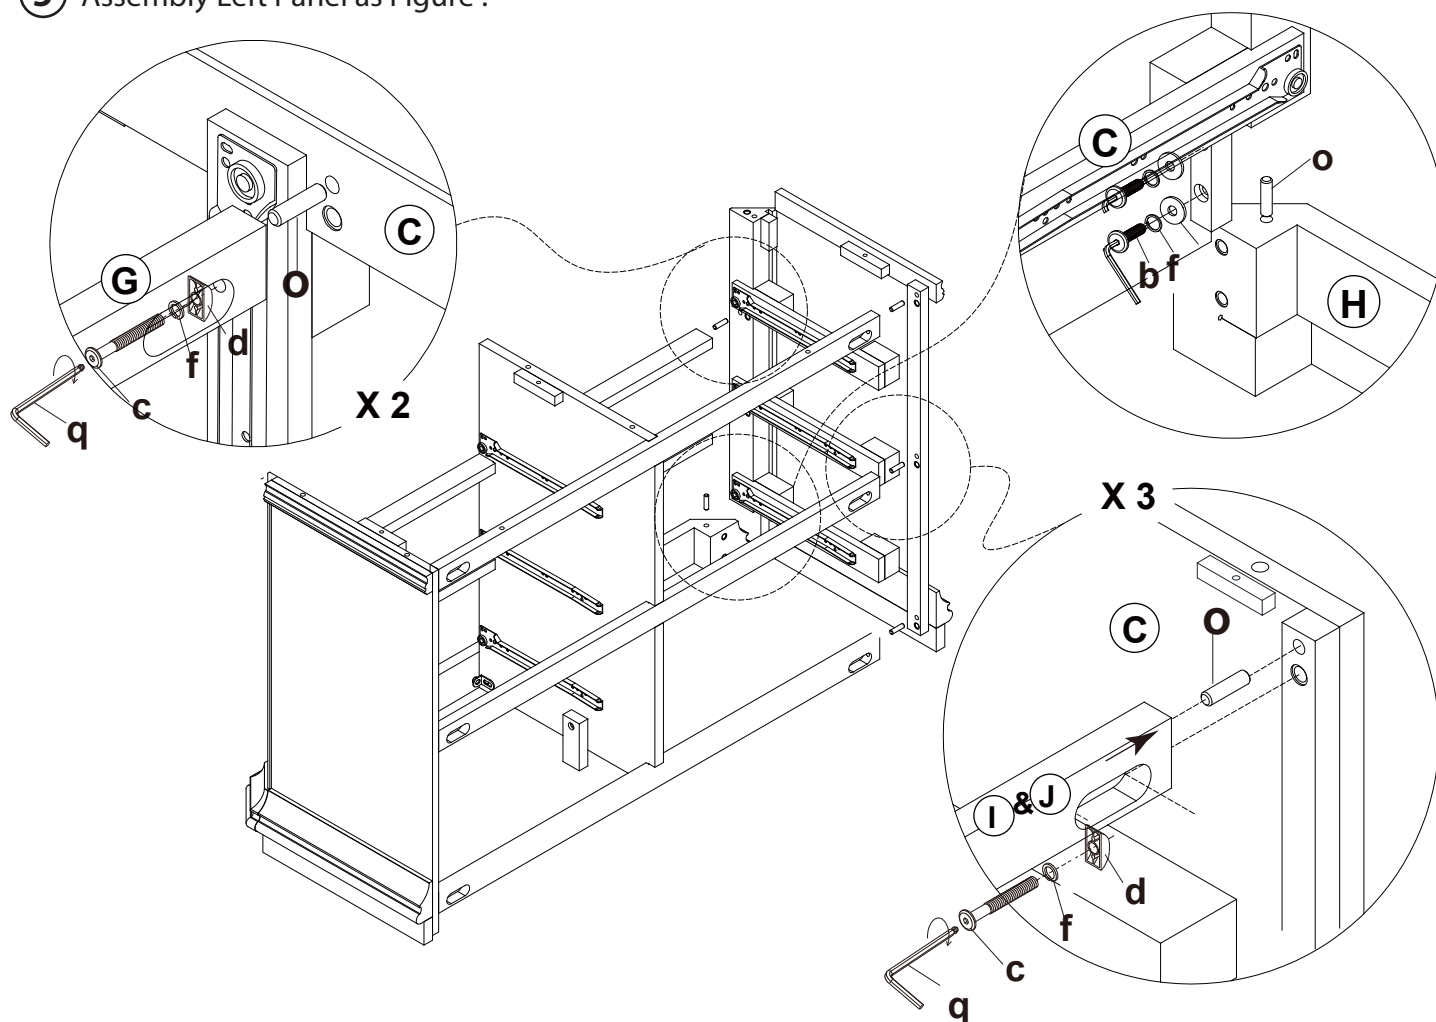


# Assembly Steps

⑥ Attach Front UP Rail as Figure.

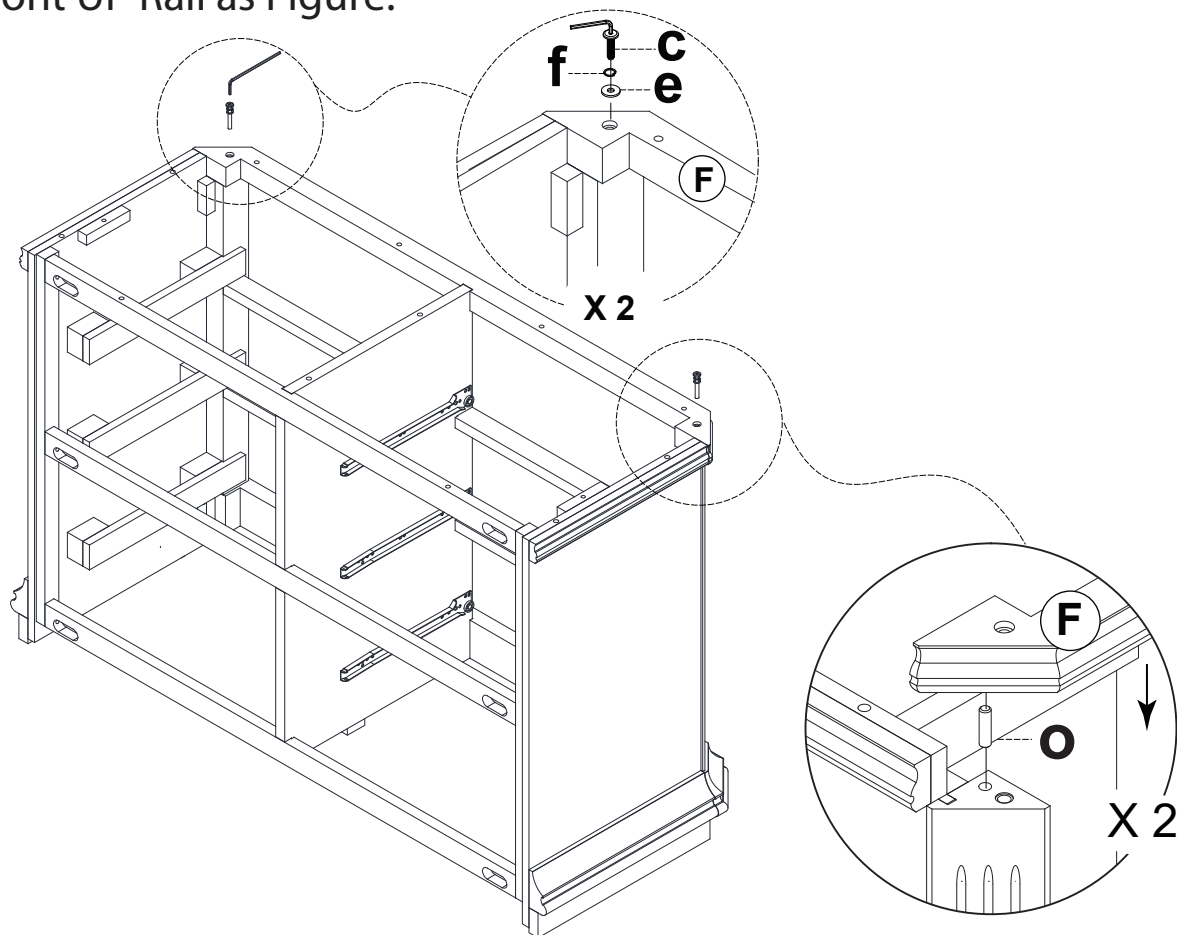

⑦ Assembly Top as Figure.

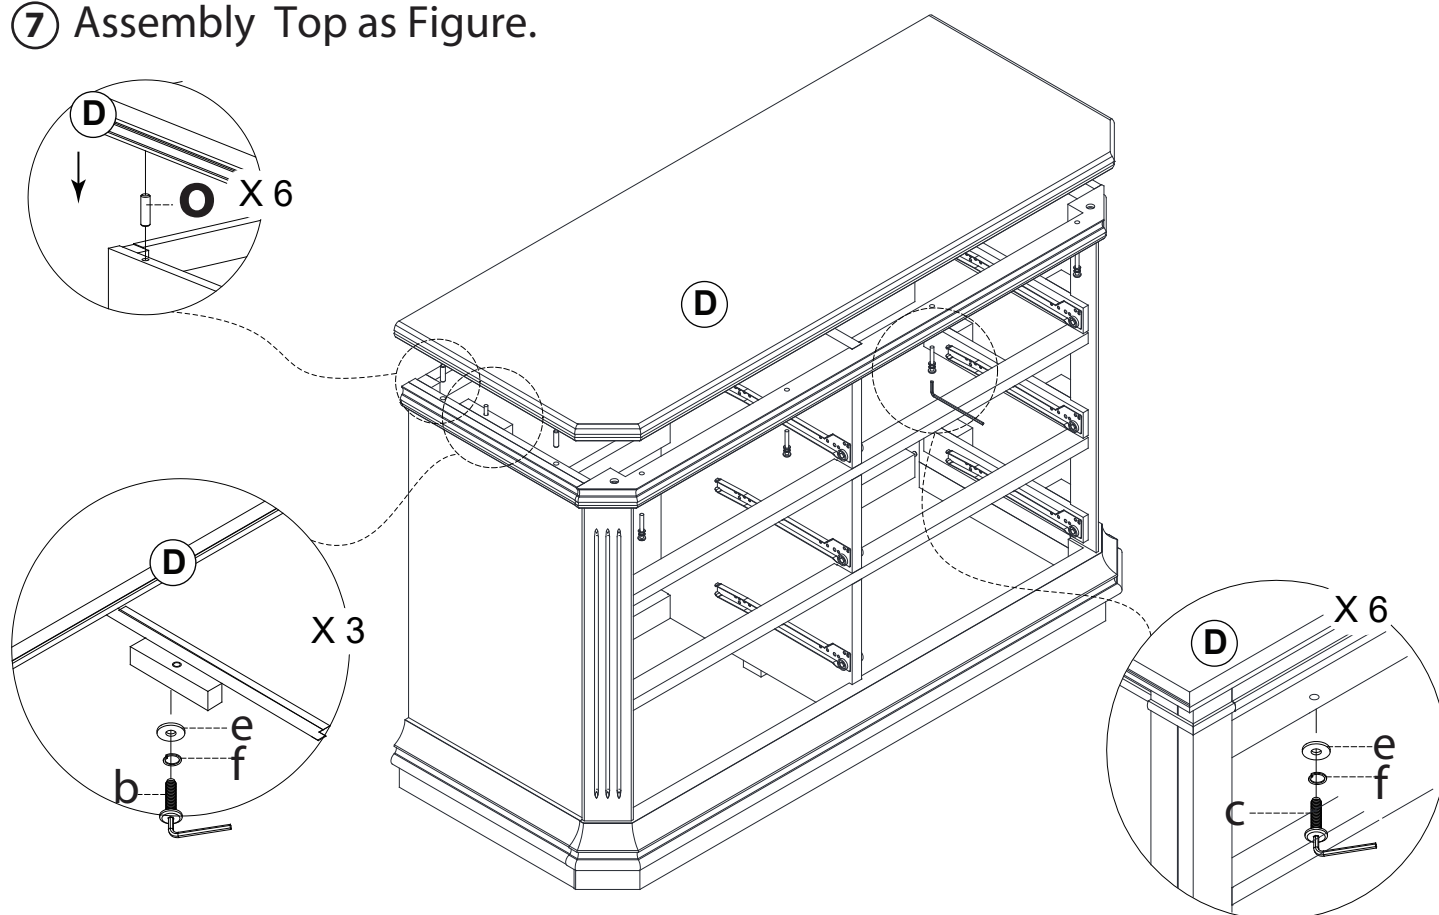

**Assembly Steps**

- ⑧ Back Panel Assembly as Figure.

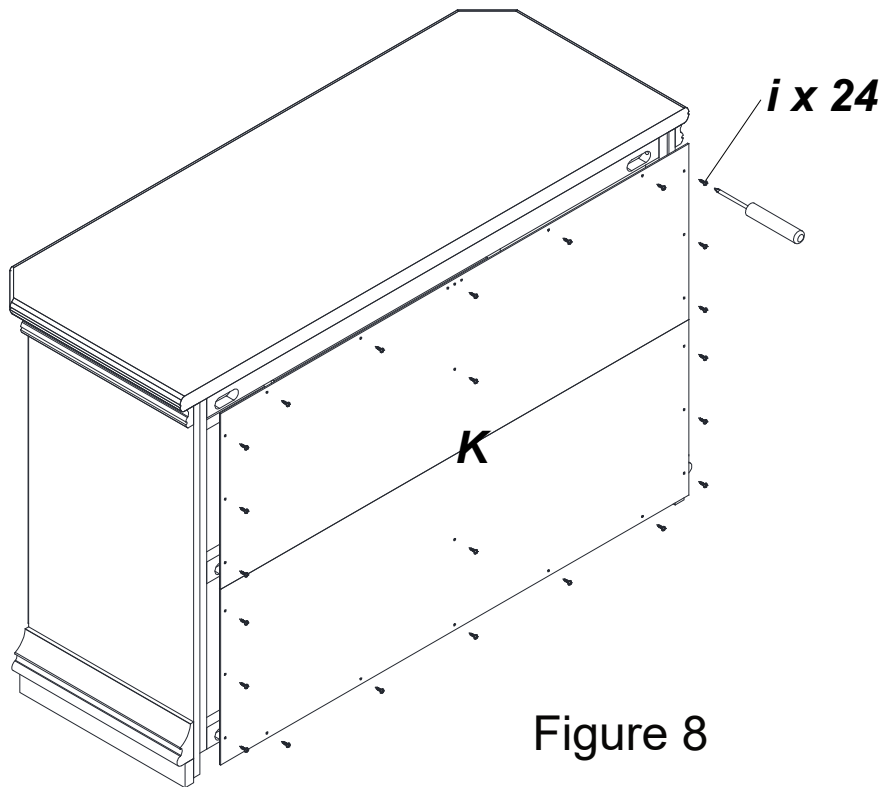


Figure 8

- ⑨ Assembly the drawer as Figure.

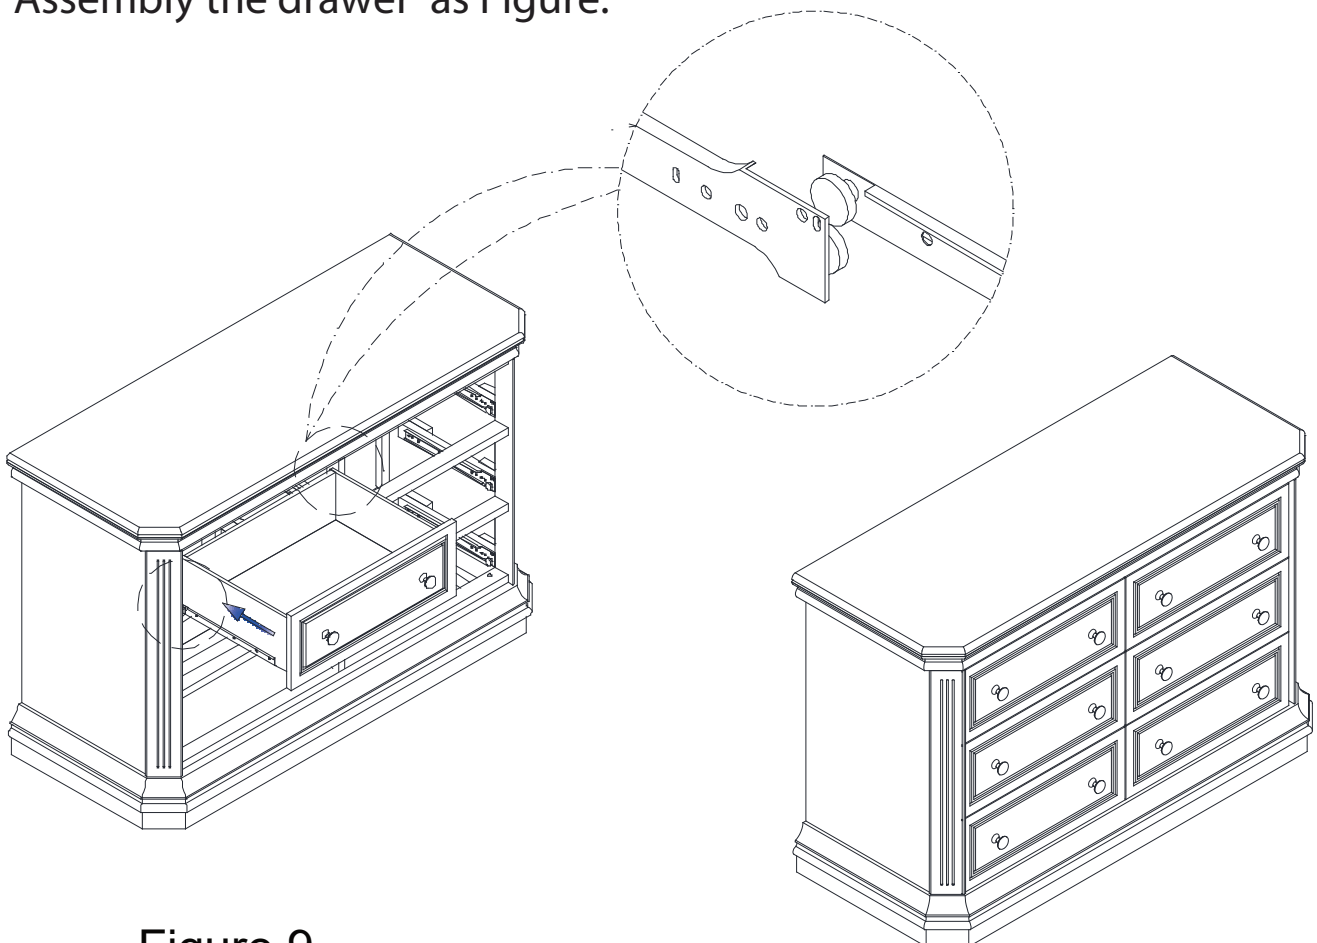


Figure 9