



IMPORTED BY C&T International, Inc. / IMPORTÉ PAR de C&T International, Inc.
105 Stonehurst Ct Northvale, NJ 07647 U.S.A. Tel, 201- 531-1919 Fax, 201- 531-1920

CANADA ADDRESS:

3453, DU PRESIDENT KENNEDY LAC MEGANTIC, QUEBEC, CANADA G6B 2Y4

Website: www.sorellefurniture.com / Site Internet : www.sorellefurniture.com

Emerson Double Dresser


Assembly Instruction




Important Information:

Read all instructions **BEFORE** assembling.
KEEP INSTRUCTIONS FOR FUTURE USE.


Assembly Parts

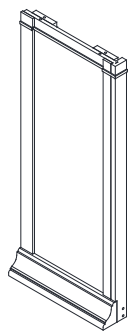


(A) Left Side Panel (x1)

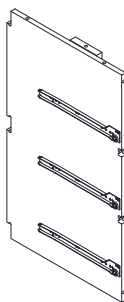


(B) Middle Panel (x1)

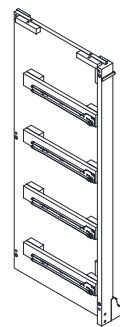


(C) Right Side Panel (x1)

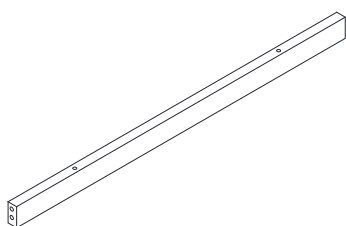


(D) Back-Top Rail (x1)

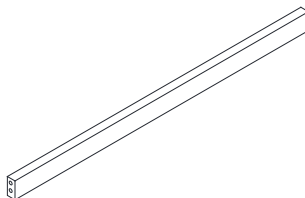


(E) Back- Middle Rail (x2)

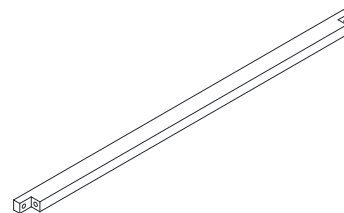


(G) Front - Middle Rail (x2)

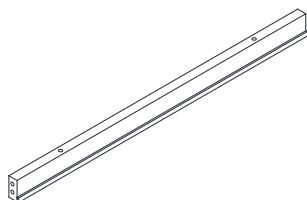


(H) Front Top Rail (x1)

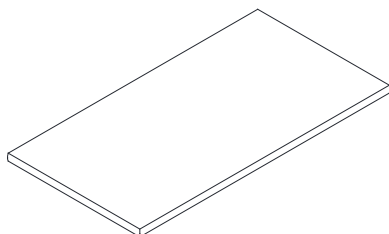


(I) Top Frame (x1)

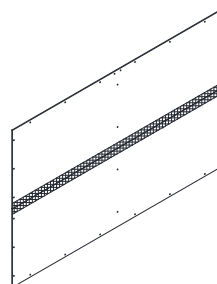


(J) BackPanel (x1)




(K) Center Leg (x1)

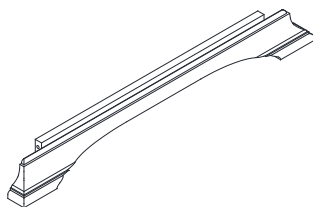


(L) Front- Bottom Rail (x1)

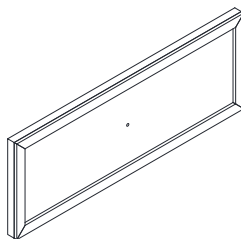


(R) Drawer Front (x6)

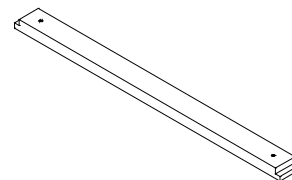


(R5) Drawer Bottom Support (x6)

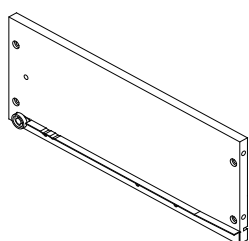


(R1) Drawer Left (x6)

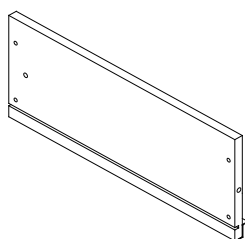

(R2) Drawer Right (x6)

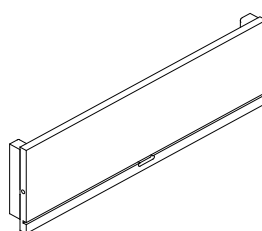


(R3) Drawer Back (x6)

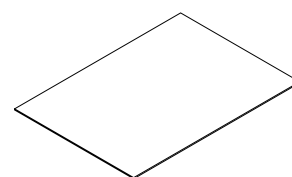


(R4) Drawer Bottom (x6)

Assembly Parts


Hardware list



a (X4)
1/4"*25




b (X10)
1/4"*32




c (X20)
Φ12*6*1.2




d (X30)
Φ11*6*1.5



e (X10)
20*10*8



f (X28)
Φ 8*15




g (X48)
Φ 8*25




h (X18)
Φ 7*12



i (X23)
Φ 8*30

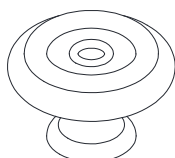


j (X6)




k (X6)
Φ5/32*22




m (X24)
Φ 6*30




n (X14)
1/4"*45

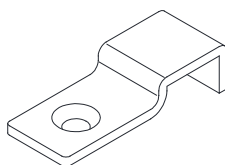


o (X6)
40*15*2

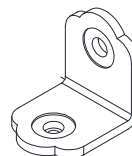


p (X6)
20*18*16




q (X1)
32x21x18x2

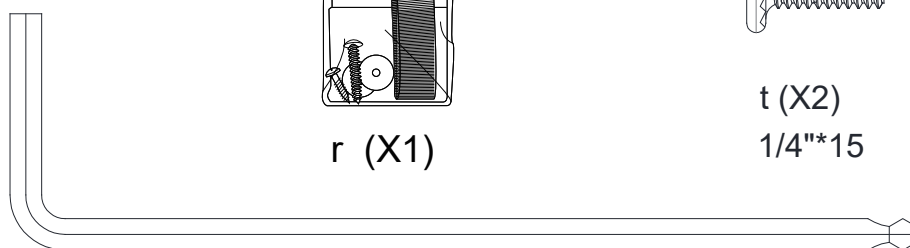


s (X1)
M4x115

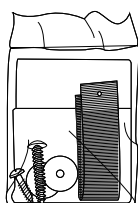

r (X1)



t (X2)
1/4"*15

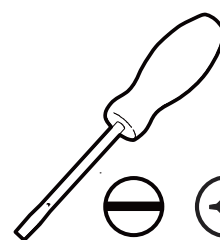


Tool required

-




② Attach Rails to Middle panel (B) as Figure 2.

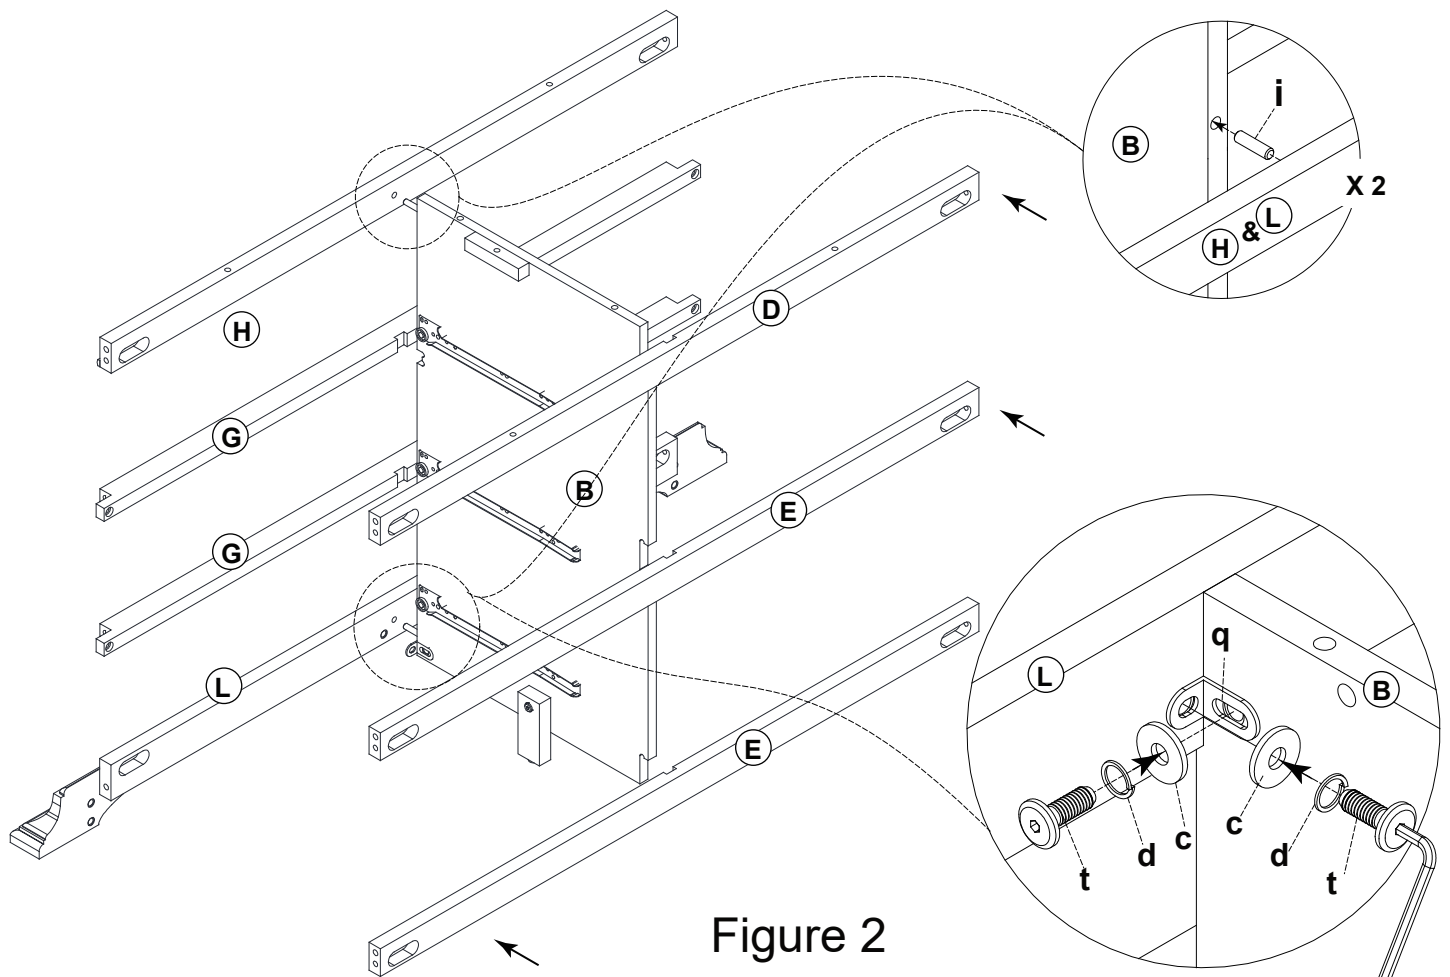


Assembly Steps

- ③ Attach Left side panel and Right side panel to Rails as Figure 3.

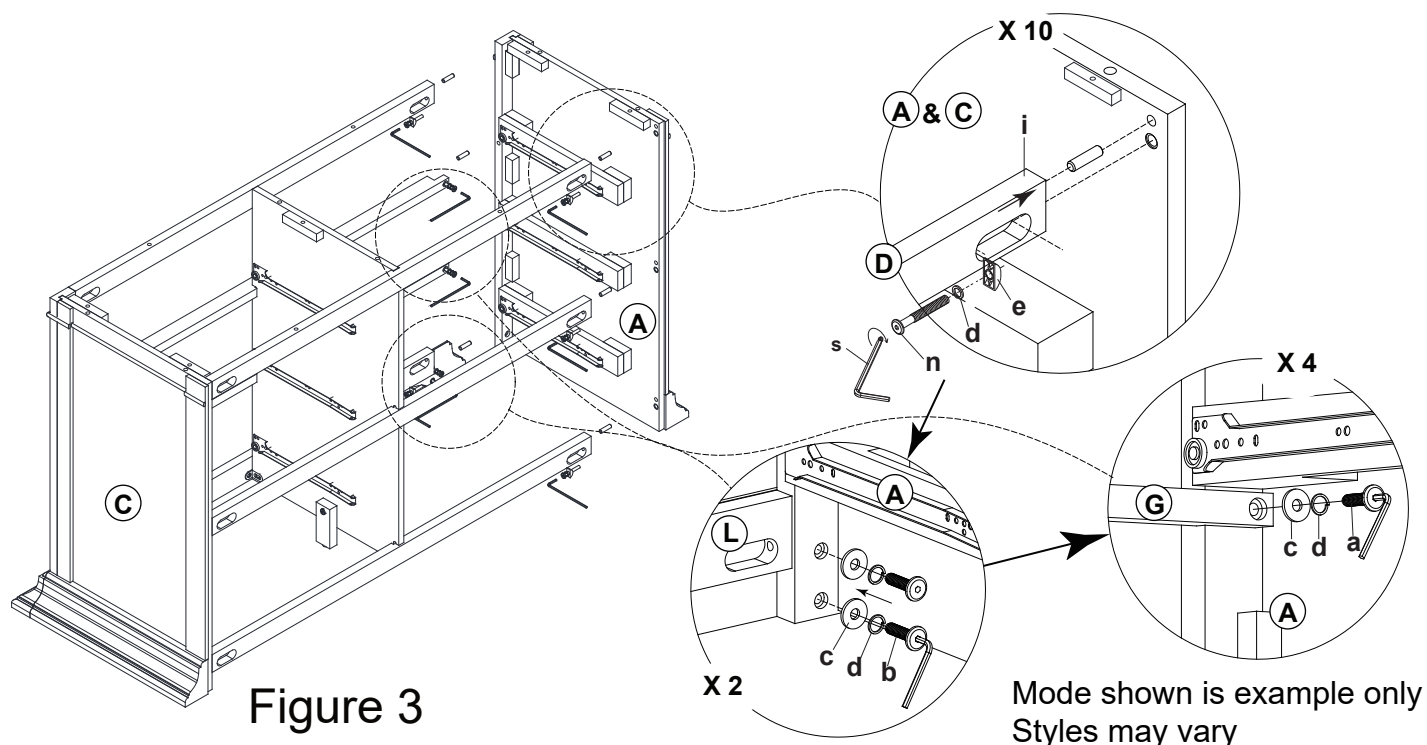

- ④ Attach Top Frame (I) to Dresser.

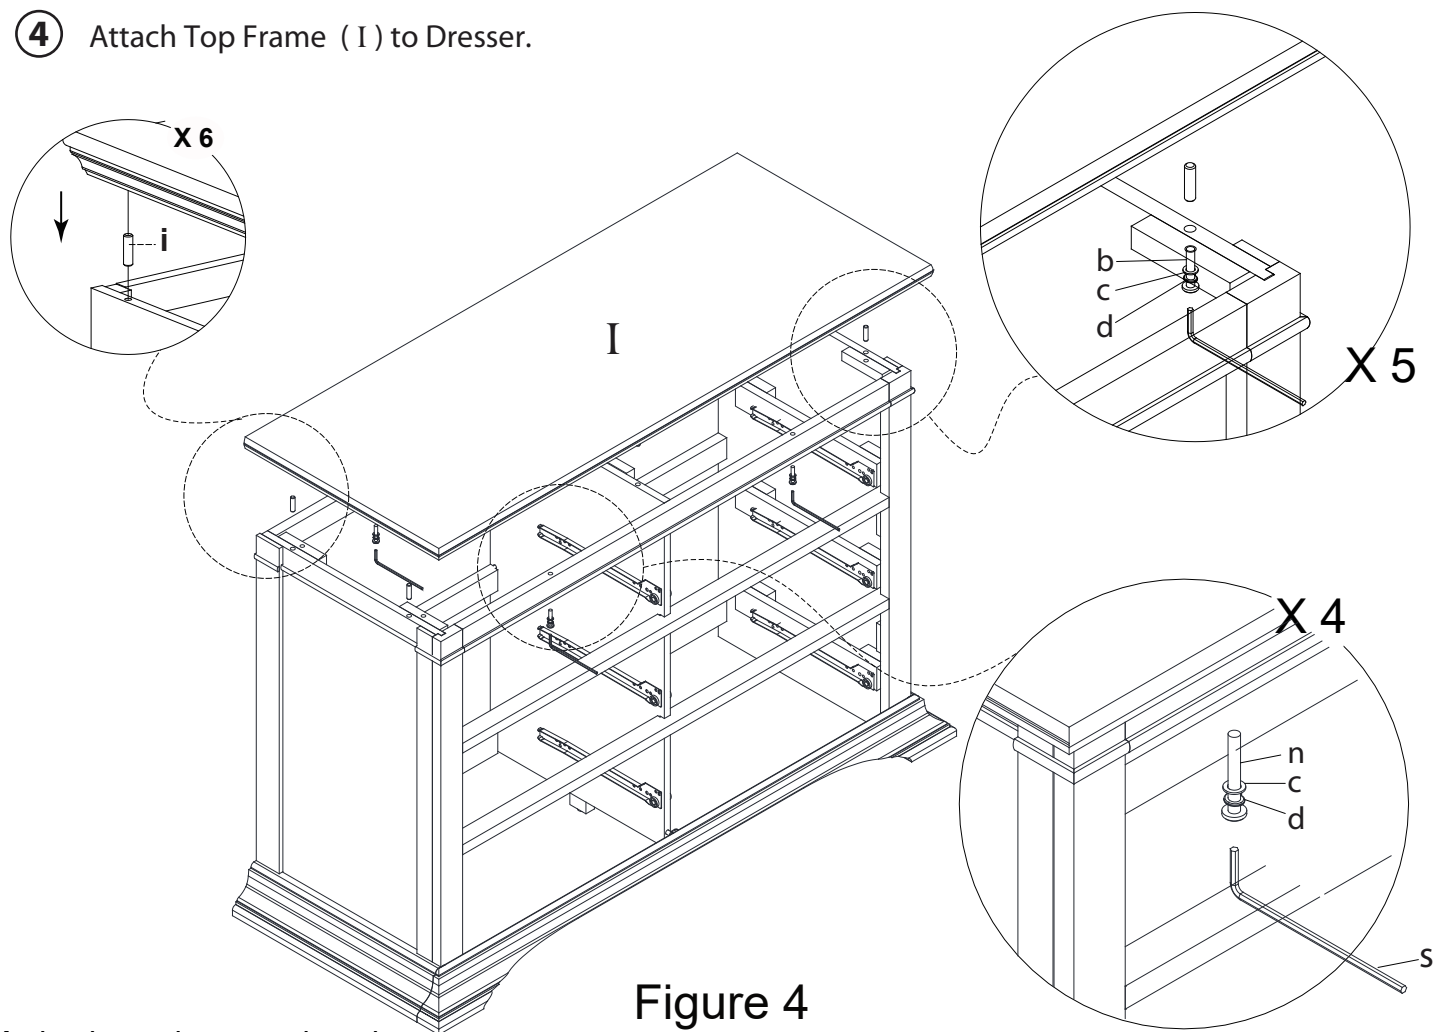

Assembly Steps

- 5 Attach Back- Upper Panel (J) to Dresser as Figure 5.


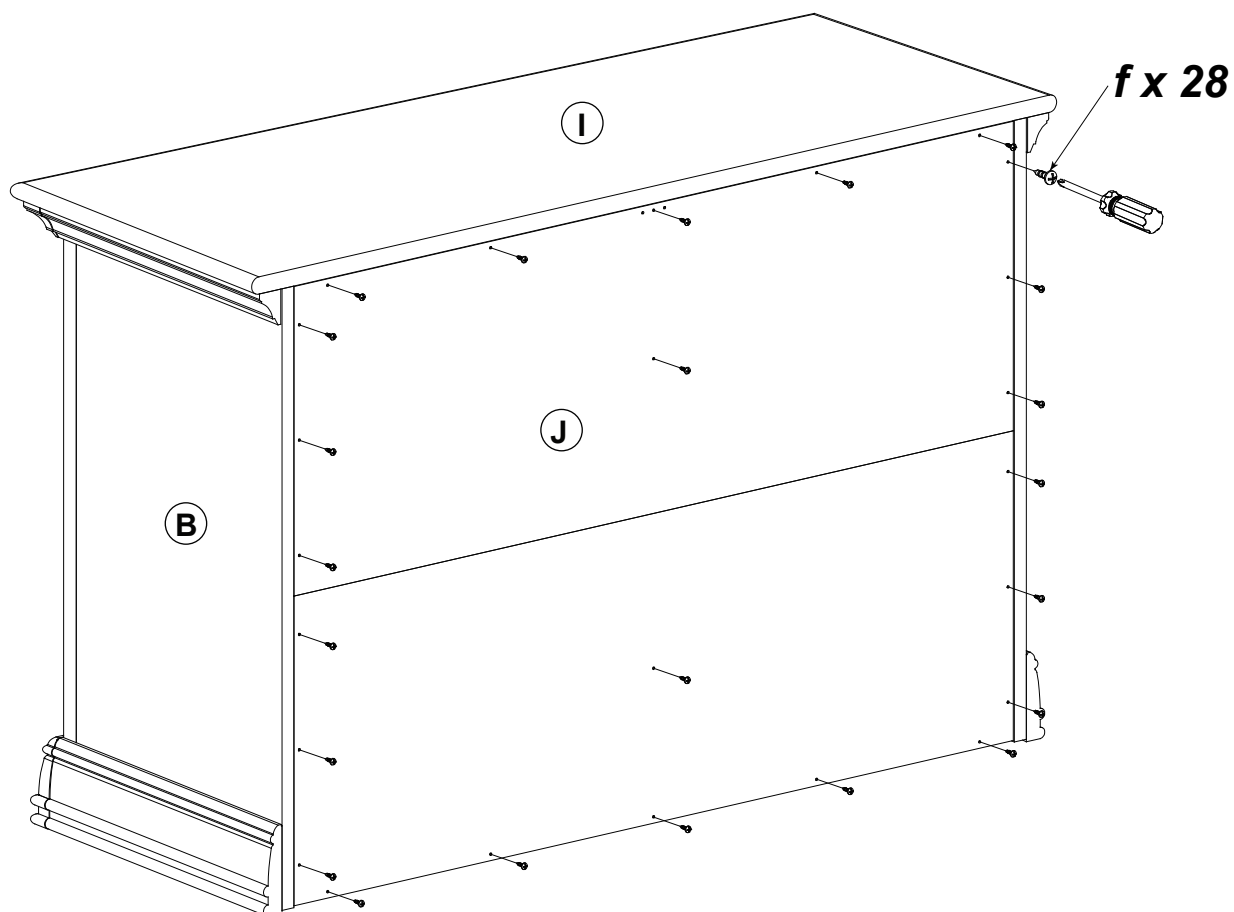


Figure 5


Mode shown is example only
Styles may vary

Drawer Assembly

1. Working on a padded flat surface, attach Drawer Sides (R1&R2) to Drawer Back (R3) with Philips Head Screw(i). *Figure 1*


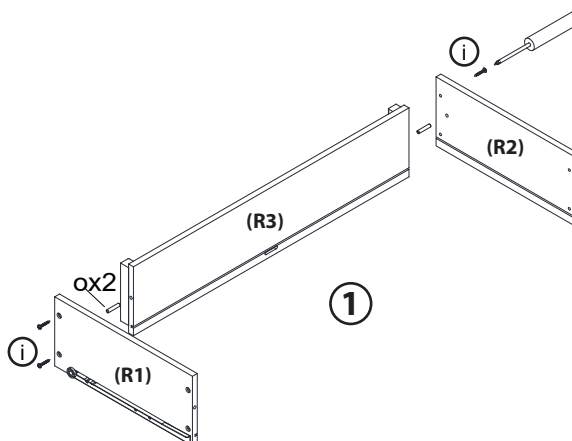


Tool required

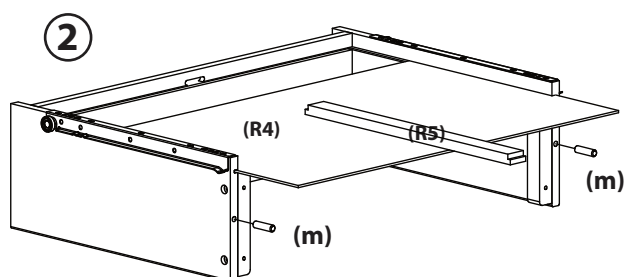


2. Slide Drawer Bottom (R4) and into drawer Bottom Support (R5) assembly. *Figure 2*

3. Secure both sides of Drawer Front (R) to drawer assembly with four (4) Screws (g). *Figure 3*

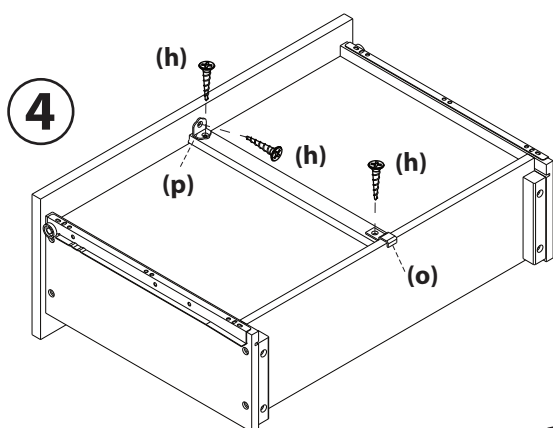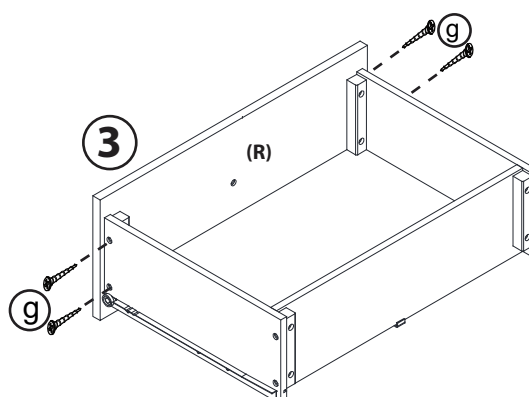

4. Attach Metal Connector A (o) and Metal Connector B (p). *Figure 4*

5. Using Drawer Knob Screw (k), install one (1) Knob (j) on Drawer. *Figure 5.*

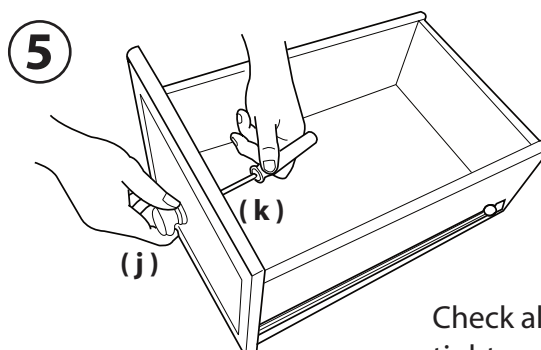

Repeat for all drawers.
Set drawers aside for later use.

Check all screws for tightness.

Mode shown is example only
Styles may vary

Assembly Steps

- ⑥ Assembly the drawer as Figure 6.

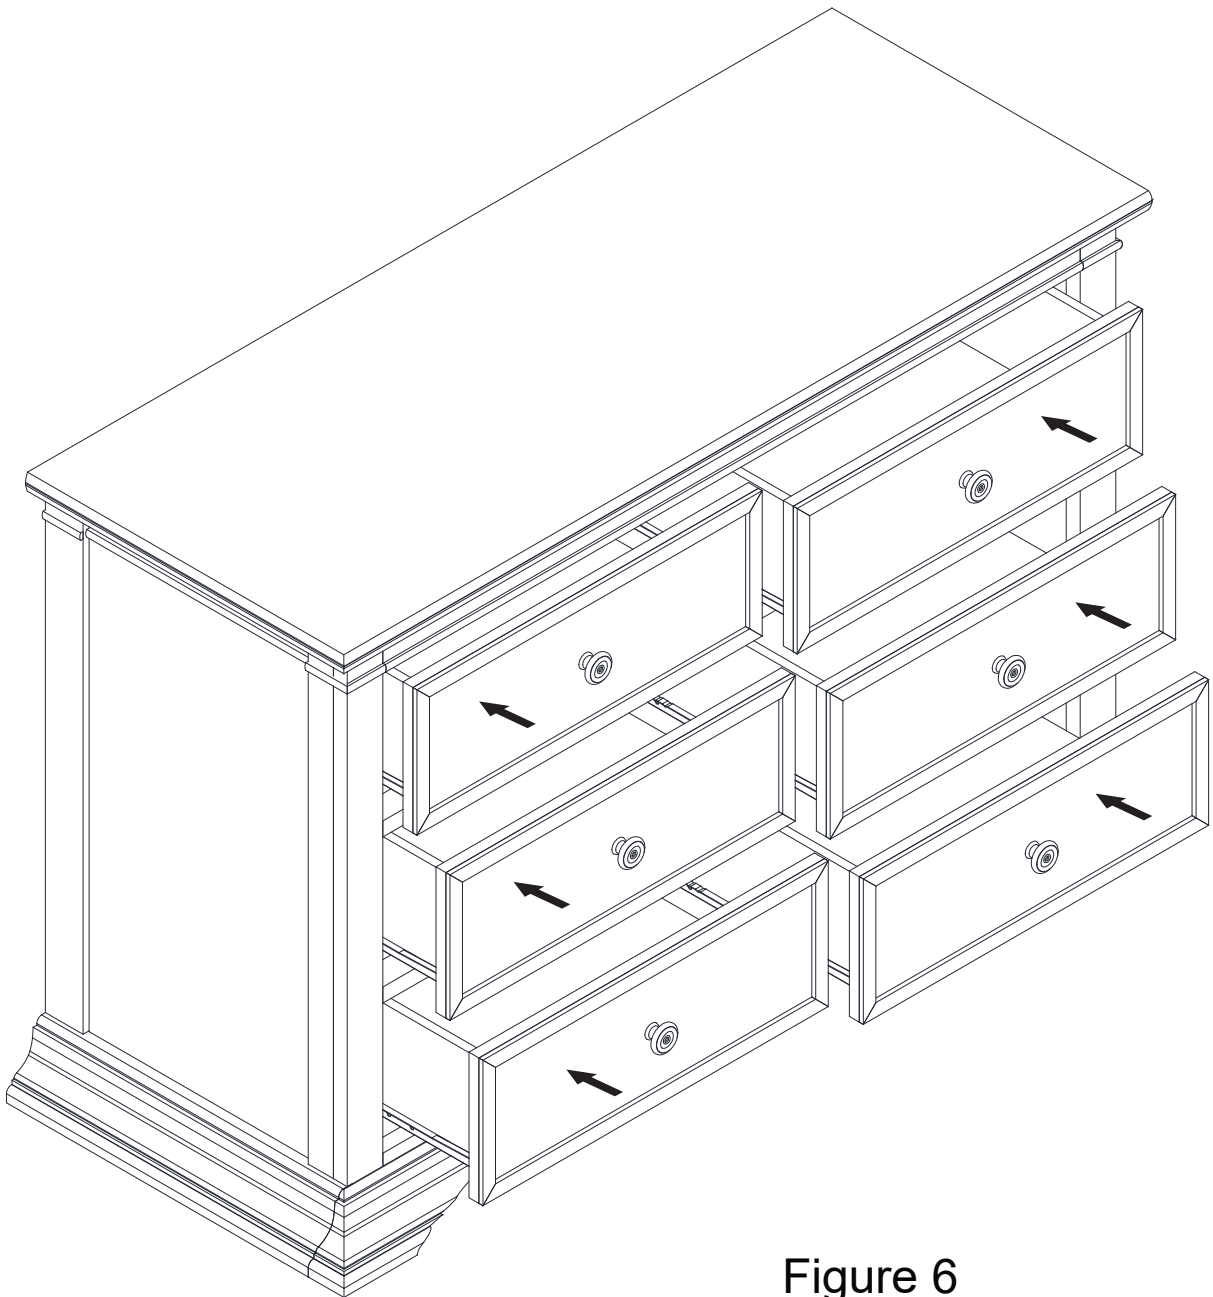


Figure 6